

# Steering Wheel Removal

## 1963-73 PEUGEOT

All Models (1963-73)

### HORN BUTTON & STEERING WHEEL

**Model 403 (1963-67)** — Pry off center cap using a small screwdriver. Mark position of steering wheel on steering shaft. Remove bolts as necessary and remove steering wheel.

**Model 404 (1963-70)** — Remove horn ring cap, horn ring screws and horn ring. Remove steering wheel nut and using a suitable steering wheel puller, remove steering wheel.

**Model 504 (1970-73)** — Remove central security plate. Remove steering wheel nut and washer, mark position of steering wheel on steering shaft. Using a suitable steering wheel puller, remove steering wheel.

**Model 304 (1971-72)** — Remove central safety plate. Remove steering wheel nut and washer and using a suitable steering wheel puller, remove steering wheel.

### TURN SIGNAL SWITCH

All Models (1963-73) — Turn signal switch is mounted on right side of steering column under steering wheel.


## 1963-73 PORSCHE

All Models (1963-73)

### STEERING WHEEL & HORN BUTTON

**Removal** — Align front wheels in straight ahead position. Disconnect battery. Rotate horn ring counterclockwise and remove. Pull out contact finger. Loosen steering wheel retaining nut. Mark relative position of wheel to shaft and remove wheel, support ring and compression spring.

**Installation** — To install, reverse removal procedure, noting the following: Lightly lubricate contact finger before replacing (use electrical contact grease).

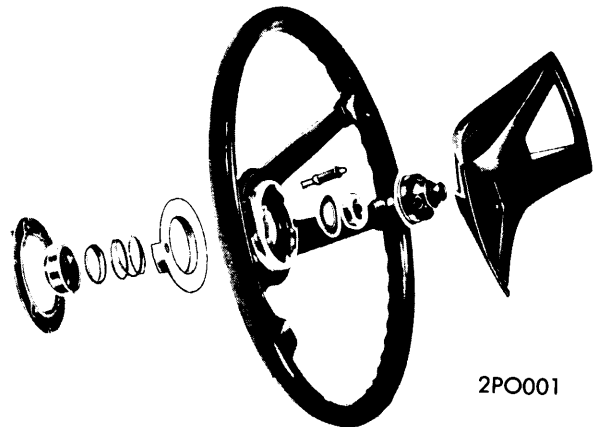

2PO01

STEERING WHEEL DISASSEMBLED

## 1963-73 RENAULT


All Models (1963-73)

### STEERING WHEEL

Remove horn button (center emblem), unscrew steering wheel retaining nut, then pull steering wheel from shaft, using suitable extractor (Dir. 21). When installing wheel, set front wheels in straight ahead position and place steering wheel on shaft with spokes horizontal. Torque steering wheel nut.

### TURN SIGNAL & LIGHTING SWITCH

After removing steering wheel, unscrew and separate column cover. Disconnect return spring on flasher switch. Mark position of electrical connections to switch, then detach wiring. Disconnect return spring on turn signal switch. Remove lighting switch securing bolts and remove it from column.

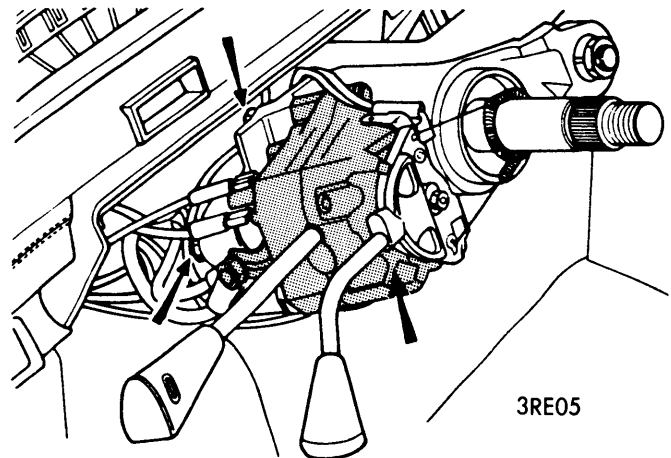

3RE05

TURN SIGNAL & LIGHTING SWITCH ASSEMBLY