

Wheel Alignment

1970-73 CAPRI SPECIFICATIONS & ADJUSTMENTS

TIRE INFLATION (COLD)

Before attempting to check or adjust wheel alignment, ensure that tires are properly inflated. Refer to manufacturers specifications located on right hand sun visor.

CASTER

All Models – Caster is nonadjustable. If not within specifications, check front suspension for damage. Repair or replace parts as necessary.

CAMBER

All Models – Camber is nonadjustable. If not within specifications, check front suspension for damage. Repair or replace parts as necessary.

TOE-IN

All Models – Position wheels in straight ahead position and loosen tie rod end lock nut and clips securing bellows. To adjust toe-in, rotate tie rods until specifications are within limits. Tighten lock nuts and secure clips. Tie rods lengths should be equal within 1/4".

WHEEL ALIGNMENT SPECIFICATIONS						
R – Right F – Front Rr – Rear L – Left Man – Manual Steering Pwr – Power Steering	Steering Axis Inclin.	Caster (Degrees)	Camber (Degrees)	Toe-In (Inches)	Toe-Out On Turns	
					Inner	Outer
Capri	8°±30'	1°±30'	0±30'	0 to 1/4	20°	19°±30'