

10-4 Steering Wheel & Column Switches

CAPRI

Capri

STEERING WHEEL


Removal — Align wheels in straight-ahead position. Remove two screws securing steering column shroud and detach both halves. Pry out steering wheel center emblem. Unscrew steering wheel nut. Note alignment marks on wheel and shaft. Pull off steering wheel, using hand pressure only.

Installation — To install, reverse removal procedure, noting the following: Realign positioning marks of steering wheel and shaft. Ensure turn signal cancelling cam is engaged in groove on underside of steering wheel.

TURN SIGNAL & IGNITION SWITCHES

Removal — Disconnect battery. Remove steering wheel as outlined above. Lift out turn signal cancelling cam and spring. Detach turn signal and ignition switch wiring at their respective connectors. Remove harness strap and turn signal switch assembly.

Installation — To install, reverse removal procedure, making note of special items listed for steering wheel installation.

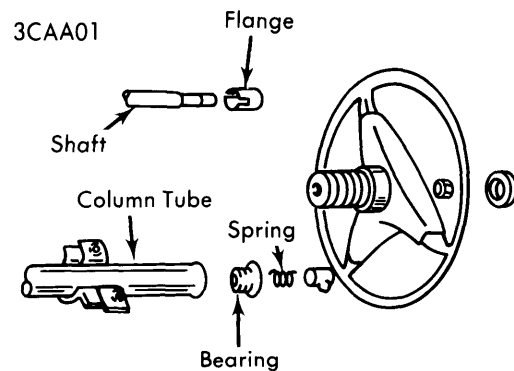

CAPRI STEERING WHEEL COMPONENTS

COLT

Dodge Colt

HORN BUTTON & STEERING WHEEL

Pry off horn pad. Mark relative position of steering wheel on the shaft for reassembly reference. Remove steering wheel nut, then use a suitable puller (CT-1126 with standard steering wheel; DT-1001 with sports type steering wheel) to detach the wheel. **CAUTION** — Do not use force to remove the wheel.

COMBINATION SWITCH


To remove the combination turn signal, wiper/washer, dimmer, and hazard warning switch assembly, proceed as follows: Remove steering wheel as outlined, then tilt steering wheel to its lowest position. Remove the combination switch and column cover. Disconnect wiring from the column switch and withdraw the column switch assembly.

COURIER

Ford Courier

STEERING WHEEL, HORN BUTTON, TURN SIGNAL SWITCH

Disconnect battery ground cable. Remove horn button by turning counterclockwise. Remove contact spring. Mark relative position of steering wheel to shaft. Remove steering wheel nut, then pull wheel from shaft. Remove cancelling cam and snap ring. Disconnect combination turn signal/dimmer switch wires. To install, reverse removal procedure.

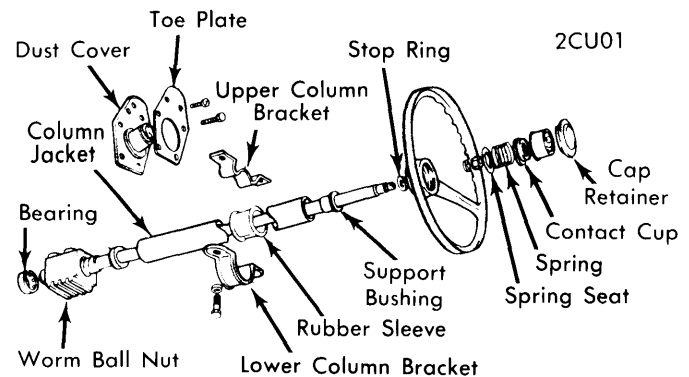

COURIER STEERING WHEEL & COLUMN