

Steering Columns

HONDA

Civic


REMOVAL, OVERHAUL & INSTALLATION

Removal & Disassembly – 1) Disconnect steering joint at splines by removing yoke bolts. Detach wire harness and coupler. Remove four attaching bolts (remove two upper bolts first) and take steering column out of vehicle.

2) Remove steering shaft from column by pulling out from bottom. Lower bushing will be pushed out when shaft is removed.

ed. Remove upper and lower steering column covers. Loosen screw on turn signal switch cam nut and lightly tap screw head to free cam nut; remove turn signal switch. Remove upper column bushing.

Assembly & Installation – To assemble steering column, reverse above procedure, noting the following: When installing turn signal switch, engage locating tab on switch with notch in steering column. Upper bushing should be installed with flat side facing upper end of column. If cam nut has been removed, be sure to install it with small end up.

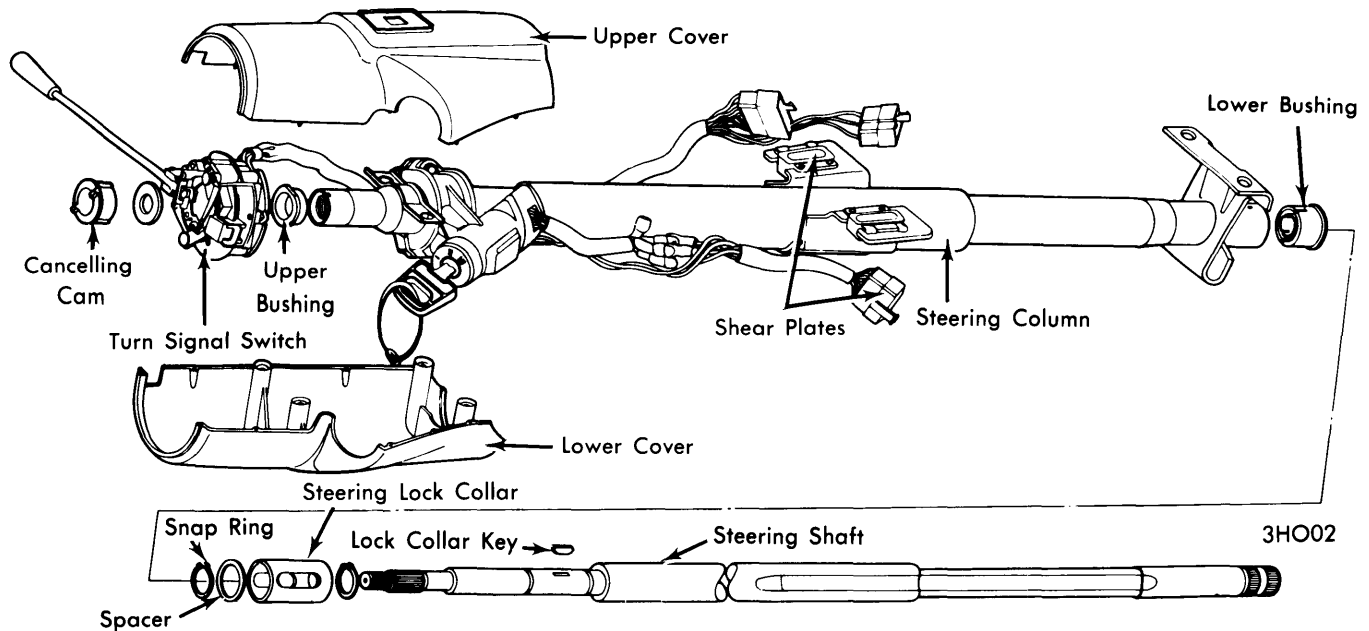

HONDA STEERING COLUMN COMPONENTS