

HONDA

Civic
Civic CVCC
Accord

REMOVAL & INSTALLATION

HORN PAD & STEERING WHEEL

1) Pry off steering wheel horn pad. With front wheels in straight-ahead position, mark position of steering wheel to shaft then remove steering wheel retaining nut.

2) Steering wheel may then be pulled from shaft, using a puller tool or by hitting with hand on backside of wheel.

CAUTION Do not apply a heavy hitting force or the shear pins within the column may be damaged.

3) Steering wheel components may then be disassembled and replaced if necessary (see appropriate exploded view illustration).

TURN SIGNAL, WIPER/WASHER, DIMMER

Removal — Remove steering pad. Remove column shrouding. Disconnect electrical connectors. Remove steering wheel. On Civic models, loosen lock screw and tap on screw head to free locking component. On all models, remove remaining mounting screw and lift out switches. Washer/Wiper switch can now be separated from turn signal switch. Do not drop out or lose turn signal cancel cam key when lifting out switches.

Installation — To install switches, reverse removal procedure and note: Insert the lug on the turn signal switch assembly into recess in steering column. On Civic models only, make sure lock component fits squarely into its recess along column. Make sure turn signal cancel key 2 lugs fit into recess in steering wheel. Make sure horn switch spring terminal contacts steering wheel contact ring.

HAZARD SWITCH

Switch is located in the top column shrouding. Remove top shrouding, disconnect electrical wires and remove switch from mounted position.

NOTE — Accord models also have an indicator light switch located in the upper column shrouding. The switch, when depressed, will allow all indicator lights to function. Procedures for Hazard switch apply.

STEERING LOCK & IGNITION SWITCH

Removal — Remove steering column upper and lower shrouding. Disconnect ignition switch electrical wiring at lower end of steering column. Center punch shear bolts. Drill out shear head bolts and extract from lock bracket. Remove ignition switch.

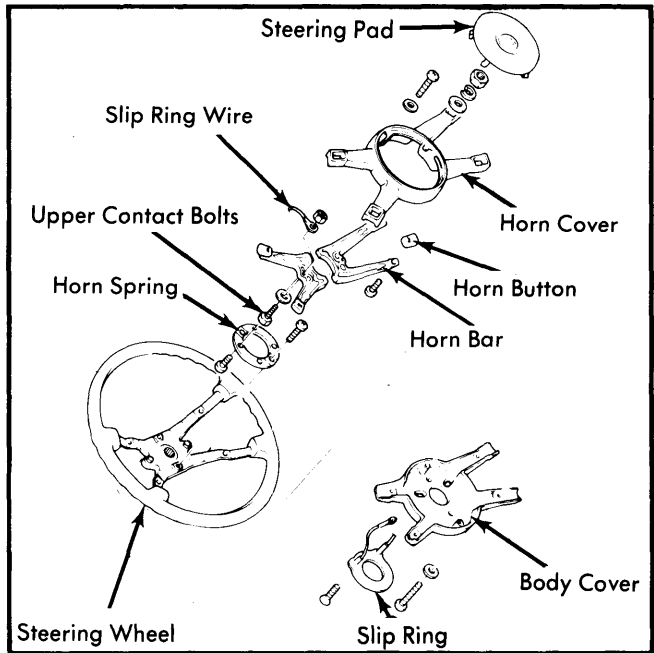


Fig. 2 Exploded View of Accord Steering Wheel and Related Components

Installation — Insert new ignition switch. Hand tighten new shear bolts. Check switch operation at this time. Tighten shear bolts. Reconnect switch electrical leads.

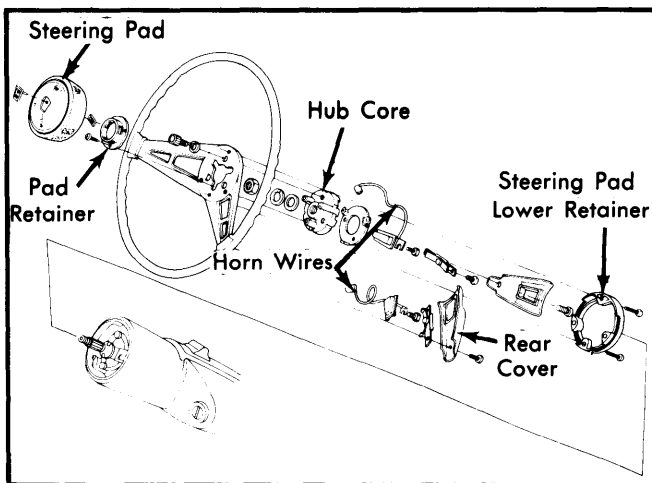


Fig. 1 Exploded View of Civic Steering Wheel and Related Components

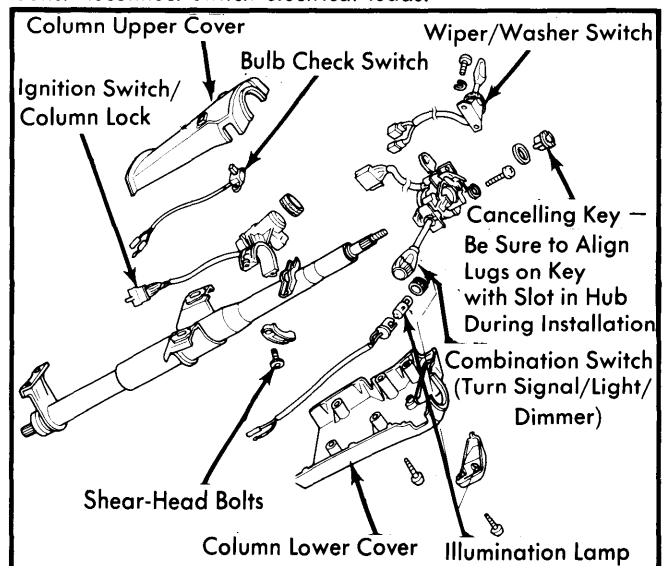


Fig. 3 Disassembled View of Upper Column Components - Accord Shown; Others Similar