

## DATSUN PICKUP

### Pickup

### DESCRIPTION


The steering column is a conventional, non-collapsible type. It is supported under the instrument panel by a post clamp. The lower end of the steering column tube is bolted directly to the gear box. The worm assembly, within the gear housing, is an integral extension of the steering shaft.

### REMOVAL & INSTALLATION

Since the worm gear is an integral, non-separable part of the steering shaft, the shaft must be removed as an assembly with the gear. See *appropriate article under STEERING GEARS & LINKAGE* in this section.

### OVERHAUL

Replacement of bearings or bushings may be accomplished during steering gear overhaul. See *appropriate article under STEERING GEARS & LINKAGE* in this section.

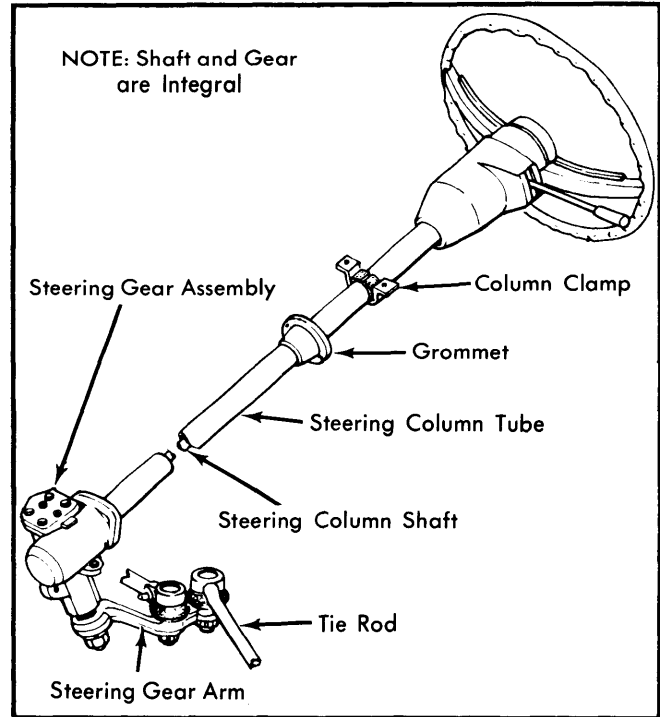

**Fig. 1 Steering Column and Gear Assembly for Datsun Pickup**