

OPEL RACK & PINION

All Models

DESCRIPTION

Steering gear is a rack and pinion type. Gear housing is held to crossmember by rubber bushing and clamps. Pinion shaft is seated in upper portion of gear housing and is supported by a needle bearing in upper housing and a bushing in lower housing. Pinion is not adjustable. Rack and pinion are held in mesh by a thrust spring and shell.

ADJUSTMENT

STEERING GEAR BACKLASH

Set gear to high point by positioning front wheels straight-ahead. Flexible coupling bolt holes will be positioned parallel to the rack. Thread adjusting screw into gear housing until a resistance is felt. Back off screw $\frac{1}{8}$ - $\frac{1}{4}$ turn. Tighten lock nut. Fill area under pinion shaft rubber boot with gear lubricant and slide boot into position.

REMOVAL & INSTALLATION

STEERING GEAR

Removal — Remove splash shield from lower deflector panel and both side members. Remove clamp bolt securing flexible coupling to steering shaft. Detach tie rods from steering arms. Unbolt, then remove gear assembly and tie rods from vehicle.

NOTE — If fasteners or attaching parts are replaced, it is imperative that ones of equivalent grade are used.

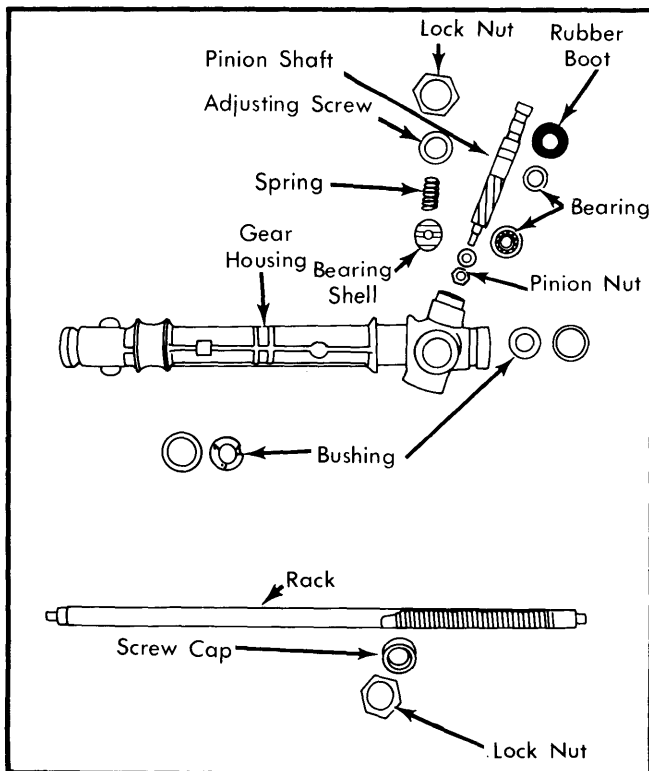


Fig. 1 Exploded View of Opel Steering Gear Assembly

Installation — To install, reverse removal procedure, noting the following: First set gear and steering wheel in center positions, and ensure slot of lower steering mast matches bolt hole of flexible coupling pinion flange.

OVERHAUL

STEERING GEAR

Disassembly — 1) Clamp gear assembly in padded vise. Disconnect tie rod ends from axial joints (at lock nuts). Unclamp and remove bellows. Ball joint is maintenance-free and must be replaced if damaged.

2) Disconnect ball stud of axial joint from rack. Hold rack securely while removing, or rack teeth may be damaged. If axial joint is damaged, it must be replaced.

3) Loosen adjusting screw lock nut, remove adjusting screw; withdraw thrust spring and bearing. Remove sheet metal cap from gear housing and remove hex nut from pinion. Do not turn pinion in end position. Pull pinion and rack from housing.

Assembly — 1) With gear housing in padded vise, coat all parts with multi-purpose grease. Fill long part of housing with about $1\frac{1}{4}$ oz. lubricant.

2) Insert long, smooth end of rack into short end of housing until rack ends protrude evenly from housing. Ensure that three air channels of sintered bushing are not blocked by lubricant.

3) Reassemble pinion shaft into gear housing so spline in pinion shaft meshes with twelfth tooth of rack. Ensure pinion is positioned so bolt hole in flexible coupling is on top and parallel with rack.

4) Assemble flat washer and pinion nut to shaft. Torque nut to 20 ft. lbs. (2.8 mkg). DO NOT exceed this specification or gear may jam. Assemble screw cap and lock nut on gear assembly. Torque cap to 43 ft. lbs. (6.0 mkg) and lock.

5) Place bearing shell in gear housing and fill hole with lubricant. Replace thrust ring, adjuster screw, and locknut in gear housing. Adjust and tighten locknut to specification.

6) Screw ball stud of axial joint together with stop plate onto both ends of rack (hold rack from turning). Slide rubber bellows into position and clamp such that clamp screws are facing same direction as adjuster screw.

TIGHTENING SPECIFICATIONS

Application	Ft. Lbs. (mkg)
Flexible Coupling Clamp	19 (2.6)
Axial Joint Ball Stud-to-Rack	65 (9.0)
Gear Housing-to-Crossmember	14 (1.9)
Adjusting Screw Lock Nut	49 (6.8 mkg)
Pinion Lock Nut	20 (2.8)
Tie Rod-to-Steering Arm	29 (4.0)