

10-14 Steering Wheel & Column Switches

RENAULT

Le Car

Installation — To install, reverse removal procedure.

REMOVAL & INSTALLATION

HORN PAD & STEERING WHEEL

Removal — Disconnect battery ground. Remove horn pad. Unscrew steering wheel retaining nut. Use a suitable puller (Dir. 21A or equivalent) to pull steering wheel from shaft.

Installation — To install, reverse removal procedure and note: Ensure wheels are in straight ahead position and steering wheel spokes are horizontal.

TURN SIGNAL & LIGHTING SWITCH

NOTE — For the following procedure, steering wheel does not have to be removed.

Removal — Disconnect battery ground. Remove instrument panel housing screws. Remove bottom shroud retaining screws. Remove turn signal/light switch retaining screw. Disconnect electrical connections and remove switch.

Installation — To install, reverse removal procedure and note: Electrical connections must be set in original position.

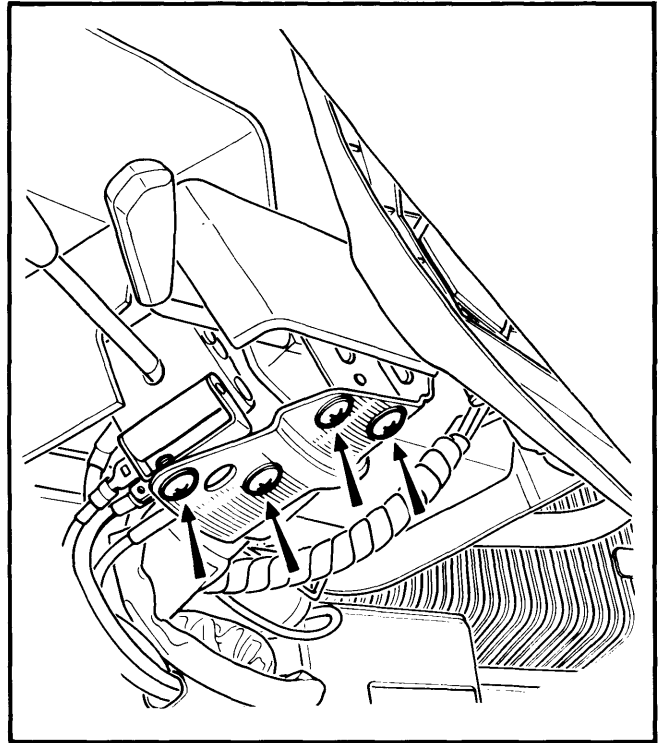


Fig. 2 Location of Switch Assembly Retaining Screws

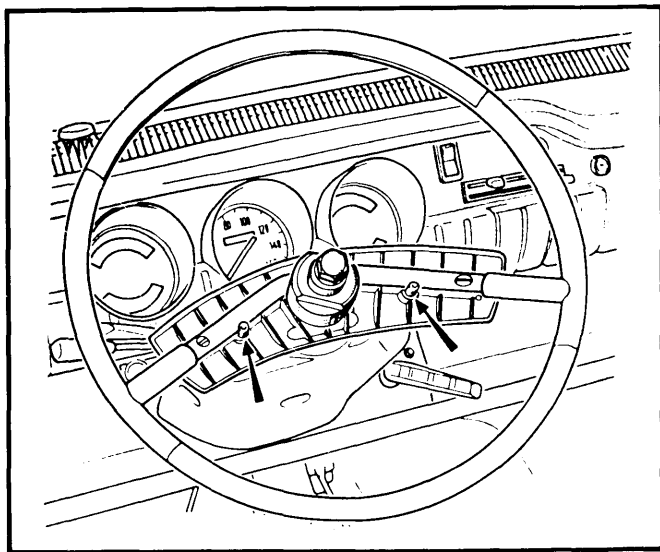


Fig. 1 Top View of Steering Wheel with Detail of Horn Pad Mounting Pins

IGNITION SWITCH/COLUMN LOCK

Removal — 1) Disconnect battery ground cable. Remove shroud from around switch assembly. Disconnect electrical connections. Turn ignition switch to "G" (Garage) and remove switch.

2) Unscrew the set screw and press retaining catch in with a small punch. Push switch body from backside to release it.

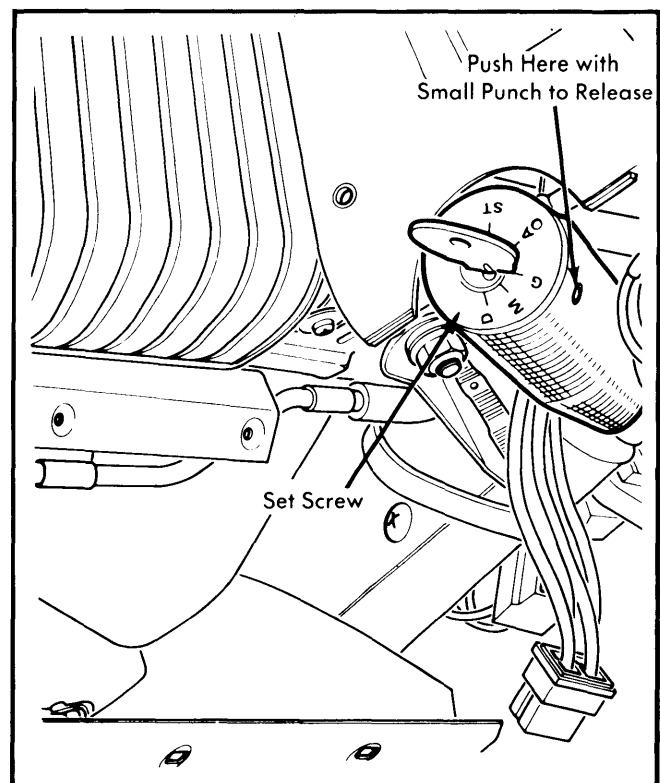


Fig. 3 Ignition Switch Removal