

## VOLKSWAGEN DASHER

### DESCRIPTION

The Volkswagen Dasher uses a two-piece safety steering column which incorporate a flange connection. A lattice metal column support is used under the instrument panel. This device is designed to absorb some of the impact shock which may otherwise be transmitted to the driver.

### REMOVAL & INSTALLATION

#### STEERING COLUMN

**Removal** – 1) Disconnect battery ground strap. Remove steering wheel. See *Volkswagen* under **STEERING WHEELS & COLUMN SWITCHES** in this Section.

2) Remove all steering column switches.

3) From under hood, remove pinch bolt holding steering column flange to pinion shaft.

4) Work under brake pedal and unbolt mounting flange from bracket. Disconnect electrical wires from ignition switch. Put ignition switch in "ON" position.

5) Remove bolts from steering lock/column clamp. Remove steering column and shaft as a unit.

**Installation** – 1) Position column assembly back in vehicle. Install steering column lock. Make sure lock lug will snap into recess in steering column. Fit new shear bolts finger tight.

2) Bolt steering column mounting flange onto bracket so long side of flange faces right side of vehicle. Snug up flange bolts and steering lock/column clamp bolts.

3) Connect electrical wires to ignition switch. Fit column trim. Place front wheels straight-ahead.

4) Make sure column bushings are in position on pins at lower end of steering column. Line holes in flange so flange will slide down over pins on steering column. It will be necessary to use drift to drive flange tube onto steering gear pinion shaft. Make sure flange seats to stop on pinion. Tighten pinch bolt.

5) Maneuver steering column until steering lock operates correctly, then tighten steering lock/column clamp bolts. Install steering wheel.

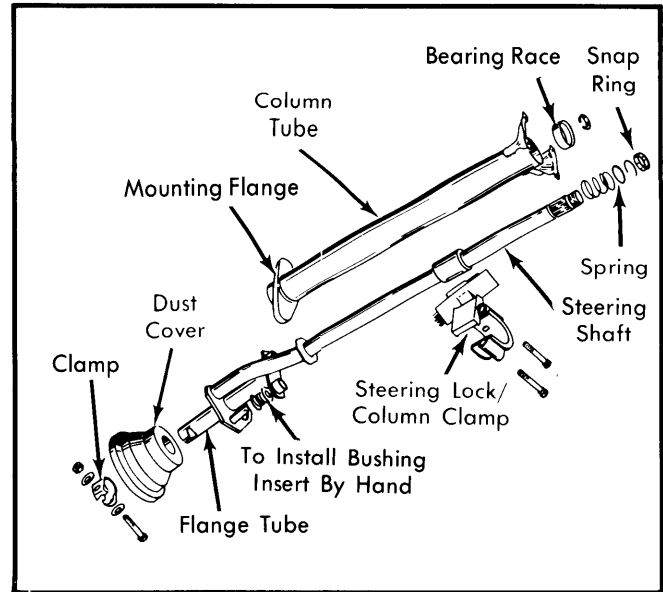


Fig. 1 Expanded View of Dasher Steering Column

### OVERHAUL

#### STEERING COLUMN

**Disassembly** – Pull off steering wheel spacer ring and snap ring. Remove flat washer and spring. Pull steering shaft out through bottom of column. Press race out of column.

**Reassembly** – Examine race and replace if excessively worn. Slide steering shaft back into column then refit spring and snap ring.

### TIGHTENING SPECIFICATIONS

Application	Ft. Lbs. (N·m)
Column Mounting Flange-to-Body .....	7 (10)
Gear Box Pinch Bolt .....	22 (30)
Steering Gear Box-to-Frame .....	14 (19)
Steering Wheel Nut .....	36 (41)