


12-8 Steering Wheel & Column Switches

CHRYSLER CORP. IMPORTS (Cont.)

Fig. 1: Installation of Chrysler Corp. Steering Wheel

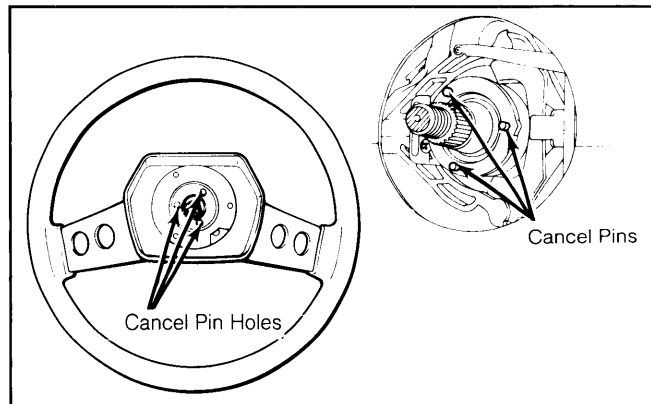

STEERING LOCK

Removal

With steering wheel removed, remove column levers and switches. Cut a slot in mounting pad screws and bracket with a hack saw. Remove screws and steering wheel lock.

Installation

To install, reverse removal procedures. Install new bracket and screws.

COURIER

REMOVAL & INSTALLATION

STEERING WHEEL & COMBINATION SWITCH

Removal

1) Disconnect battery ground cable. Remove steering wheel nut cover. Index mark main shaft and steering wheel. Disconnect electrical leads. Pull steering wheel from shaft.

2) Remove plastic hazard light indicator and steering column shroud. Disconnect electrical wires at base of steering column. Remove headlight switch knob from shaft.


3) Remove snap ring retaining switch and force turn indicator cancelling cam off shaft. Take out single bolt, near bottom of switch, and pull out complete switch assembly.

Installation

1) Fit switch assembly on steering column and install 1 retaining bolt. Place turn indicator cancelling cam into position and install snap ring. Reconnect electrical plug at column base.

2) Insert and tighten headlight knob switch. Install column shroud and plastic hazard light indicator. Refit steering wheel with index marks aligned. Connect battery cable.

Fig. 1: Top View of Steering Column with Steering Wheel Removed to Expose Combination Switch

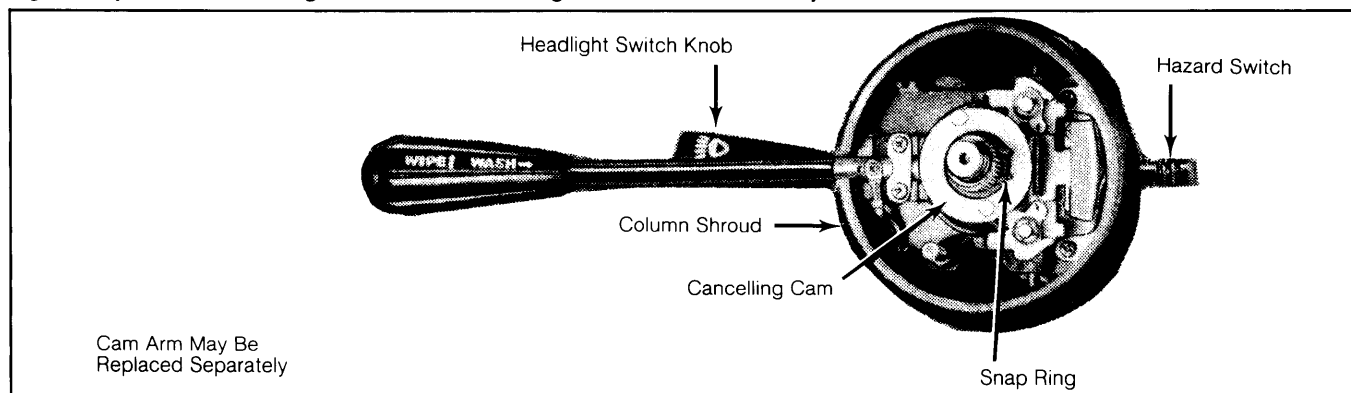

DATSUN/NISSAN

REMOVAL & INSTALLATION

STEERING WHEEL & HORN PAD

Removal

1) Disconnect battery cable. On 210 models, remove 3-spoke horn pad by pulling off. Remove 2-spoke horn pad by removing retaining screws on back side of steering wheel and pull off pad.

2) On all others, pull horn pad off steering wheel. Remove horn wire. Remove retaining nut.

3) Using puller (ST27180001), remove steering wheel. Do not hammer on steering wheel. Pounding will cause damage to collapsible steering column.

DATSUN/NISSAN (Cont.)

Installation

To install, reverse removal procedures. Grease all sliding components. Match index marks made during removal. Check operation.


COMBINATION SWITCH

Removal

1) Disconnect battery cable. Remove steering wheel. Remove steering column shrouds. On Pickup models, disconnect switch connector near lower edge of instrument panel.

2) On all others, disconnect switch connector at column. Remove screws retaining switch to column and lift switch out of shaft.

Fig. 1: Steps for Removing and Installing Steering Wheel and Combination Switch

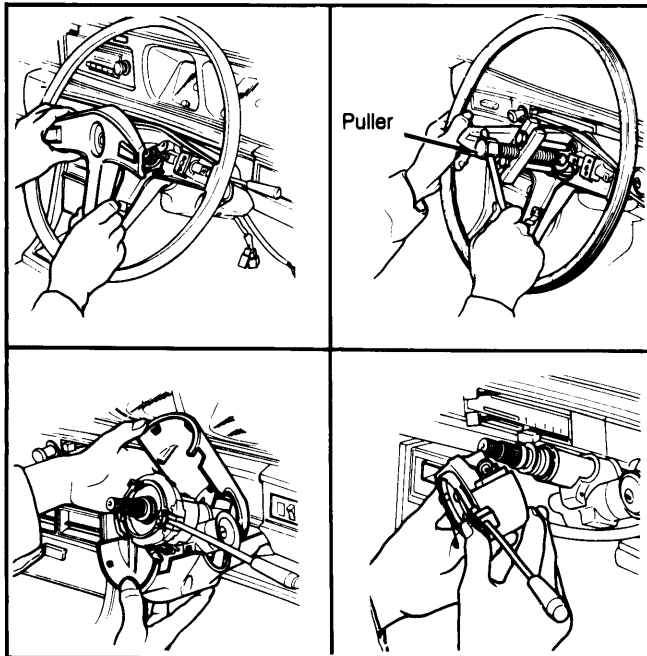

Installation

To install, reverse removal procedures. Make sure switch tab locates in hole in column.

HAZARD WARNING SWITCH

Removal

Disconnect battery cable. Remove mounting screws and steering column shrouds. Disconnect lead wires at connector. Remove retaining screws and take switch out of shroud.

Installation

To install, reverse removal procedures.


STEERING LOCK & IGNITION SWITCH

Removal

1) Disconnect battery cable. Remove steering column shroud. Drill out shear bolts. Separate steering lock from column shaft.

2) If ignition switch is to be removed, separate electrical connector. Remove small set screw retaining switch body. Remove switch.

Fig. 2: Steering Lock and Ignition Switch

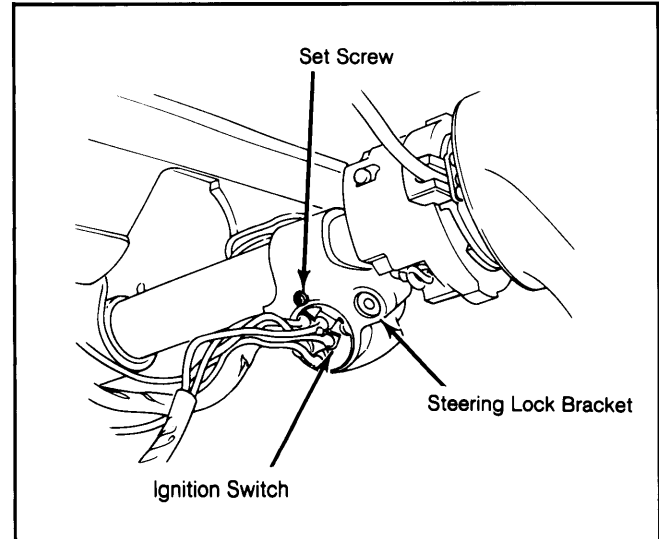

Remove small set screw to remove ignition switch.

Installation

To install, reverse removal procedures. Fit ignition switch to lock mechanism before installing lock.

FIAT

REMOVAL & INSTALLATION

HORN COVER & STEERING WHEEL

Removal

1) Disconnect battery ground cable. Remove steering column cover (if equipped) and remove horn cover. Disconnect horn wires (if required).

2) Remove steering wheel retaining nut and washer. Remove steering wheel. On Spider 2000, remove retaining screws and remove steering wheel.

Installation

To install, reverse removal procedure.

COMBINATION SWITCH

Removal

1) Remove steering wheel and column shrouding. Disconnect battery ground cable. Disconnect electrical connection.

2) Remove retaining nut/screws and remove switch from shaft.

Installation

To install, reverse removal procedures.