

## DATSUN/NISSAN (Cont.)

### Installation

To install, reverse removal procedures. Grease all sliding components. Match index marks made during removal. Check operation.


### COMBINATION SWITCH

#### Removal

1) Disconnect battery cable. Remove steering wheel. Remove steering column shrouds. On Pickup models, disconnect switch connector near lower edge of instrument panel.

2) On all others, disconnect switch connector at column. Remove screws retaining switch to column and lift switch out of shaft.

**Fig. 1: Steps for Removing and Installing Steering Wheel and Combination Switch**

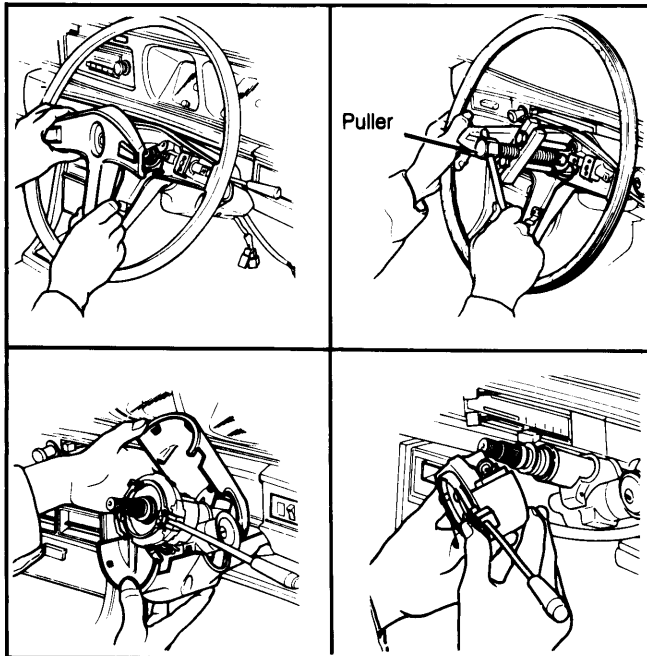

#### Installation

To install, reverse removal procedures. Make sure switch tab locates in hole in column.

### HAZARD WARNING SWITCH

#### Removal

Disconnect battery cable. Remove mounting screws and steering column shrouds. Disconnect lead wires at connector. Remove retaining screws and take switch out of shroud.

#### Installation

To install, reverse removal procedures.


### STEERING LOCK & IGNITION SWITCH

#### Removal

1) Disconnect battery cable. Remove steering column shroud. Drill out shear bolts. Separate steering lock from column shaft.

2) If ignition switch is to be removed, separate electrical connector. Remove small set screw retaining switch body. Remove switch.

**Fig. 2: Steering Lock and Ignition Switch**

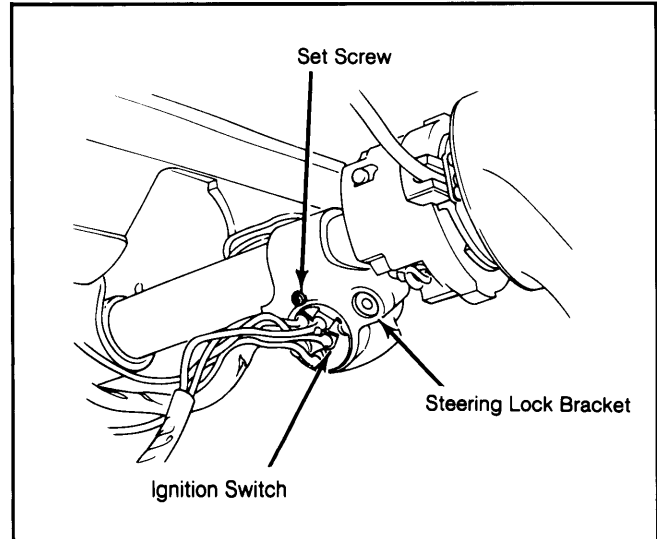

Remove small set screw to remove ignition switch.

#### Installation

To install, reverse removal procedures. Fit ignition switch to lock mechanism before installing lock.

## FIAT

### REMOVAL & INSTALLATION

#### HORN COVER & STEERING WHEEL

##### Removal

1) Disconnect battery ground cable. Remove steering column cover (if equipped) and remove horn cover. Disconnect horn wires (if required).

2) Remove steering wheel retaining nut and washer. Remove steering wheel. On Spider 2000, remove retaining screws and remove steering wheel.

##### Installation

To install, reverse removal procedure.

#### COMBINATION SWITCH

##### Removal

1) Remove steering wheel and column shrouding. Disconnect battery ground cable. Disconnect electrical connection.

2) Remove retaining nut/screws and remove switch from shaft.

##### Installation

To install, reverse removal procedures.