

INTERNATIONAL HARVESTER

ALL MODELS

Tie Rod Removal – Remove cotter pins from ball studs at each end of tie rod. Remove nuts. Separate tie rod end ball studs from steering arms. To install, reverse removal procedure. Install new cotter pins.

Tie Rod End Replacement – Loosen tie rod end clamp bolts. Unscrew tie rod end from tie rod. To install, reverse removal procedure. Make sure tie rod end is threaded into tie rod sufficiently so that clamping action will be directly over threads. Position clamp on tie rod as shown in illustration (see Fig. 2).

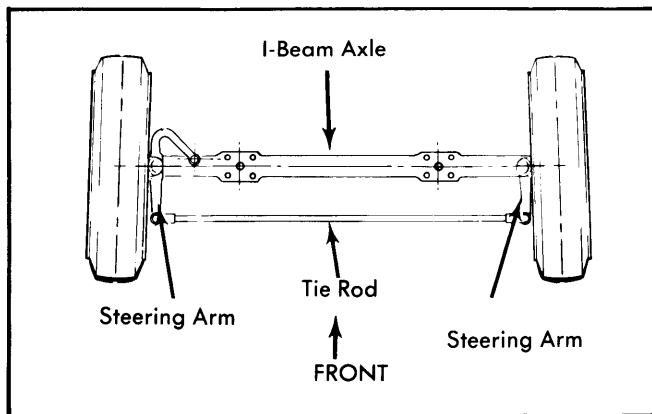


Fig. 1 Steering Linkage for MS and MHC Models

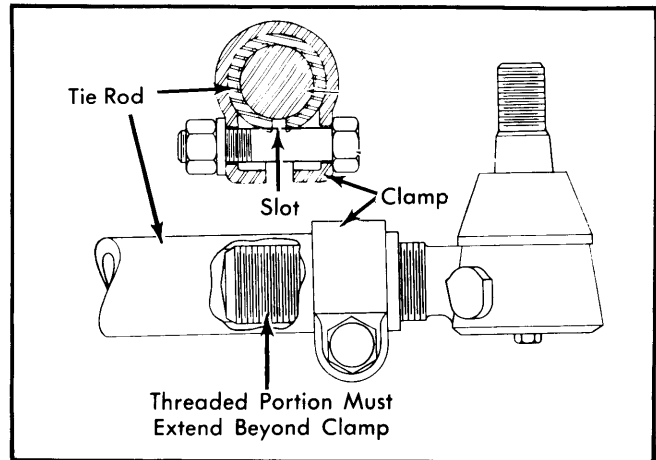


Fig. 2 Positioning Clamps on Tie Rod