


1973 AMERICAN MOTORS

FUSE BLOCK

Fuse block is located to far left side under instrument panel.

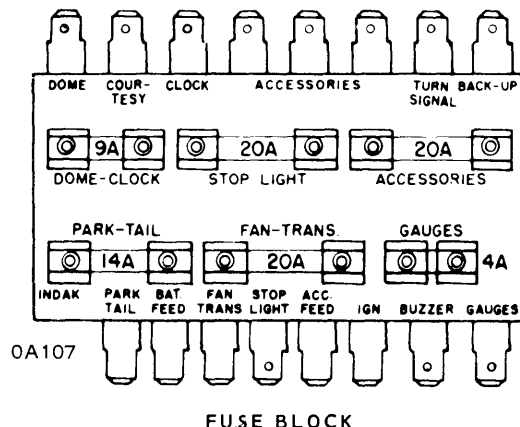

FUSIBLE LINKS

Red Wire – Protects complete wiring; located in battery terminal or starter relay to main wire harness.

Pink Wire – Protects horn circuit; located in battery terminal of starter relay to main wire harness.

Brown Wire – Protects cigarette lighter, all accessories from fuse panel and electric windshield wiper; located in accessory terminal of ignition switch to wire harness.

Red Wire – Protects heated rear window; located in battery terminal of starter relay to heated rear window relay.

Red Wire – Protects tailgate regulator motor when operated by instrument panel switch; located in B-3 terminal of tailgate key switch.

Red Wire – Protects tailgate regulator motor when operated by tailgate key switch; located in B-3 terminal of ignition switch to circuit breaker.

CIRCUIT BREAKERS

Headlamps – 20 Amp. circuit breaker in headlamp switch.

Windshield Wipers – 6 Amp. circuit breaker in wiper switch.

Electric Windows – 20 Amp. circuit breaker in instrument panel.

Tailgate, Front Switch – 20 Amp. circuit breaker in instrument panel.

Tailgate, Rear Switch – 20 Amp. circuit breaker in instrument panel.

① – **Yellow Wire** – Protects tailgate regulator motor when operated by instrument panel switch; located in 1-3 terminal of ignition switch to circuit breaker.

① – **Yellow Wire** – Protects tailgate regulator and/or side window regulator motors and throttle stop solenoid; located in 1-3 terminal of ignition switch (single wire at switch splits into two feed wires).

① – **Yellow Wire** – Protects throttle stop solenoid; located in 1-3 terminal of ignition switch to throttle stop solenoid.

① – Only one of these installations is used on any one vehicle.

1973 JEEP

FUSES

Capacity (Amps.)

Circuit	CJ, DJ	Commando	Wagoneer
Air Cond.	—	30	① 25
Back-Up Lights	9	9	10
Brake Failure Warning	9	—	—
Cigar Lighter	14	② 20	20
Cluster Feed	—	—	③ 3
Control Panel	—	② 20	20
Directional Signal	9	9	9
Elec. Tailgate Window	—	—	② 30
Hazard Flasher	14	② 20	15
Headlights	② 20	② 20	② 20
Heater	15	15	① 25
Parking Brake & Brake Failure Warning	—	—	③ 3
Radio	—	5	(in-line) 5
Windshield Wiper & Washer	② 6	14	10

① – Same fuse for heater and air conditioning.

② – Circuit Breaker.

③ – Same fuse used for parking brake warning, brake failure warning and cluster feed.