

## 1973 CADILLAC

### CIRCUIT BREAKERS

**Convertible Top, Horns, Seats & Door Locks** – Located on fuse panel.

**Power Windows** – Located on fuse panel.

**Twilight Sentinel** – 15 Amp. circuit breaker, integral with headlight switch.

**Headlights** – 15 Amp. circuit breaker, integral with headlight switch.


### FUSIBLE LINKS

Fusible links are placed in the power feed circuits in engine compartment and are designed to open up before instrument panel or body feed wiring, ahead of fuse panel, is damaged due to shorts.

### FUSE BLOCK

Fuse block is located on firewall under instrument panel to left of steering column unit. Fuses installed are color-stripped according to the following chart:

*NOTE – On models with Theft Deterrent System, system must be disarmed before removing fuse block cover.*

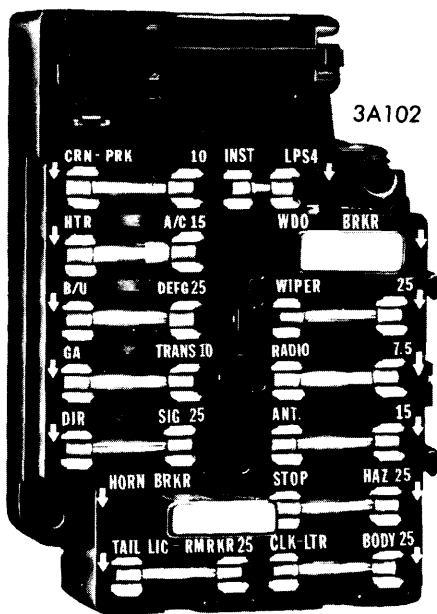

**FUSE BLOCK**

### FUSE IDENTIFICATION CHART

Fuse	Application	Color Stripe
Heater and Air Conditioner (15 amp)	All except 6F	Lt. Blue
Radio (7-1/2 amp)	All cars	Brown
Trans. and Instruments (10 amp)	All cars	Red
Cornering, Front Side Marker, and Parking Lamps (10 amp)	All cars	Red
All 25 amp Fuses	All cars	White