

Fuses & Circuit Breakers

1974 CADILLAC

FUSE BLOCK

CAUTION — If equipped with Air Cushion Restraint System, turn ignition key to "LOCK", disconnect battery ground cable and tape end before servicing instrument panel components. This must be done to prevent accidental release of A.C.R.S.

Fuse block is located on firewall under instrument panel to left of steering column.

NOTE — On models with Theft Deterrent System, disarm system before removing fuse block cover.

FLASHERS

Turn Signal — Located on steering column lower cover.

Hazard — Located on fuse block.

IN-LINE FUSES

Rear Window Defogger — 25 amp. fuse is located in yellow wire about 5" from fuse block.

Track Master — 4 amp. Fuse is located in pink wire about 8" from fuse block.

Vanity Mirror — 1 amp. Fuse is behind mirror.

Air Cushion Restraint System — 20 amp. Fuse is near Sensor Recorder below radio.

FUSIBLE LINKS

16 Gauge Black — Link is located between starter solenoid "M" terminal and 10 gauge red wire, it protects power feed wire to ignition switch.

16 Gauge Black — Link is located between starter solenoid "M" terminal and 10 gauge orange wire, it protects power feed wire to blower motor relays.

18 Gauge Green — Link is located between starter solenoid "M" terminal and 14 gauge yellow wire, it protects power feed wire to headlight switch.

CIRCUIT BREAKERS

Headlights — 15 amp. integral with headlight switch.

Windshield Wiper Motor — Integral with motor.


Twilight Sentinel — 15 amp. integral with headlight switch.

Power Windows — Circuit breaker located on fuse block.

Sunroof — 25 amp. located under instrument panel.

Horns — 25 amp. circuit breaker located on fuse block, other circuits protected are door locks, power seats, seat back lock solenoid, engine temperature light & convertible top.

Hazard Warning Flasher

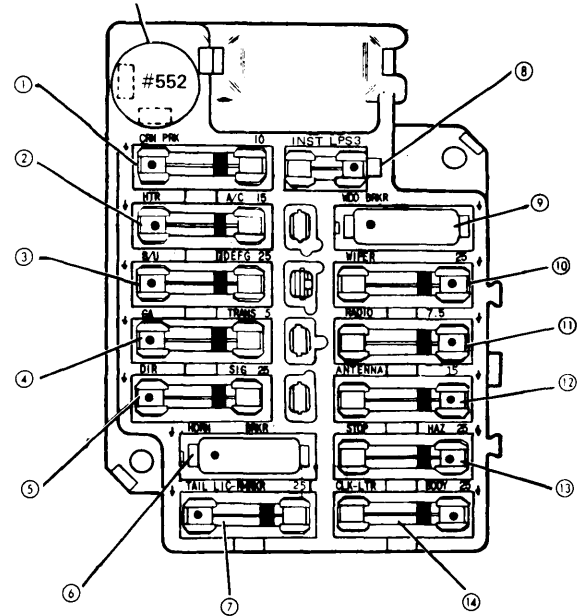

4CA01

CADILLAC FUSE BLOCK

CADILLAC FUSE BLOCK CIRCUITS

- ① — 10 amp. Cornering lights, front marker lights, right door ash tray light, park lights, and ash tray light.
- ② — 15 amp. Air conditioner relay coil, amplifier and control head. Cruise control.
- ③ — 25 amp. Back-up lights and rear window defogger.
- ④ — 5 amp. Oil telltale, detent solenoid, fuel gauge, generator telltale, low brake telltale, water temperature telltale and seat belt warning.
- ⑤ — 25 amp. Turn signal lights.
- ⑥ — C.B. Engine temperature telltale, horns, power seats, power door locks and power top.
- ⑦ — 25 amp. Tail lights, license lights and rear marker lights.
- ⑧ — 3 amp. Instrument panel lights.
- ⑨ — C.B. Power windows.
- ⑩ — 25 amp. Washer fluid indicator and windshield wiper.
- ⑪ — 7.5 amp. Radio.
- ⑫ — 15 amp. Antenna.
- ⑬ — 25 amp. Stop lights and hazard warning.
- ⑭ — 25 amp. Body feed, map light, courtesy lights, cigar lighter, clock and glove box light.