


1973 DODGE

FUSES

Fuses (except in-line) are located in fuse block. Fuse block is located under instrument panel to left of brake pedal.

IN-LINE FUSES

Circuit Protected	Model	Amps.
Tailgate Lock & Deck Lid Solenoid	Charger, Coronet, Polara & Monaco	20
Heater/Air Cond. Blower Motor	Charger, Coronet, Polara & Monaco	20
Headlamp Delay Relay	Polara, Monaco	20
Heated Rear Window	Dart	30
Spot Lamp	Charger, Coronet, Polara & Monaco	10
Trailer Towing Package Back-up Lamps (Charger, Coronet, Polara, Monaco & Dart) Elec. Brakes (Charger, Coronet, Polara, Monaco & Dart) Running Lamps (Charger, Coronet, Polara, Monaco & Dart)		30

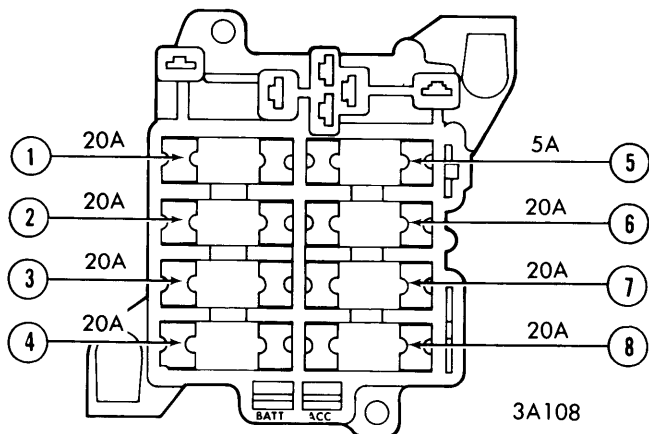

FUSE BLOCK (EXCEPT DART)

- ① - Brake warning, dual brake (D), oil pressure & seat belt lights. Seat belt buzzer & relay, deck lid release solenoid (W), air cond. relay (D), window lift safety relay (W,D), fuel & temperature gauge (W) & voltage limiter.
- ② - Horn & horn relay, key in buzzer & clock.
- ③ - Stop, trunk, dome & aft dome, courtesy (D), glove box (D), ignition switch (D) & auxiliary switch (D) lights. Hazard flasher (includes stop lamp, front turn signal & turn signal indicators). Clock (D), lock door indicator (D), time delay relay coil (D).
- ④ - Side marker, tail, license, parking, glove box (J,W), map (J,W) & switch title (J) lights. Ignition lamp time delay relay (J,W), clock (J, Rallye cluster), head lamp on buzzer (W,D) & trailer running lights relay coil (W,D).
- ⑤ - Cluster, ash receiver, stereo cassette, radio (J,W), gear selector, heater or air cond. control, accessory switch & tailgate switch lights.
- ⑥ - Temperature, fuel & oil pressure gauges (all J,W,Rallye cluster). Voltage limiter & tach feed (R, Rallye cluster), rear defogger, air cond. Clutch, headlamp delay relay (D), rear air cond. motor (D), speed control (D) & low fuel relay & bulb.
- ⑦ - Heater & air cond. blower motor.
- ⑧ - Back-up & reverse gear indicator lights (B,R). Turn signal flasher (includes stop lights, front turn signal & turn signal indicators), tach feed (B rallye cluster), trailer back-up lamp relay coil (R,P), voltage limiter (P), temperature & fuel gauge (P).

CIRCUIT BREAKERS

Circuit Protected	Model	Amps.
Concealed Headlamp Relay	Polara, Monaco	5
Power Door Lock or Front Seat Back Latch	Polara, Monaco	15
Power Tailgate Window and/or Power Windows	Charger, Coronet	30
Power Window, Seat and/or Tailgate Window	Polara, Monaco	30
Tailgate Lock Solenoid	Charger, Coronet	15


Headlights & Windshield Wipers - Integral with respective switches.

FUSIBLE LINK

Challenger & Charger - One in red wire running from starter relay to ammeter. One in red wire running from starter relay to bulkhead connector. One in black wire from splice running from alternator to bulkhead connector.

Polara & Monaco - One in red wire running from positive side of battery to splice to starter relay. One in dark blue wire from splice running from alternator to bulkhead connector.

Dart - One in dark blue wire running from starter relay to ammeter. One in red wire running from starter relay to bulkhead connector.

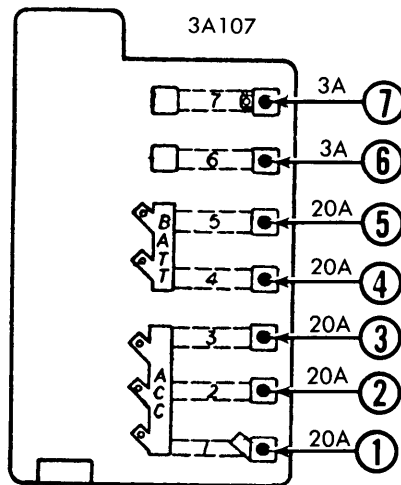

FUSE BLOCK (DART)

- ① - Rear window defogger & air cond. clutch.
- ② - Air cond. blower motor.
- ③ - Back-up & reverse gear indicator lights. Turn signal (includes stop lamp, front turn signal & turn signal indicators), heater blower motor, trailer back-up lamps relay coil.
- ④ - Dome, trunk, stop, map, glove box & ignition lights. Ignition lamp relay, cigar lighter & hazard flasher (includes stop lamp, front turn signal & turn signal indicators.)
- ⑤ - Tail, license, parking, instrument & side marker lights. Horn & horn relay, key in buzzer.
- ⑥ - Fuel & temperature gauge. Dual brake & seat belt lamp. Seat belt relay & buzzer, voltage limiter & heated rear window coil.
- ⑦ - Cluster, radio, gear selector, ash receiver & air cond. lights.