


## 1973 PLYMOUTH

### FUSES

Fuses (except in-line) are located in fuse block. Fuse block is located under instrument panel to left of brake pedal.

#### IN-LINE FUSES

Circuit Protected (Car Model)	Amps.
Tailgate Lock & Deck Lid Solenoid (Satellite, Fury)	20
Heater/Air Cond. Blower Motor, Tilt Column (Satellite, Fury)	20
Headlamp Delay Relay (Fury)	20
Heated Rear Window (Valiant)	30
Spot Lamp (Satellite, Fury)	10
Trailer Towing Package	
Back-Up Lights (Satellite, Fury, Valiant)	30
Electric Brakes (Satellite, Fury, Valiant)	30
Running Lights (Satellite, Fury)	30

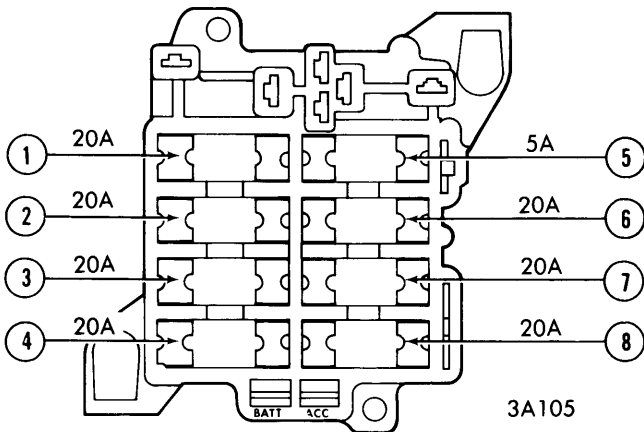

FUSE BLOCK (EXCEPT VALIANT)


- ① - Brake warning, dual brake (P), oil pressure & seat belt lights. Seat belt buzzer & relay, deck lid release solenoid (R), air cond. relay (P), window lift safety relay (R,P), fuel & temperature gauges (R) & voltage limiter.
- ② - Horn & horn relay, key in buzzer & clock (R).
- ③ - Stop, trunk, dome & aft dome, courtesy (P), glove box (P), ignition switch (P) & auxiliary switch (P) lights. Hazard flasher (includes stop lamp, front turn signal & turn signal indicators). Clock (P), lock door indicator (P), time delay relay coil (P).
- ④ - Side marker, tail, license, parking, glove box (B,R), map (B,R) & switch title (B) lights. Ignition lamp time delay relay (B,R), clock (B, rallye cluster), head lamp on buzzer (R,P) & trailer running lights relay coil (R,P).
- ⑤ - Cluster, ash receiver, stereo cassette, radio (B,R), gear selector, heater or air cond. control, accessory switch & tailgate switch lights.
- ⑥ - Temperature, fuel & oil pressure gauges (all B,R, rallye cluster). Voltage limiter & tach feed (R, rallye cluster), rear defogger, air cond. clutch, headlamp delay relay (P), rear air cond. motor (P), speed control (P) & low fuel relay & bulb.
- ⑦ - Heater & air cond. blower motor.
- ⑧ - Back up & reverse gear indicator lights (B,R). Turn signal flasher (includes stop lights, front turn signal & turn signal indicators), tach feed (B rallye cluster), trailer back up lamp relay coil (R,P), voltage limiter (P), temperature & fuel gauge (P).

**NOTE** - Car models are referred to as follows: V - Valiant, B - Barracuda, R - Satellite & P - Fury.

### CIRCUIT BREAKERS

Circuit Protected (Car Model)	Amps.
Concealed Headlamp Relay (Fury)	5
Power Door Lock or Front Seat Back Latch (Fury)	15
Power Tailgate Window and/or Power Windows (Satellite)	30
Power Window, Power Seat and/or Power Tailgate Window (Fury)	30
Tailgate Lock Solenoid (Satellite)	15

**Headlights & Windshield Wipers** - Integral with respective switches.

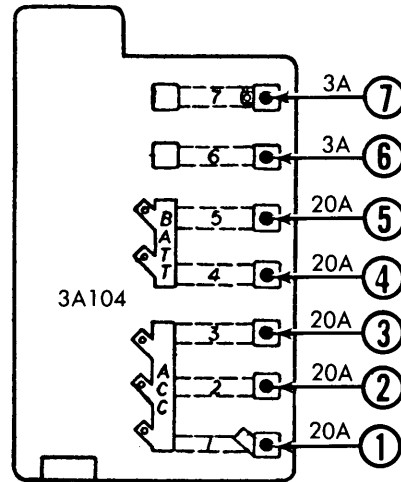

FUSE BLOCK (VALIANT)

- ① - Rear window defogger & air cond. clutch.
- ② - Air cond. blower motor.
- ③ - Back up & reverse gear indicator lights. Turn signal (includes stop lamp, front turn signal & turn signal indicators), heater blower motor, trailer back-up light relay coil.
- ④ - Dome, trunk, stop, map, glove box & ignition lights. Ignition light relay, cigar lighter & hazard flasher (includes stop light, front turn signal & turn signal indicators).
- ⑤ - Tail, license, parking, instrument & side marker lights. Horn & horn relay, key in buzzer.
- ⑥ - Fuel & temperature gauges, dual brake & seat belt light, seat belt relay & buzzer, voltage limiter & heater rear window coil.
- ⑦ - Cluster, radio, gear selector, ash receiver & air cond. lights.

### FUSIBLE LINKS

**Barracuda & Satellite** - One in red wire running from starter relay to ammeter. One in red wire running from starter relay to bulkhead connector. One in black wire from splice running from alternator to bulkhead connector.

**Fury** - One in red wire running from positive side of battery to splice to starter relay. One in dark blue wire from splice running from alternator to bulkhead connector.

**Valiant** - One in dark blue wire running from starter relay to ammeter. One in red wire running from starter relay to bulkhead connector.