

1973 FORD (4 CYL.)

FUSE BLOCK


Located on right hand side of steering column on bracket attached to pedal support.

CIRCUIT BREAKERS

Headlights - 12 Amp. circuit breaker integral with lighting switch.

Windshield Wiper Circuit - 18 Amp. circuit breaker integral with lighting switch.

Horn, Stop, Rear, License, Marker, Park & T/S Lamps, (PRNDL), Instrument & Cluster Lamps, Radio, Heater, A/C & Clock Illumination - 15 Amp. circuit breaker integral with switch.

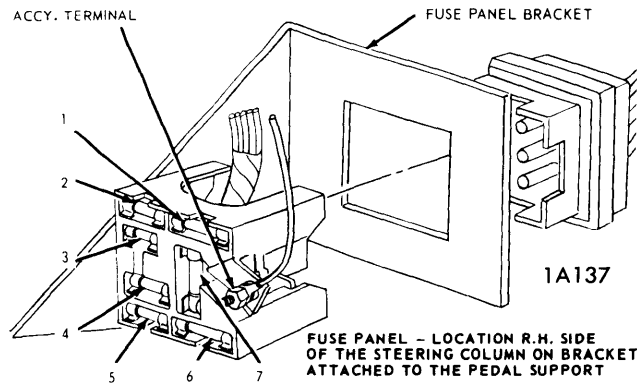

- 1 - (20 Amp.) Emergency Warning, Cigar Lighter & Clock Feed (Console Only).
- 2 - (14 Amp.) Courtesy, Dome Lamp & Ignition Key Warning.
- 3 - (Spare Not Used).
- 4 - (14 Amp.) Seat Belt Warning System.
- 5 - (14 Amp.) Heater Defroster. *NOTE - (30 Amp. Fuse) Required For Air Cond.*
- 6 - (15 Amp.) Back-Up Lamps, Radio, W/S Washer & Rear Window Defogger.
- 7 - (Spare) (Accy) Not Used.

1973 FORD (6 CYL.)

MUSTANG

Headlamps - (Single) 9 amp. (Dual) 13 amp. circuit breaker integral with light switch.

Parking, Marker, License, Tail, PRND12 Lamp - 12 amp. circuit breaker integral with light switch.


Stop Lamps, Hazard Flasher - 15 amp. circuit breaker in relay panel above glove box.

Power Windows, Top, Heated Backlite, Power Seat - 20 amp. circuit breaker on starter relay.

Windshield Wiper (Standard or Intermittent) - 7 amp. circuit breaker in windshield wiper switch.

Front Seat Back Latch Solenoid - Circuit breaker integral with solenoid.

Power Window, Seat & Top (Motors) - Circuit breaker in motors.

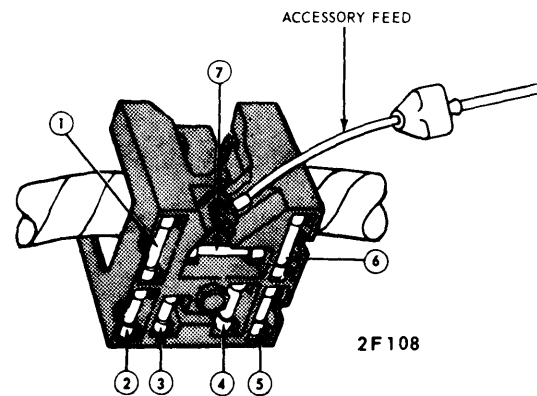

- ① (20 AMP. FUSE) HORNS AND CIGAR LIGHTER
- ② (14 AMP. FUSE) COURTESY, DOME OR "C" PILLAR, MAP, LUGGAGE AND GLOVE COMPARTMENT LIGHTS, AUTOMATIC SEAT BACK LATCH RELEASE COIL FEED, CLOCK FEED, IGNITION KEY AND HEADLIGHTS ON BUZZER.
- ③ (4 AMP. FUSE) (INSTRUMENT PANEL ILLUM.) HEATER SWITCH, HEADLIGHT SWITCH, W/S WIPER-WASHER SWITCH, ASH TRAY, RADIO AND GAGE ILLUM., AND CLOCK ILLUM., CIGAR LIGHTER AND INSTRUMENT CLUSTER ILLUMINATION
- ④ (14 AMP. FUSE) (INDICATOR LIGHTS) OIL PRESSURE, SEAT BELT, EMISSION CONTROL OR THROTTLE SOLENOID POSITIONER, DUAL BRAKE; COUGAR XR7 ONLY - DOOR AJAR AND PARKING BRAKE; SEAT BELT TIME DELAY RELAY
- ⑤ (14 AMP. FUSE) HEATER-DEFROSTER, NOTE: (30 AMP. REQUIRED FOR AIR CONDITIONER)
- ⑥ (15 AMP. FUSE) BACK-UP LIGHTS, RADIO, W/S WASHER, AND TURN SIGNAL FLASHER; LOW FUEL INDICATOR AND RELAY CONTROL (COUGAR XR7)
- ⑦ (20 AMP. FUSE) (ACCESSORY FEED) PARKING BRAKE INDICATOR LIGHT - MUSTANG ONLY, POWER WINDOW AND BACKLITE SAFETY RELAY COIL FEED

MUSTANG FUSE BLOCK