


1974 PONTIAC

FUSE BLOCK

Located under instrument panel on left side just above front edge of floor mat. On Grand Prix and Grand Am models, fuse block is under lower trim plate.

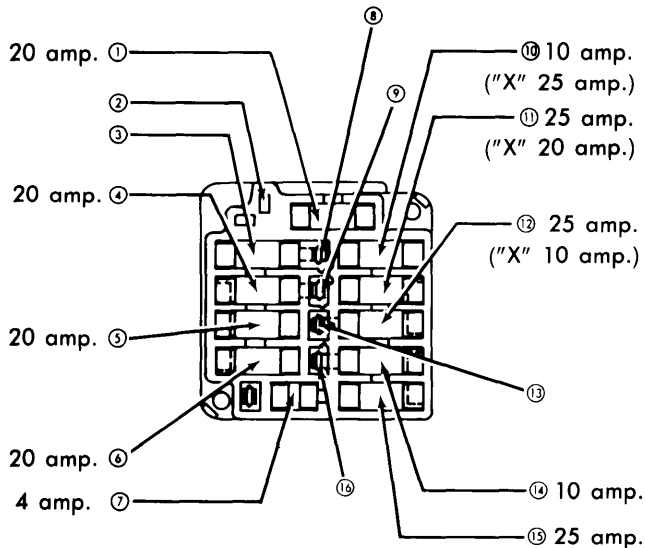

4PO01

PONTIAC FUSE BLOCK

NOTE — In the following data, model codes are LeMans (A), Pontiac (B), Firebird (F), Grand Prix & Grand Am (G), Ventura (X).

- ① — Turn signal lights, back-up lights (A,B,F,G).
- ② — Hazard flasher.
- ③ — Power accessories Circuit Breaker for convertible top (B), power windows (A,B,F), power seats (A,B), electric door locks (A,B,F), seat back locks (B), power tailgate & window (B), electric sunroof (A).
- ④ — Clock power, cigar lighter, courtesy lights, trunk lid release (A,B,G), glove box light, seat belt interlock module (A,B,F,G), trunk light, dome light (X), door courtesy (G).
- ⑤ — Tail & park lights, cornering lights (B,G), side marker lights, license light, seat belt interlock module (X).
- ⑥ — Stop & hazard lights; dome & trunk lights (A,B,F,G), rear seat cigar lighters, door courtesy lights (B).
- ⑦ — Instrument panel lights, ash tray, clock & radio lights; auto. trans. shift indicator light, heater or air conditioner control light, tachometer light (A,F,G).
- ⑧ — Convertible top power (B), power windows & electric door locks (A,B,F), power seats (A,B), seat back locks, power tailgate, power tailgate window (B), electric sunroof (A).

- ⑨ — Power connector for radio suppression capacitor in firewall connector (G).
- ⑩ — Oil pressure, temperature & fuel gauges, auto. trans. downshift, low brake warning light, seat belt warning light, seat belt warning buzzer (actuating coil), seat belt interlock (relay actuating coil), seat belt control switch (actuating coil feed).
- ⑪ — Heated rear glass (A,B,F,G), turn signals & back-up lights (X).
- ⑫ — Heater & air conditioning blower motor (A,B,F,G), window control relay & tailgate relay-actuating coils (B), rear window defogger blower (A,B,F), tailgate ajar light (A).
- ⑬ — Power connection for window control relay, tailgate relay (B).
- ⑭ — Radio, tape player, T.C.S. system, idle stop solenoid, seat belt buzzer relay for man. trans. (A,F,G).
- ⑮ — Windshield wiper & washer.
- ⑯ — Power connection for seat belt warning buzzer relay with man. trans. (A,F).

FUSIBLE LINKS

NOTE — In the following data, model codes are LeMans (A), Pontiac (B), Firebird (F), Grand Prix & Grand Am (G), Ventura (X).

- 20 Gauge Orange (X)** — Link is located between engine-alternator connector and starter "BAT" terminal.
- 20 Gauge Red (X)** — Link is located between junction block and alternator.
- 16 Gauge Green & Black (A,B,F,G)** — Two links are located between starter-alternator junction block and firewall connector.
- 16 Gauge Black (X)** — Link is located between engine-alternator connector and alternator output junction block.
- 16 Gauge Red (X)** — Link is located between junction block and engine-alternator connector.
- 14 Gauge Brown (X)** — Link is located between engine-alternator connector and alternator output junction block.
- 14 Gauge Red (X)** — Link is located between junction block and starter "BAT" terminal at starter solenoid.

IN-LINE FUSES

- Cruise Control** — 5 amp.
- Tachometer** — 1 amp.
- Heated Rear Glass** — 4 amp.

FLASHERS

- Hazard** — Located on fuse block.
- Turn Signal** — Located on instrument panel lower brace or in fuse block depending on model variation.