

## 1973 MERCURY

## STOP LIGHT SWITCH

Mechanical type mounted on brake pedal arm at master cylinder pushrod. Not adjustable.

## INSTRUMENT CLUSTER

**Comet** — Disconnect battery ground cable and speedo cable by pressing on flat surface of plastic connector and pulling cable away from head. Remove two retaining screws at top of cluster and swing cluster down from panel. Disconnect multiple connector plug from printed circuit at back of cluster. Disengage brackets on cluster lower edge from slots in panel.

**Cougar** — Disconnect battery ground cable, remove instrument panel and finish panel and cluster opening finish panel. Remove four cluster attaching screws and pull cluster away from instrument panel. Disconnect speedometer cable and wiring from cluster.

**Mustang (Auxiliary Gauges)** — Remove instrument panel center finish panel (four screws) and disconnect wires and heater control. Remove four screws attaching cluster to finish panel and remove cluster. Remove back from cluster, disconnect wires from terminal and remove terminal nuts.

**Torino** — Disconnect battery ground cable. Remove instrument panel pad. Remove four screws that retain cluster to instrument panel, and position cluster part way out of panel. Disconnect speedo cable, multiple printed circuit plug and clock or tachometer feed wire. Disengage three wiring harness-connected indicator light bulb and socket assemblies from their

**Montego** — Disconnect battery ground cable. Remove instrument panel pad. Remove four screws that retain cluster to instrument panel, and position cluster part way out of panel. Disconnect speedo cable, multiple printed circuit plug and clock or tachometer feed wire. Disengage three wiring harness connected indicator light bulb and socket assemblies from their receptacles. Disconnect cable and vacuum hoses from heater control. Disconnect feed plug to heater control switch and connector to heater control light bulb. Remove cluster.

**Mercury** — Disconnect battery ground cable. Remove two steering column cover attaching screws and remove cover. Remove two screws securing instrument cluster trim cover and remove cover. Reach behind panel and disconnect harness plug and speedo cable. Remove screw attaching shift quadrant cable to steering column. Remove four cluster attaching screws and remove cluster assembly.

## PRINTED CIRCUIT BOARD

*NOTE* — Instrument cluster must be removed before printed circuit board can be removed. See Cluster Removal above.

**Comet** — Snap off printed circuit buttons from instrument voltage regulator and remove regulator. Remove indicator and illumination bulbs by turning counterclockwise. Remove nuts retaining printed circuit to fuel gauge and lift off printed circuit.

**Cougar** — Remove light sockets from back of cluster and note their locations. Remove clock and fuel gauge terminal nuts and instrument voltage regulator bracket screw. Separate instrument voltage regulator and radio choke from printed circuit.

**Montego** — Remove terminal nuts from fuel and temperature gauges. Remove gauges. Remove instrument voltage regulator and radio choke and remove printed circuit.

**Mercury** — Unsnap printed circuit from instrument voltage regulator, remove screw, then remove regulator. Remove six lens and mask attaching screws and remove lens and mask assembly. Remove all bulbs and socket assemblies. Remove fuel gauge retaining nut and remove gauge through front of cluster. Remove printed circuit from cluster.

## SPEEDOMETER

*NOTE* — Instrument cluster and printed circuit board (in most cases), must be removed before removing speedometer.

**Comet** — Remove instrument cluster. Remove four retaining screws and separate cluster housing from finish panel. Note the two lower screws also retain metal brackets that engage slot in instrument panel. Remove two speedometer retaining screws and remove speedometer.

**Cougar** — With instrument cluster removed, remove four light sockets from rear of speedometer and note their locations. Disengage printed circuit board from speedometer housing and remove cluster back from housing. Remove two screws attaching speedometer to back of housing.

**Montego** — With cluster removed from panel, remove six screws retaining back plate to cluster mask. Remove two screws that retain speedometer head assembly and remove speedometer.

**Mercury** — Remove instrument cluster. Remove six screws, located at rear of cluster, attaching lens, shield and mask to cluster. Remove two screws attaching speedometer to cluster and remove speedometer.