

CADILLAC

FUSE BLOCK

CAUTION — If equipped with Air Cushion Restraint System, turn ignition key to "LOCK", disconnect battery ground cable and tape end before servicing instrument panel components. This must be done to prevent accidental release of A.C.R.S.

Fuse block is located on firewall under instrument panel to left of steering column.

FLASHERS

Turn Signal — Located on steering column lower cover.

Hazard — Located on fuse block.

Rear Window Defogger — 25 amp. fuse is located in yellow wire about 5" from fuse block, or is protected by a circuit breaker.

Track Master — 4 amp. Fuse is located in pink wire about 8" from fuse block.

Vanity Mirror — 2 amp. fuse is behind mirror.

Theft Deterrent — 25 amp. fuse (two). Both fuses are located above radio.

Air Cushion Restraint System — 20 amp. Fuse is near Sensor Recorder below radio.

FUSIBLE LINKS

Fusible Link — Protects starter motor.

CIRCUIT BREAKERS


Headlights — 15 amp. integral with headlight switch.

Twilight Sentinel — 15 amp. integral with headlight switch.

Sunroof — 25 amp. located under instrument panel.

Rear Window Defogger — Circuit breaker on right side of steering column lower cover reinforcement, or is protected by an in-line fuse.

Hazard Warning Flasher

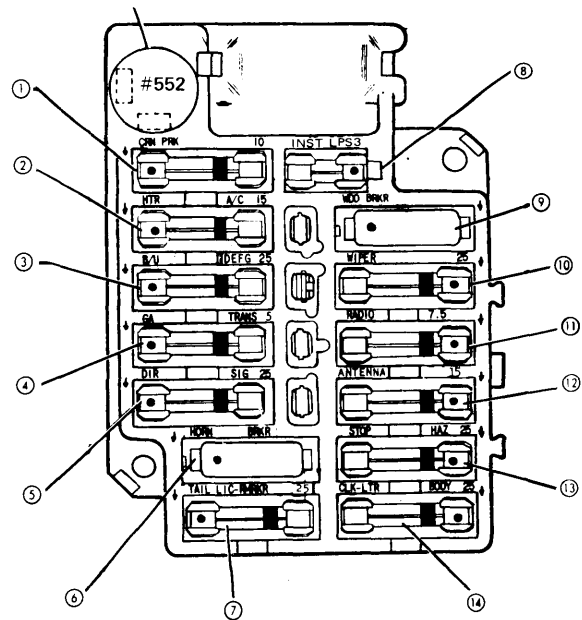

4CA01

CADILLAC FUSE BLOCK

CADILLAC FUSE BLOCK CIRCUITS

- ① — 10 amp. Cornering lights, front marker lights, right door ash tray light, park lights, and ash tray light.
- ② — 15 amp. Air conditioner relay coil, amplifier and control head. Cruise control.
- ③ — 25 amp. Back-up lights, rear window defogger, electric choke, downshift solenoid.
- ④ — 5 amp. Oil telltale, fuel gauge, generator, low brake & water temperature telltale, seat belt warning.
- ⑤ — 25 amp. Turn signal lights.
- ⑥ — C.B. Engine temperature telltale, horns, power seats, power door locks and power top.
- ⑦ — 25 amp. Tail, license & rear marker lights, rheostat control feed.
- ⑧ — 3 amp. Instrument panel lights.
- ⑨ — C.B. Power windows.
- ⑩ — 25 amp. Washer fluid indicator and windshield wiper.
- ⑪ — 7.5 amp. Radio.
- ⑫ — 20 amp. Power antenna, seat belt module, instrument panel courtesy light, clock, instrument panel cigar lighter, glove box light.
- ⑬ — 25 amp. Stop lights, hazard warning.
- ⑭ — 20 amp. Body feed, body courtesy lamps, body cigar lighter.