

OLDSMOBILE

IN-LINE FUSES

Air Conditioning – 30 Amp. In-line fuse, located at junction block to A/C harness.


Tempmatic – 30 Amp. In-line fuse, located at junction block to A/C harness.

A/C Compressor – Thermal Limiter, located at compressor harness.


Rear Window Defogger – 30 Amp. In-line fuse, located at junction block to defogger harness.

Tru-Track Brake – 5 Amp. fuse In-line, located in Tru-track brake harness.

Power Antenna – 20 Amp. in-line fuse located in power antenna harness.

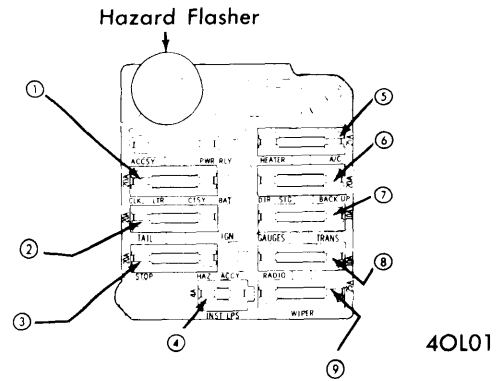

- ① – 20 amp. Dome light, cigar lighter, clock, courtesy lights, trunk light, glove box light, seat belt ignition interlock.
- ② – 20 amp. Tail lights, side marker lights, underhood light.
- ③ – 20 amp. Stop lights, hazard warning lights.
- ④ – 4 amp. Instrument panel lights.
- ⑤ – 25 amp. Heater, air conditioner.
- ⑥ – 20 amp. Turn signals & back-up lights.
- ⑦ – 10 amp. Gauges, seat belt warning.
- ⑧ – 10 amp. Radio, defogger, idle stop solenoid.
- ⑨ – 25 amp. Windshield wipers.

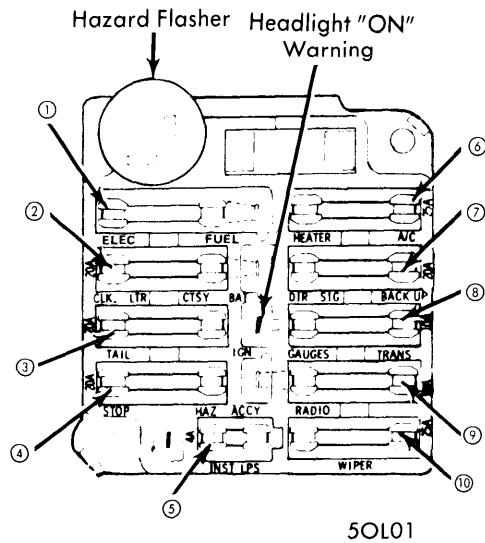

FUSE BLOCK (OMEGA)

FUSIBLE LINK

Two fusible links are incorporated in wiring system. A black fusible link at main chassis wiring harness junction block to protect main harness. A brown one at the starter solenoid protects the starting circuit.

FLASHERS

Hazard – Located on fuse panel.

Turn Signal – In clip behind left side of instrument panel.

CIRCUIT BREAKERS

Convertible Top – Circuit breaker, located at fuse panel.

Headlamps – Circuit breaker, located in headlamp switch.


Power Seat – Circuit breaker, located on fuse panel.

Power Windows – Circuit breaker, located on fuse panel.


FUSE BLOCK (STARFIRE)

- ① – 20 amp. Electric fuel pump.
- ② – 20 amp. Dome light, Cigar Lighter, clock, seat belt interlock.
- ③ – 20 amp. Tail & side marker lights.
- ④ – 20 amp. Stop & hazard warning lights.
- ⑤ – 4 amp. Instrument panel lights.
- ⑥ – 25 amp. Heater, air conditioner.
- ⑦ – 20 amp. Turn signals, back-up lights.
- ⑧ – 10 amp. Gauges, seat belt warning, low coolant warning, idle stop solenoid.
- ⑨ – 10 amp. Radio, defogger.
- ⑩ – 25 amp. Windshield wipers.

OLDSMOBILE (Cont.)

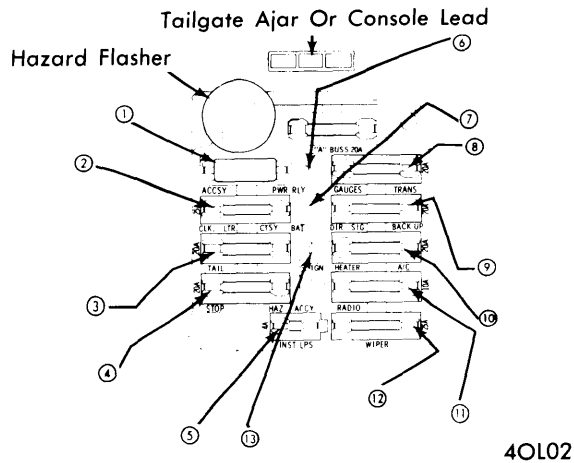

40L02

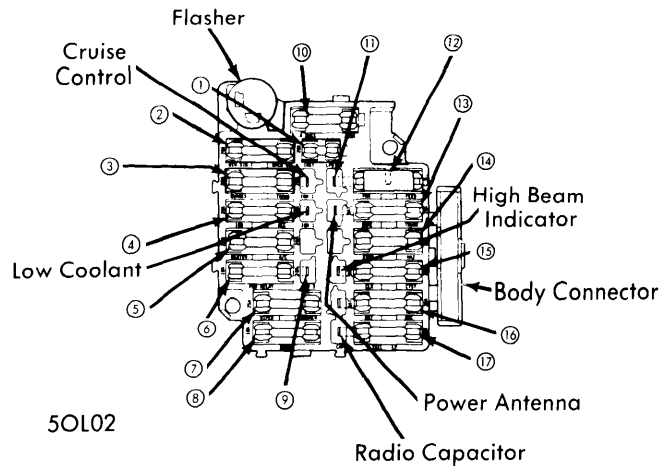

50L02

Radio Capacitor

- ① - 40 amp. circuit breaker.
- ② - 25 amp. Dome light, cigar lighter, clock, courtesy lights, trunk light, glove box light, seat belt ignition interlock.
- ③ - 20 amp. Tail lights, side marker lights, license light, underhood light.
- ④ - 20 amp. Stop lights and hazard warning light.
- ⑤ - 4 amp. Instrument panel lights.
- ⑥ - Power feed ORANGE wire to accessory junction block for power windows, seat, door locks.
- ⑦ - Radio capacitor.
- ⑧ - 20 amp. Parking brake light, seat belt warning.
- ⑨ - 20 amp. Turn signals, back-up lights.
- ⑩ - 20 amp. Heater, air conditioner, defogger, power window relay.
- ⑪ - 10 amp. Radio.
- ⑫ - 25 amp. Windshield wipers.
- ⑬ - Relay feed PINK wire to accessory junction block for power windows, cruise control.

FUSE BLOCK (CUTLASS, MAN. TRANS. ONLY)

- ① - 4 amp. Instrument panel lights.
- ② - 20 amp. Turn signals, back-up lights, air cushion restraint, seat belt warning.
- ③ - 20 amp. Transmission control, park brake light, true track brake system, cruise control.
- ④ - 20 amp. Tailgate ajar.
- ⑤ - 20 amp. Heater, air conditioner, idle stop solenoid.
- ⑥ - 10 amp. Spare.
- ⑦ - 25 amp. Windshield wiper.
- ⑧ - 10 amp. Radio.
- ⑨ - Relay feed PINK wire to accessory junction block for power windows, seats, door locks, etc.
- ⑩ - 20 amp. Air Cushion restraint.
- ⑪ - Power feed ORANGE wire to accessory junction block for power windows, seat, door locks, etc.
- ⑫ - 40 amp. circuit breaker.
- ⑬ - 20 amp. Visor vanity (exc. Cutlass), dome, trunk & quarter panel lights, rear cigar lighter, power antenna.
- ⑭ - 20 amp. Stop & hazard warning lights, rear cigar lighter.
- ⑮ - 20 amp. Front cigar lighter, clock, courtesy lights, seat belt interlock.
- ⑯ - Spare.
- ⑰ - 20 amp. Cornering lights (exc. Cutlass), tail, side marker, license & underhood lights.

FUSE BLOCK (CUTLASS A/T, 88, 98 & TORONADO)