


PONTIAC

FUSE BLOCK

Located under instrument panel on left side just above front edge of floor mat. On Grand Prix, Grand LeMans and Grand Am models, fuse block is under lower trim plate. On Astre models, fuse block is located under instrument panel near steering column.

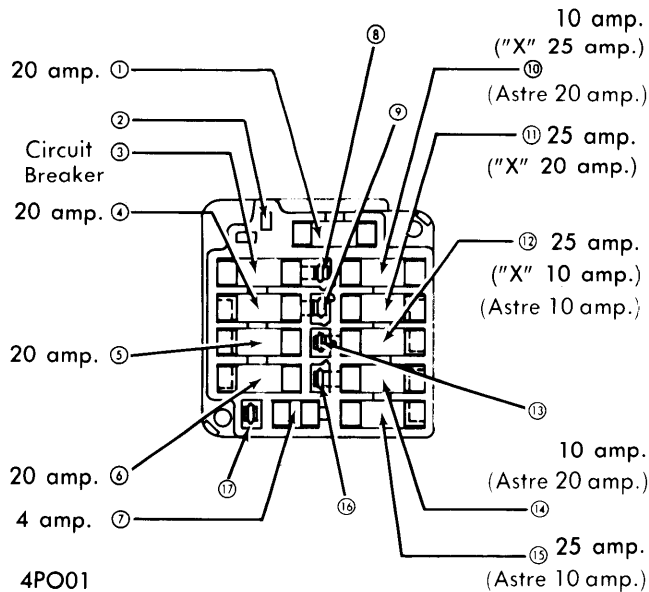

PONTIAC FUSE BLOCK (TYPICAL)

NOTE — In the following data, model codes are LeMans (A), Pontiac (B), Firebird (F), Grand Prix & Grand Am (G), Ventura (X).

- ① — Turn signal lights, back-up lights (A,B,F,G).
- ② — Hazard flasher.
- ③ — Power accessories Circuit Breaker for convertible top (B), power windows (A,B,F), power seats (A,B), electric door locks (A,B,F,X), seat back locks (B), power tailgate & window (B), electric sunroof (A), electric fuel pump (Astre).
- ④ — Power for clock, cigar lighter, courtesy lights (A,B,G,Astre), trunk lid release (A,B,G), glove box light, seat belt interlock module (A,B,F,G), trunk light, dome light (X), door courtesy (G), pulse wiper (A,B,G).
- ⑤ — Tail & parking lights (B,G,Astre), cornering lights (B,G), side marker lights, license light, seat belt interlock module (X).
- ⑥ — Stop & hazard lights (A,B,F,G,Astre), dome & trunk lights, (A,B,F,G), rear seat cigar lighters, door courtesy lights (B).
- ⑦ — Instrument panel lights, ash tray, cigar lighter lights, clock & radio lights, auto. trans. shift indicator light, heater or air conditioner control light, tachometer light (A,F,G,Astre).
- ⑧ — Convertible top power (B), power windows & electric door locks (A,B,F), power seats (A,B), seat back locks, power tailgate, power tailgate window (B), electric sunroof (A).

- ⑨ — Power connector for radio suppression capacitor in firewall connector (G), pulse wiper feed (A,B,G).
- ⑩ — Oil pressure, temperature & fuel gauges, auto. trans. downshift, low brake warning light, seat belt warning light, seat belt warning buzzer, seat belt interlock, seat belt control switch (A,B,F,G), heater or air conditioner (X,Astre), headlamp warning buzzer (A,B).
- ⑪ — Heated rear glass (A,B,F,G), turn signals & back-up lights (X), wipers (Astre), tailgate ajar light (A).
- ⑫ — Heater & air conditioning blower motor (A,B,F,G), window control relay & tailgate relay actuating coils (B), rear window defogger blower (A,B,F), tailgate relay (B), oil pressure, temperature & fuel gauges, low brake light, seat belt light & buzzer, seat belt interlock and control (X), radio, TCS solenoid (Astre).
- ⑬ — Power connection for window control relay, tailgate relay (B), cruise control (A,B), tachometer (A,F), sun roof (A), radio suppression capacitor (X).
- ⑭ — Radio, tape player, TCS system (A,B,F,G), idle stop solenoid (F,X), seat belt buzzer relay for man. trans. (A,F,G), turn signal, back-up light (Astre).
- ⑮ — Windshield wiper & washer (A,B,G,F,X), gauges (Astre).
- ⑯ — Power connection for seat belt warning buzzer relay with man. trans. (A,F).
- ⑰ — Power connection for headlamp warning buzzer (X).

FUSIBLE LINKS

6 Cylinder (Exc. Ventura) — 14 gauge red link located between starter "BAT" terminal and alternator, 16 gauge red link and 18 gauge red link located between starter solenoid and bulkhead connector.

8 Cylinder (Exc. Ventura) — 16 gauge black link and 18 gauge green link located between alternator and bulkhead connector and 16 gauge black link between alternator connector and air conditioning blower circuit.

Astre — 14 gauge dark brown link located between starter solenoid and ammeter, 16 gauge orange link at bulk head connector and 20 gauge orange link at junction block.

Ventura — 16 gauge red link between alternator and #2 terminal on bulkhead connector and 14 gauge red link between starter solenoid and junction block.

IN-LINE FUSES

Cruise Control — 5 amp.

Tachometer — 1 amp.

Heated Rear Glass — 4 amp.

FLASHERS

Hazard — Located on fuse block.

Turn Signal — Located on instrument panel lower brace or in fuse block depending on model variation.