

CHEVROLET (Cont.)

MONZA, VEGA & VEGA COSWORTH FUSE BLOCK CIRCUIT

4 amp. - Instrument panel lamps, radio lamp.

10 amp. - Radio.

10 amp. (Monza & Vega) - Electric fuel start.

10 amp. (Monza & Vega) - Electric fuel run.

10 amp. (Vega Cosworth) - Electric fuel primary and secondary.

10 amp. (Vega Cosworth) - Gauges, brake alarm, ECU, TCS, vacuum advance solenoid, seat belt warning buzzer and light.

20 amp. - Traffic hazard flasher, stop lights.

20 amp. - Tail, side marker and parking lamps.

20 amp. - Clock, cigar lighter, dome and courtesy lamps.

20 amp. - Turn signal flasher, fuel gauge, seat belt warning, back-up lights, heat gauge, brake alarm (exc. Monza), low coolant (exc. Monza), tachometer, instrument panel warning lights (exc. Cosworth), idle stop solenoid (exc. Cosworth), rear defogger (Cosworth only).

25 amp. - Windshield wiper.

25 amp. - Heater or air conditioner.

CHRYSLER

FUSE BLOCK

Cordoba - Fuse block is mounted on a bracket attached to air conditioning or heater housing near center of vehicle.

Chrysler - Fuse block is mounted on bracket on lower edge of instrument panel to the left of steering column.

CIRCUIT BREAKERS

Circuit breakers are used to protect the following circuits: Headlights, Windshield wiper, Power door locks, Front seat-back latch, Power windows, Power seats, and Power tailgate window.

FUSIBLE LINKS


Several fusible links may be used depending on the equipment options on vehicle. Correct problem before replacing any fusible link and always use fusible type wire with hypalon insulation and correct gauge wire for replacement.

IN-LINE FUSES

Spotlight - 10 amp.

CHRYSLER FUSE BLOCK CIRCUITS

- ① - Instrument cluster, windshield wiper switch title lamp, headlight switch title lamp, tailgate lock switch, rear window defogger, radio and clock lamps, cigar lighter, heater control lamp, air conditioning or automatic temperature control lamp.
- ② - Side marker, tail, license, parking, turn signal and instrument lamps.
- ③ - Cigar lighter, time delay relay for ignition switch lamp, key warning buzzer, stop lamps, dome lamp, glove box lamp, trunk lamp, map lamp.
- ④ - Horn (dual), horn relay.
- ⑤ - Dual brake warning lamp, oil pressure warning lamp, open door indicator lamp, high temperature warning lamp, electric trunk lid release, EGR lamp, seat belt lamp and buzzer, power window safety relay security alarm.
- ⑥ - Radio, tape deck.
- ⑦ - Voltage limiter, fuel gauge, temperature gauge, oil pressure gauge.
- ⑧ - Back-up lamps, turn signal lamps, turn signal flasher, speed control, rear window defogger.
- ⑨ - Air conditioning blower motor, heater blower motor, heated backlite, power door lock.
- ⑩ - Hazard flasher circuit.

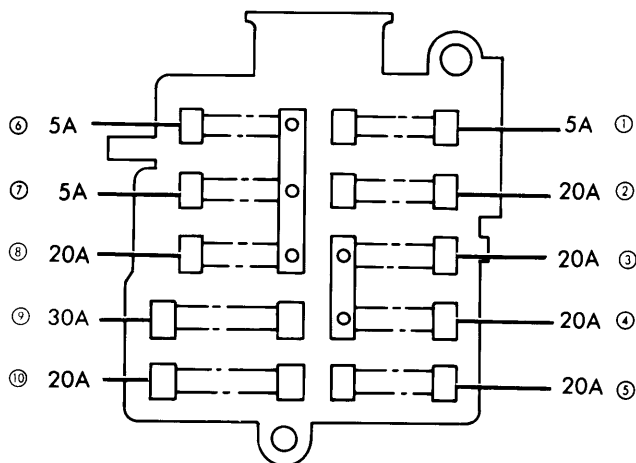

4CHA01

CHRYSLER & CORDOBA FUSE BLOCK

CORDOBA FUSE BLOCK CIRCUITS

- ① - Accessory switch lamps, air conditioning or heater control lamps, radio and cluster lamps, ash tray lamp, digital clock lamp.
- ② - Horn (dual), horn relay.
- ③ - Parking, side marker, tail and license lamps, clock, key warning buzzer.
- ④ - Open door indicator lamp, ignition switch lamp time delay relay, glove box lamp, courtesy lamps, cigar lighter, dome and trunk lamps, stop lamps.
- ⑤ - Hazard flasher circuit.
- ⑥ - EGR lamp, seat belt lamp and buzzer, brake warning lamp, oil pressure lamp.
- ⑦ - Fuel, temperature and oil pressure gauges, radio.
- ⑧ - Speed control, rear window defogger, back-up lamps, turn signal circuit, tachometer.
- ⑨ - Air conditioning blower motor.
- ⑩ - Heater blower motor, heated backlite, power window relay, tailgate relay, trunk release, tailgate ajar.