

CADILLAC

FUSE BLOCK

Fuse block is located on firewall under instrument panel to left of steering column.

FLASHER LOCATION

Hazard – Refer to Turn Signal & Hazard Flasher Systems in ACCESSORIES & EQUIPMENT Section.

Turn Signal – Refer to Turn Signal & Hazard Flasher Systems in ACCESSORIES & EQUIPMENT Section.

CIRCUIT BREAKERS

Headlights (Twilight Sentinel) – Integral with headlight switch.

Windshield Wiper – Integral with windshield wiper switch.

Sunroof – 25 amp. On body bracket at left side of steering column cover reinforcement (Eldorado Only). 30 amp. at upper left corner fuse block (All models except Seville).

FUSIBLE LINK

Fuel Injection Electronic Control Unit – 18 gauge fusible link located in dark green wire on "BAT" terminal of alternator (Eldorado & Seville Only).

Accessories & Body Feed – 16 gauge fusible link located in black/red stripe wire at junction block (Seville) or starter (exc. Seville).

Ignition – 16 gauge fusible link located in red wire at junction block (Seville) or starter solenoid (exc. Seville).

Headlights – 18 gauge fusible link located in yellow wire at junction block (Seville) or starter (exc. Seville).

Charging – 16 gauge fusible link located in red/white stripe wire at junction block.

IN-LINE FUSE

Vanity Mirror – 2 amp. fuse located behind mirror.

EFI Fuel Pump – 10 amp. fuse located left of fuel injection electronic control unit orange wire (Seville) or the brown wire (exc. Seville).

Theft Deterrent – 20 amp. fuse for lights located in yellow wire above glove box (Seville) or above radio (exc. Seville). 25 amp. fuse for horn located in black/yellow stripe wire above glove box (Seville) or black/red stripe wire above radio (exc. Seville).

Hazard Warning Flasher

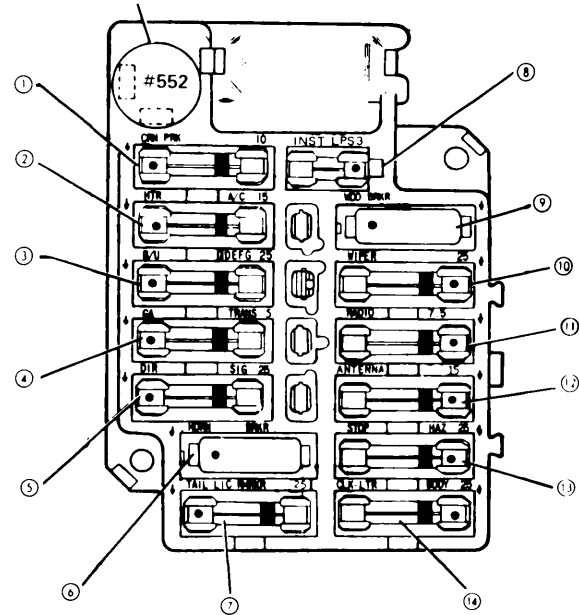


Fig. 1 Fuse Block for Eldorado and Seville

ELDORADO & SEVILLE FUSE BLOCK CIRCUITS

- ① – 10 amp. Cornering lights, front marker lights, right door ash tray light, park lights, ash tray light.
- ② – 15 amp. Air conditioner relay coil, amplifier and control head, cruise control, air conditioner low blower.
- ③ – 25 amp. Back-up lights, downshift solenoid.
- ④ – 5 amp. Oil telltale, fuel gauge, brake telltale, seat belt warning, coolant temperature telltale, fuel economy indicators, alternator telltale, trunk telltale.
- ⑤ – 20 amp. Turn signal lights.
- ⑥ – 40 amp. Circuit Breaker. Engine temperature telltale, horns, power seats, power door locks, key warning buzzer.
- ⑦ – 25 amp. Tail, license and marker lights, rheostat control feed.
- ⑧ – 3 amp. Rheostat controlled instrument panel lights.
- ⑨ – 40 amp. Circuit Breaker. Power windows.
- ⑩ – 25 amp. Windshield wipers, washer fluid indicator.
- ⑪ – 7.5 amp. Radio.
- ⑫ – 20 amp. Power antenna, clock, glove box light, instrument panel courtesy light and cigar lighter.
- ⑬ – 25 amp. Stop lights, hazard warning.
- ⑭ – 20 amp. Body feed, courtesy and trunk lights, cigar lighter.

CADILLAC (Cont.)

CADILLAC FUSE BLOCK CIRCUITS

- ① — 5 amp. Rheostat controlled instrument panel lights.
- ② — 3 amp. Cruise control.
- ③ — 10 amp. Cornering, side marker and opera lights, right door ash tray light, instrument panel ash tray light.
- ④ — 30 amp. Circuit Breaker. Power windows, trunk release and sun roof.
- ⑤ — 10 amp. Back-up lights.
- ⑥ — 20 amp. Air conditioner compressor feed, amplifier feed and relay coil feed, alternator telltale.
- ⑦ — 10 amp. Antenna switch feed.
- ⑧ — 20 amp. Turn signal lights.
- ⑨ — 20 amp. Stop light switch and hazard warning flasher.
- ⑩ — 20 amp. Oil pressure telltale, low brake telltale, coolant temperature telltale, fuel gauge, downshift switch, seat belt warning buzzer and light.
- ⑪ — 20 amp. Clock, key warning buzzer, engine temperature telltale, glove box light, instrument panel cigar lighter and courtesy lights.
- ⑫ — 25 amp. ATC blower, power seats cavity.
- ⑬ — 30 amp. Circuit breaker. Power door locks, seats and horn.
- ⑭ — 7.5 amp. Radio.
- ⑮ — 20 amp. Electronic fuel injection.
- ⑯ — 20 amp. Body courtesy lights and cigar lighters.
- ⑰ — 25 amp. Windshield wipers, theft deterrent cut-off, washer fluid level telltale.
- ⑱ — 25 amp. Rear defogger.
- ⑲ — 25 amp. Opera lamps, tail lights, license light, rear side marker.

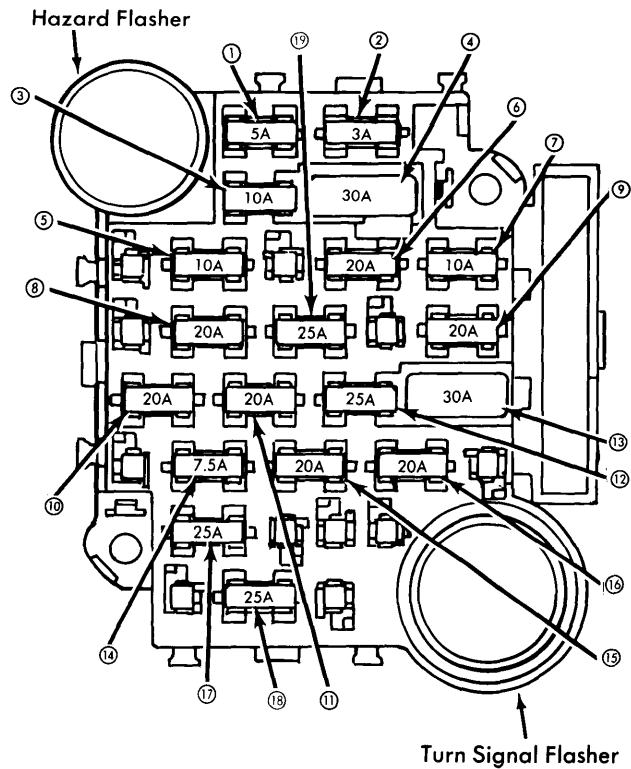


Fig. 2 Fuse Block for Cadillac (Except Seville and Eldorado)

CHEVROLET

FUSE BLOCK

Located under instrument panel near steering column.

FLASHER LOCATION

Hazard & Turn Signal — Refer to Turn Signal & Hazard Flasher Systems in ACCESSORIES & EQUIPMENT Section.

CIRCUIT BREAKERS

Headlights — Circuit breaker is integral with headlight switch to protect headlight circuit.

Windshield Wiper — Circuit breaker integral with windshield wiper switch to protect wiper circuit.

Power Seats & Power Windows — Circuit breaker is attached to firewall to protect electric motors.

IN-LINE FUSES

Air Conditioner — 30 amp. fuse located in wire between air conditioner relay and junction block.

FUSIBLE LINKS

Fuse link gauge size is marked on insulation and color matches wire being fused. Fuse links should always be four gauge sizes smaller than wire being fused.

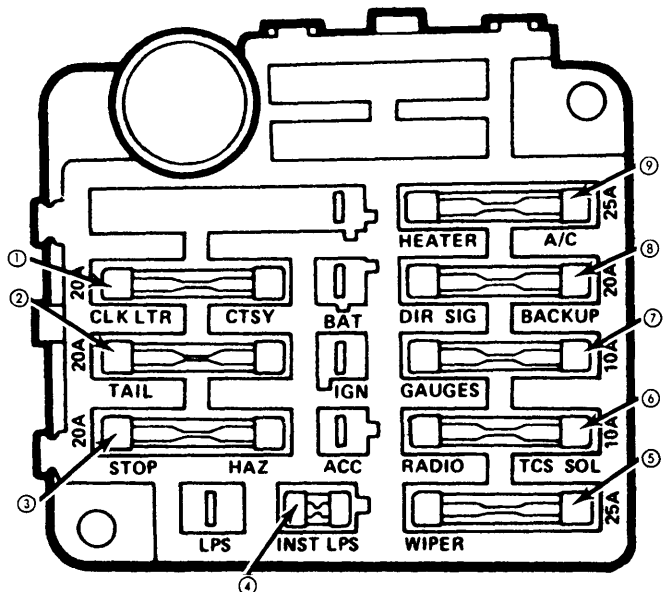


Fig. 1 Fuse Block for Camaro, Chevette, Corvette, Monza & Nova

