

CADILLAC (Cont.)

CADILLAC FUSE BLOCK CIRCUITS

- ① — **5 amp.** Rheostat controlled instrument panel lights.
- ② — **3 amp.** Cruise control.
- ③ — **10 amp.** Cornering, side marker and opera lights, right door ash tray light, instrument panel ash tray light.
- ④ — **30 amp.** Circuit breaker. Power windows and sunroof, and sun roof.
- ⑤ — **10 amp.** Back-up lights.
- ⑥ — **20 amp.** Air conditioner compressor feed, amplifier feed and relay coil feed, alternator telltale.
- ⑦ — **10 amp.** Antenna switch feed.
- ⑧ — **20 amp.** Turn signal lights.
- ⑨ — **20 amp.** Stop light switch and hazard warning flasher.
- ⑩ — **20 amp.** Oil pressure telltale, low brake telltale, coolant temperature telltale, fuel gauge, downshift switch, seat belt warning buzzer and light.
- ⑪ — **20 amp.** Key warning buzzer, engine temperature telltale, glove box light, instrument panel cigar lighter and courtesy lights.
- ⑫ — **25 amp.** Automatic Temperature Control blower.
- ⑬ — **30 amp.** Circuit breaker. Power door locks, power seats, horn and trunk release.
- ⑭ — **7.5 amp.** Radio.
- ⑮ — **20 amp.** Electronic fuel injection.
- ⑯ — **20 amp.** Body courtesy lights and cigar lighters.
- ⑰ — **25 amp.** Windshield wipers and washer; washer fluid level telltale light.
- ⑱ — **25 amp.** Rear defogger.
- ⑲ — **25 amp.** Opera lamps, tail lights, license light, rear side marker.

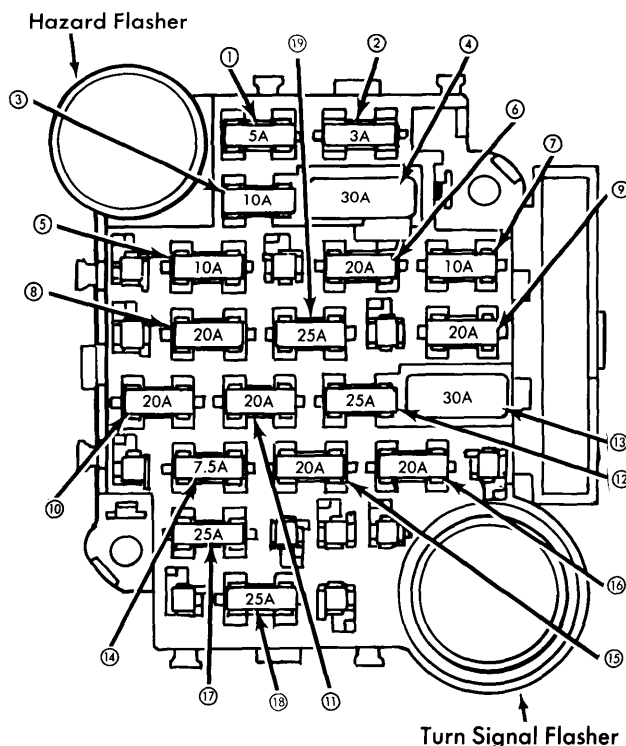


Fig. 2 Fuse Block for Cadillac & Eldorado

ELDORADO FUSE BLOCK CIRCUITS

- ① — **10 amp.** Cornering, side marker, opera, right door ash tray and instrument panel ash tray lights.
- ② — Vacant.
- ③ — **5 amp.** Rheostat controlled instrument panel lights.
- ④ — Vacant
- ⑤ — **10 amp.** Backup lights.
- ⑥ — **20 amp.** Air conditioner feed, amplifier feed, relay coil feed; alternator telltale.
- ⑦ — **10 amp.** Antenna switch feed.
- ⑧ — **20 amp.** Turn signal lights.
- ⑨ — **20 amp.** Stop light switch and hazard warning flasher.
- ⑩ — **20 amp.** Oil pressure, low brake and engine temperature telltale lights; fuel gauge, downshift switch, seat belt warning buzzer and light; level control compressor.

- ⑪ — **20 amp.** Key warning buzzer, engine telltale light, glove box light, instrument panel cigar lighter and courtesy lights.
- ⑫ — **25 amp.** Automatic Temperature Control blower.
- ⑬ — Vacant.
- ⑭ — **7.5 amp.** Radio.
- ⑮ — **20 amp.** Electronic fuel injection.
- ⑯ — **20 amp.** Body courtesy lights, cigar lighters and level control height sensor.
- ⑰ — **25 amp.** Windshield wiper and washer; washer fluid level telltale light.
- ⑱ — **25 amp.** Rear defogger.
- ⑲ — **25 amp.** Opera, tail, license and rear side marker lights.

CHEVROLET

FUSE BLOCK

Located under instrument panel, left side near steering column.

FLASHER LOCATION

Hazard & Turn Signal — Refer to Turn Signal & Hazard Flasher Systems in ACCESSORIES & EQUIPMENT Section.

CIRCUIT BREAKERS

Headlights — Circuit breaker is integral with headlight switch to protect headlight circuit.

Windshield Wiper — Circuit breaker integral with windshield wiper switch to protect wiper circuit.

Power Seats, Power Windows & Power Door Locks — Circuit breaker is attached to firewall to protect electric motors.

FUSIBLE LINKS

Fusible links are located in the engine compartment. Gauge size is marked on insulation and color matches wire being fused. Fusible links should always be four gauge sizes smaller than wire being fused.

CHEVROLET (Cont.)

The links are:

- Molded splice at starter solenoid "BAT" terminal, 14 gauge red wire.
- A 16 gauge red fusible link is located at junction block to protect all unfused wiring of 12 gauge or larger.
- The ammeter circuit is protected by 2 red 20 gauge wire links installed as molded splices at the junction block.

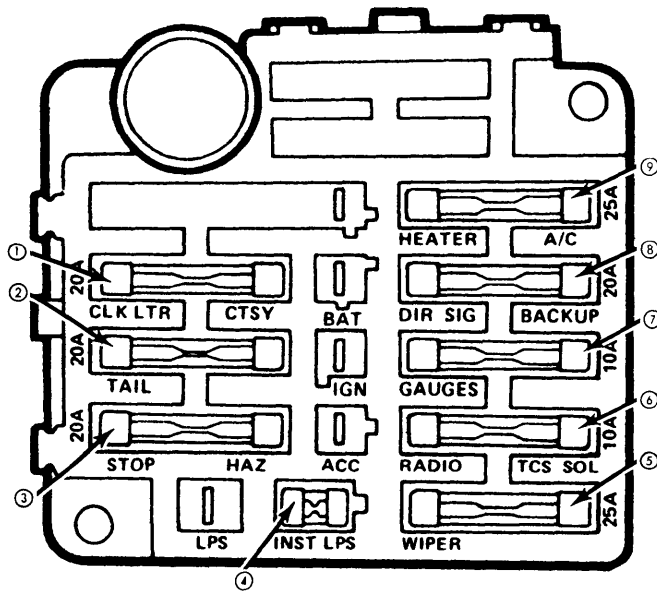


Fig. 1 Fuse Block for Camaro, Chevette, Monza & Nova

IMPALA & CAPRICE FUSE BLOCK CIRCUITS

- ① — 5 amp. Instrument and heater dial lights.
- ② — 25 amp. Heater and air conditioning.
- ③ — 20 amp. Instrument panel warning lights, gauges, cruise control, rear defogger override relay, seat belt warning and headlights warning buzzer.
- ④ — 20 amp. Tail, license, side marker and parking lights.
- ⑤ — 20 amp. Turn signal and backup lights.
- ⑥ — 20 amp. Key warning buzzer, luggage, courtesy, glove box lights; clock and cigar lighter.
- ⑦ — 10 amp. Radio, pulse wiper and choke pull off.
- ⑧ — 20 amp. Stop lights and hazard flasher.
- ⑨ — 25 amp. Windshield wiper and washer.
- ⑩ — 20 amp. Choke heater.

MALIBU, EL CAMINO, MONTE CARLO & CABALLERO FUSE BLOCK CIRCUITS

- ① — 5 amp. Instrument and heater dial lights.
- ② — 25 amp. Heater and air conditioner.
- ③ — 20 amp. Cruise control, gauges, warning lights, warning buzzers.
- ④ — 20 amp. Tail, license, parking and side marker lights.
- ⑤ — 20 amp. Turn signals and backup lights.
- ⑥ — 20 amp. Lighter, clock, key warning buzzer; courtesy dome, glove box and underhood lights.
- ⑦ — 10 amp. Radio, delay wiper and idle stop solenoid.
- ⑧ — 20 amp. Stop and hazard lights.
- ⑨ — 25 amp. Windshield wiper and washer.
- ⑩ — 20 amp. Choke heater.

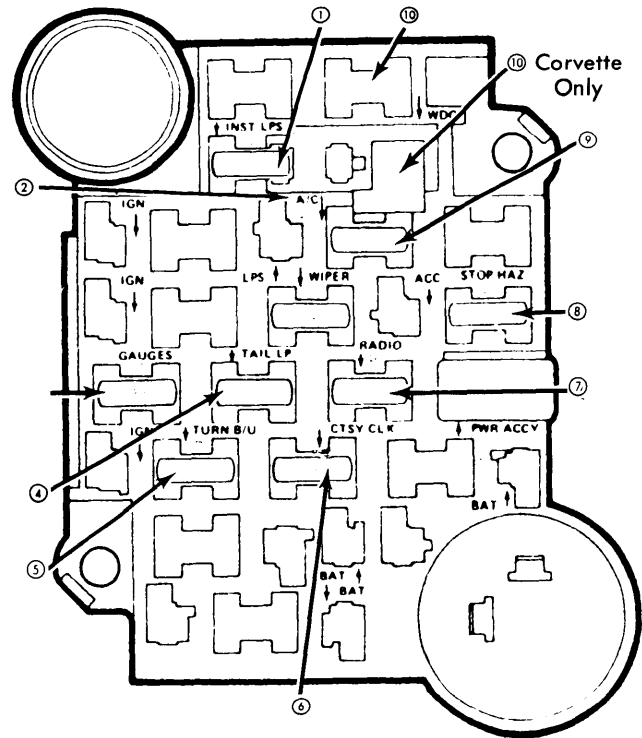


Fig. 2 Fuse Block for Impala, Caprice, Malibu, El Camino, Corvette and Monte Carlo (use "Mini" fuse)

CORVETTE FUSE BLOCK CIRCUITS

- ① — 5 amp. Instrument lights.
- ② — 25 amp. Heater and air conditioning.
- ③ — 10 amp. Gauges, telltale lights, cruise control, seat belt buzzer and power window relay.
- ④ — 20 amp. Tail, side marker, parking and underhood lights.
- ⑤ — 20 amp. Turn signals and backup lights.
- ⑥ — 20 amp. Clock, lighter, anti-theft alarm; dome, courtesy and glove box lights.
- ⑦ — 20 amp. Radio and rear window defogger.
- ⑧ — 20 amp. Stop and hazard lights; key warning buzzer.
- ⑨ — 25 amp. Windshield wiper and washer.
- ⑩ — 30 amp. Circuit breaker. Power window (Corvette only).

CAMARO, NOVA & CHEVETTE FUSE BLOCK CIRCUITS

NOTE — See Fig. 1 for fuse block illustration.

- ① — 20 amp. Dome, courtesy, luggage, glove box lights; clock, lighter and key warning buzzer.
- ② — 20 amp. Tail, parking, side markers, license and underhood lights.
- ③ — 20 amp. Stop and hazard lights.
- ④ — 4 amp. Instrument, radio, heater and windshield wiper switch lights.
- ⑤ — 25 amp. Windshield wiper and washer.
- ⑥ — 10 amp. Radio, idle stop solenoid.
- ⑦ — 10 amp. Gauges, cruise control, rear defogger, headlight buzzer, seat belt warning buzzer.

CHEVROLET (Cont.)

- ⑧ — **20 amp.** Turn signals and back-up lights.
- ⑨ — **25 amp.** Heater and air conditioner.

MONZA

NOTE — See Fig. 1 for fuse block illustration.

- ① — **20 amp.** Clock, dome, lighter, glove box lights; key warning buzzer.
- ② — **20 amp.** Tail, side marker and license lights.

- ③ — **20 amp.** Stop lights and hazard flasher.
- ④ — **4 amp.** Instrument panel, radio, heater, windshield wiper, cigar lighter lights.
- ⑤ — **25 amp.** Windshield wiper and washer pump.
- ⑥ — **10 amp.** Radio.
- ⑦ — **1 amp.** Electric fuel pump.
- ⑧ — **20 amp.** Turn signals, fuel gauge and temperature gauge, warning lights, seat belt warning, tachometer, backup lights and oil/choke light.
- ⑨ — **25 amp.** Heater and air conditioner.

CHRYSLER

FUSE BLOCK

NOTE — For LeBaron model see Dodge & Plymouth.

New Yorker, Newport & St. Regis — Fuse block is located on a bracket on lower edge of instrument panel, right of steering column.

Cordoba & Magnum — Fuse block is mounted on a bracket attached to right side of steering column support.

FLASHER LOCATION

Hazard & Turn Signal — Refer to Turn Signal & Hazard Flasher Systems in ACCESSORIES & EQUIPMENT Section.

Circuit Breakers — Circuit breakers are used to protect the following circuits: Headlights, Windshield wipers and Power Seats.

Fusible Links — Several fusible links may be used depending on the equipment options on vehicle. Correct problem before replacing any fusible link and always use fusible type wire with hypalon insulation and correct gauge wire for replacement.

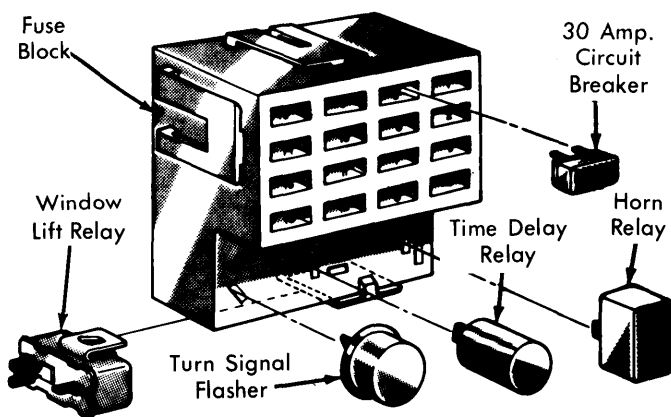


Fig. 1 Fuse Block for Chrysler New Yorker, Newport & Dodge St. Regis (Cordoba & Magnum Similar)

IN-LINE FUSES

Spotlight — **20 amp.**

NEW YORKER, NEWPORT & ST. REGIS FUSE BLOCK CIRCUITS

- ① — **4 amp.** Cluster, hood, park, brake, radio, digital clock, heated rear window switch cigar lighter and ash tray lights.
- ② — **20 amp.** Hazard flasher.
- ③ — **20 amp.** Stop, ignition, trunk, dome, vanity and map lights; ignition switch time delay relay, clock memory, digital radio memory and key/headlight on chime.
- ④ — Vacant
- ⑤ — **30 amp.** Circuit breaker. Power windows, seats and door lock solenoid.
- ⑥ — **20 amp.** Glove box light, horn, horn relay, cigar lighter and power antenna.
- ⑦ — **20 amp.** Cluster, turn signal, side marker, tail, license and opera lights; digital clock, and radio display dimming.
- ⑧ — **25 amp.** Reading, front and rear door courtesy and underpanel courtesy lights; door lock relay and door cigar lighters.
- ⑨ — **5 amp.** Radio
- ⑩ — **20 amp.** Backup, turn signal and cornering lights; A/C clutch and speed control.
- ⑪ — Vacant
- ⑫ — **30 amp.** A/C and heater blower motor, heated rear window relay and deck release solenoid.
- ⑬ — **5 amp.** Brake warning, oil pressure, door ajar, seat belt, low fuel and trunk ajar lights; voltage limiter, radio capacitor, seat belt chimes, window lift relay, fuel, oil and temperature gauge.
- ⑭ — Vacant
- ⑮ — Vacant
- ⑯ — Vacant

CORDOBA & MAGNUM FUSE BLOCK CIRCUITS

- ① — **4 amp.** Accessory switch title, A/C or heater control, ash tray, radio, cluster, gear selector and digital clock lights.
- ② — **20 amp.** Hazard flasher.
- ③ — Vacant
- ④ — Vacant
- ⑤ — **30 amp.** Circuit breaker. Power windows, seats and door locks.
- ⑥ — **20 amp.** Glove box, courtesy and ignition switch lights; ignition light time delay relay, horn relay and horns.
- ⑦ — **20 amp.** Tail, park, side marker, license, cluster and map lights; digital clock and key-in buzzer.
- ⑧ — **20 amp.** Stop, courtesy and trunk lights; cigar lighter.
- ⑨ — **5 amp.** Radio.
- ⑩ — **20 amp.** Backup and turn signal lights; A/C clutch.