

OLDSMOBILE (Cont.)

STARFIRE FUSE BLOCK CIRCUITS

- ① - 10 amp. Electric fuel pump.
- ② - 20 amp. Dome light, cigar light, clock.
- ③ - 20 amp. Tail and side marker lights.
- ④ - 20 amp. Stop and hazard warning lights.
- ⑤ - 4 amp. Instrument panel lights.
- ⑥ - 25 amp. Heater, air conditioner.
- ⑦ - 20 amp. Turn signals, back-up lights.
- ⑧ - 10 amp. Gauges, seat belt warning, low coolant warning, idle stop solenoid.
- ⑨ - 10 amp. Radio, defogger.
- ⑩ - 25 amp. Windshield wipers.

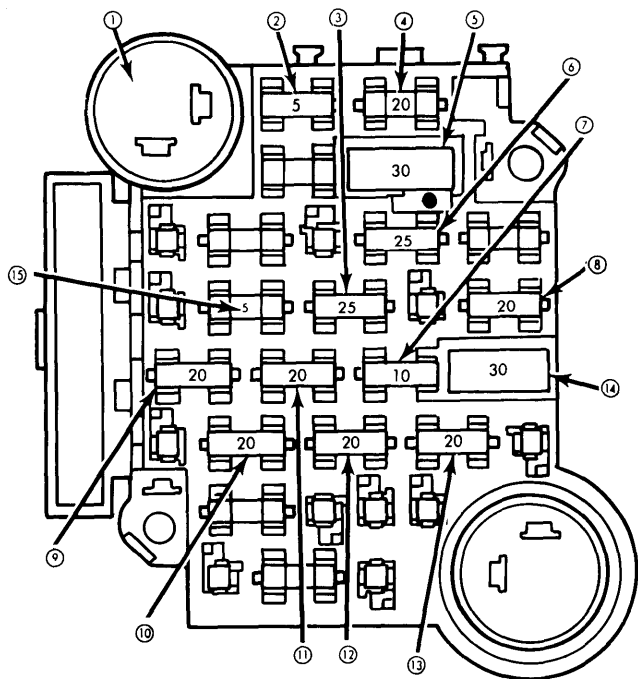


Fig. 3 Fuse Block for Cutlass

CUTLASS FUSE BLOCK CIRCUITS

- ① - Hazard warning flasher
- ② - 5 amp. Instrument panel and cruise control lights.
- ③ - 25 amp. Windshield wipers and washer.
- ④ - 20 amp. Electric choke.
- ⑤ - 30 amp. Circuit breaker. Electric windows.
- ⑥ - 25 amp. Level control, Heater and A/C.
- ⑦ - 10 amp. Radio and tape player.
- ⑧ - 20 amp. Stop and hazard warning lights.
- ⑨ - 20 amp. Trunk release, generator and parking brake light, seat belt warning, cruise control, pulse wiper and rear window defogger timer.
- ⑩ - 20 amp. Turn signal and backup lights.
- ⑪ - 20 amp. Cornering, tail, side marker, license and underhood lights.

- ⑫ - 20 amp. Power antenna, courtesy lights, clock and lighter.
- ⑬ - 20 amp. Dome, trunk, quarter panel, rear cigar lighter lights; radio capacitor.
- ⑭ - 30 amp. Circuit breaker. Door and seat back locks, power seats and rear window.
- ⑮ - 5 amp. Diesel controls.

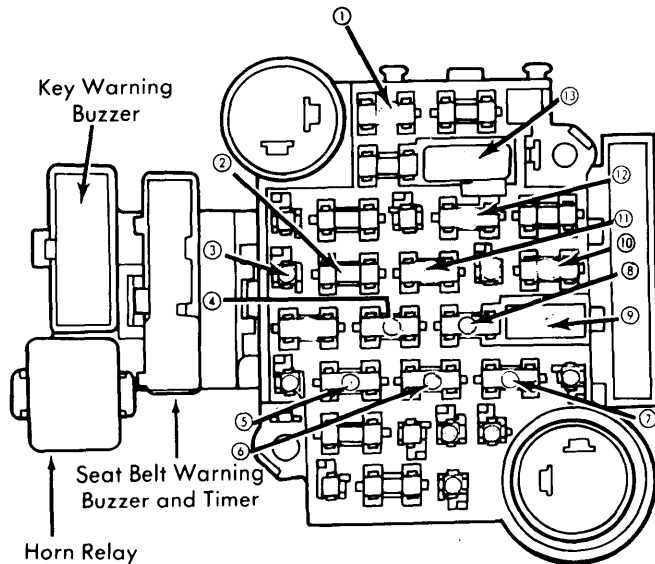


Fig. 4 Fuse Block for 88 & 98

88 & 98

- ① - 5 amp. Instrument panel, cruise control and fuel economy lights.
- ② - 5 amp. Diesel control.
- ③ - 20 amp. Generator and parking brake lights, seat belt warning, cruise control, pulse wiper and rear defogger timer.
- ④ - 20 amp. Cornering, tail, side marker, license and underhood lights.
- ⑤ - 20 amp. Turn signal and backup lights.
- ⑥ - 20 amp. Clock power antenna, front cigar lighter, console and courtesy lights.
- ⑦ - 20 amp. Dome, trunk, 1/4 panel, rear cigar lighter lights; radio capacitor.
- ⑧ - 10 amp. Radio and tape player.
- ⑨ - 30 amp. Circuit breaker. Station wagon rear window and power tailgate, door and seat back locks, power seats and rear window defogger power.
- ⑩ - 20 amp. Stop and hazard warning lights.
- ⑪ - 25 amp. Windshield wipers.
- ⑫ - 25 amp. Electronic level option, heater and air conditioner.
- ⑬ - 30 amp. Circuit breaker. Electric windows.

OLDSMOBILE Cont.)

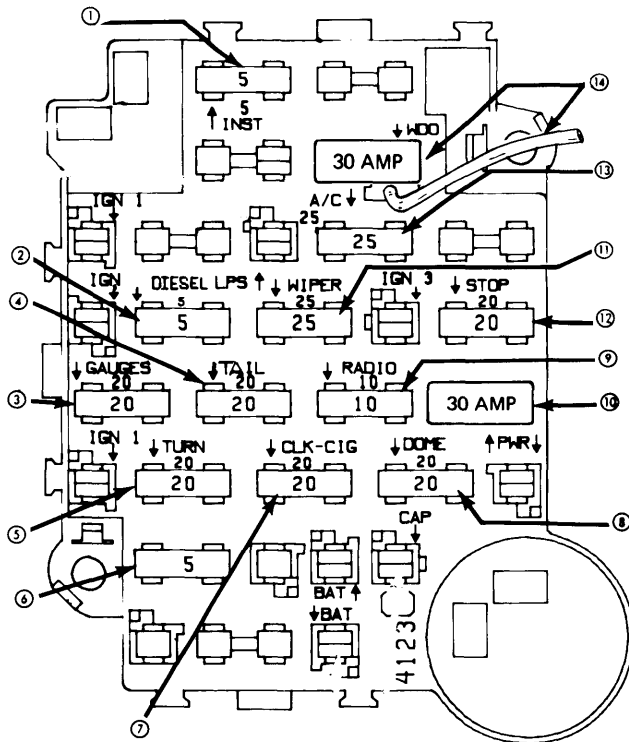


Fig. 5 Fuse Block for Toronado

TORONADO FUSE BLOCK CIRCUITS

- ① — 5 amp. Instrument panel lights.
- ② — 5 amp. Diesel control.
- ③ — 20 amp. Generator and parking brake light, seat belt warning, pulse wiper and rear defogger timer.
- ④ — 20 amp. Cornering, tail, side marker, license and underhood lights.
- ⑤ — 20 amp. Turn signal and backup lights.
- ⑥ — 5 amp. Cruise control.
- ⑦ — 20 amp. Clock, power antenna, front cigar lighter and courtesy lights.
- ⑧ — 20 amp. Dome, trunk, 1/4 panel lights; rear cigar lighter and radio capacitor.
- ⑨ — 10 amp. Radio and tape player.
- ⑩ — 30 amp. Circuit breaker. Door and seat back locks, power seats and rear window defogger power.
- ⑪ — 25 amp. Windshield wipers.
- ⑫ — 20 amp. Stop and hazard warning lights.
- ⑬ — 25 amp. Electronic level control, heater and air conditioner.
- ⑭ — 30 amp. Circuit breaker. Electric windows.

PONTIAC

FUSE BLOCK

On all models the fuse block requires opening the access door in the hush panel under left side of instrument panel.

FUSIBLE LINKS

Located in engine compartment protecting A/C blower motor, electric rear window defogger, power windows and power door locks.

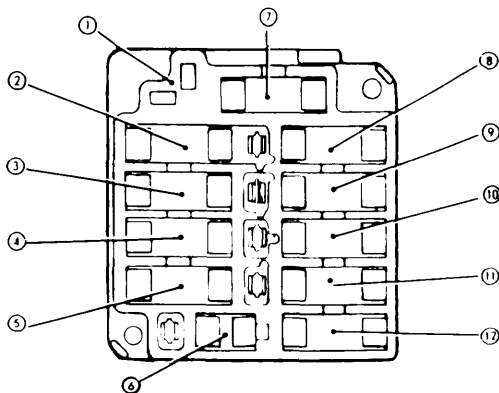


Fig. 1 Fuse Block for Firebird, Phoenix and Sunbird Models)

NOTE — Pontiac models codes are as follows: A (Lemans, Grand LeMans and Grand AM); B (Catalina, Bonneville and Bonneville Brougham); G (Grand Prix, SJ and LJ); F (Firebird, Firebird Esprit, Firebird Formula and Firebird Trans AM); H (Sunbird and Sunbird Sport); X (Phoenix and Phoenix LJ).

"H" MODEL FUSE BLOCK CIRCUIT

- ① — Hazard flasher.
- ② — 10 amp. Electric fuel pump.
- ③ — 20 amp. Cigar lighter and clock feed. Glove box and dome light, air conditioning anti-dieseling relay, key warning buzzer.
- ④ — 20 amp. License, tail front park and side marker lights.
- ⑤ — 20 amp. Stop light and hazard flasher.
- ⑥ — 4 amp. Instrument panel illumination, shift indicator and radio lights.
- ⑦ — Blank.
- ⑧ — 25 amp. Heater and A/C blower motor.
- ⑨ — 20 amp. Directional signals and back-up lights.
- ⑩ — 20 amp. Low coolant fuel gauge, brake warning, seat belt warning, heated rear glass, seat belt timer and buzzer, tachometer voltmeter, generator and temperature pressure telltale lights, controlled cycle wipers and electronic fuel control system.
- ⑪ — 10 amp. Radio and tape player.
- ⑫ — 25 amp. Windshield wiper and washer.

"X" MODEL FUSE BLOCK CIRCUITS

NOTE — See Fig. 1 for fuse block illustration.

- ① — Hazard flasher.
- ② — Vacant.
- ③ — 20 amp. Clock power, courtesy lights, glove box light, trunk and dome lights, cigar lighter and key reminder buzzer.

PONTIAC (Cont.)

- ④ — **20 amp.** Tail, park, side marker and license lights.
- ⑤ — **20 amp.** Stop and hazard lights
- ⑥ — **4 amp.** Instrument panel, ash tray, clock, shift indicator, radio, cigar, heater or A/C control, tachometer and windshield wiper switch lights; voltmeter gauge.
- ⑦ — Vacant.
- ⑧ — **25 amp.** Heater or A/C blower motor.
- ⑨ — **20 amp.** Backup lights and turn signals.
- ⑩ — **10 amp.** Oil pressure, temperature and voltage gauges; seat belt warning telltale, low brake and park brake telltale; fuel gauge, seat belt warning buzzer and timer; cruise control (V-8).
- ⑪ — **10 amp.** Radio, electric choke feed, rear window defogger blower, pulse wiper, idle speed-up solenoid and cruise control.
- ⑫ — **25 amp.** Windshield wiper and washer.

"F" MODEL FUSE BLOCK CIRCUITS

NOTE — See Fig. 1 for fuse block illustration.

- ① — Hazard flasher.
- ② — Vacant
- ③ — **20 amp.** Clock power, courtesy lights, deck lid release, glove box light, pulse wiper, power antenna, key reminder buzzer and cigar lighter.
- ④ — **20 amp.** Tail, park, side marker and license lights; digital AM/FM clock receiver.
- ⑤ — **20 amp.** Stop, hazard, dome and trunk lights
- ⑥ — **4 amp.** Instrument panel, ash tray, clock, shift indicator, radio, cigar, heater or A/C control, and tachometer lights.
- ⑦ — **20 amp.** Backup lights, turn signals and electric choke feed.
- ⑧ — **10 amp.** Oil pressure, voltage, temperature and fuel gauges; low brake, park brake and seat belt warning telltale; seat belt warning buzzer and timer (actuating coil) and heated rear glass (actuating coil feed).
- ⑨ — Vacant
- ⑩ — **25 amp.** Heater and A/C blower motor, window control relay, tachometer and cruise control.
- ⑪ — **10 amp.** Radio and tape player; digital AM/FM clock receiver, CB radio, power antenna and cruise control.
- ⑫ — **25 amp.** Windshield wiper and washer; pulse wiper.

"A", "B", & "G" MODELS FUSE BLOCK CIRCUITS

NOTE — See Fig. 2 for fuse block illustration. Miniature fuses are used.

- ① — Hazard flasher.
- ② — **5 amp.** Instrument panel, ash tray, clock, auto. trans. shift indicator, radio dial and cigar illumination. Heater or air conditioner control, fuel economy gauge, windshield wiper & headlight switch lights.
- ③ — **20 amp.** Electric choke feed.
- ④ — Vacant.
- ⑤ — **30 amp.** Circuit Breaker. Power windows, power rear window and sun roof.
- ⑥ — Ignition No. 1 Power conector for gauge fuse, heated rear glass relay actuating coil, radio suppression capacitor (B-V-6), pulse wiper (A & G), blower defogger (A).
- ⑦ — Vacant.
- ⑧ — Heated rear glass timer.
- ⑨ — **25 amp.** Heater and A/C blower motor.

- ⑩ — Vacant.
- ⑪ — See item 6.
- ⑫ — Vacant
- ⑬ — **25 amp.** Windshield wiper and washer.
- ⑭ — Cruise control.
- ⑮ — **20 amp.** Stop and hazard lights; key warning buzzer.
- ⑯ — **20 amp.** Oil pressure, temperature and fuel gauges; low brake and seat belt warning telltale; seat belt warning buzzer, deck lid release, tailgate unlock, tachometer and pulse wiper (A&G), heated rear glass relay and rear blower defogger.
- ⑰ — **20 amp.** Tail, cornering (B&G), side marker and license lights.
- ⑱ — **10 amp.** Radio and tape player, CB and power antenna.
- ⑲ — **30 amp.** Circuit Breaker. Power connection for item no. 8 and 24.
- ⑳ — See item 6.
- ㉑ — **20 amp.** Backup lights and directional signals.
- ㉒ — **20 amp.** Clock power, cigar lighter, courtesy lights, glove box light, pulse wiper feed, power antenna, to horns, digital AM/FM clock receiver and automatic level control.
- ㉓ — **20 amp.** Vanity dome, trunk, door courtesy and warning lights; radio suppression capacitor (B-V8).
- ㉔ — Power connector for electric door locks and power seats.
- ㉕ — Vacant
- ㉖ — Vacant.
- ㉗ — Power connection for clock, lighter, power antenna.
- ㉘ — Power connection for dome light fuse, radio suppression capacitor.
- ㉙ — Power connection for radio fuse and tailgate ajar lamp (B).
- ㉚ — Vacant.
- See item 27.
- Directional signal flasher.

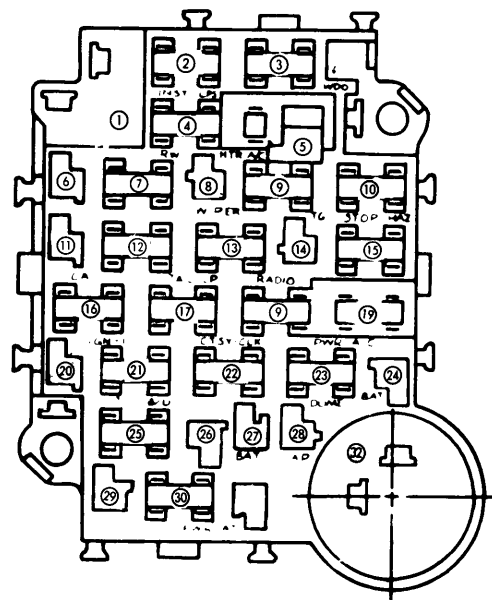


Fig. 2 Fuse Block for LeMans, Grand Prix, Catalina and Bonneville Models