

## OLDSMOBILE Cont.)

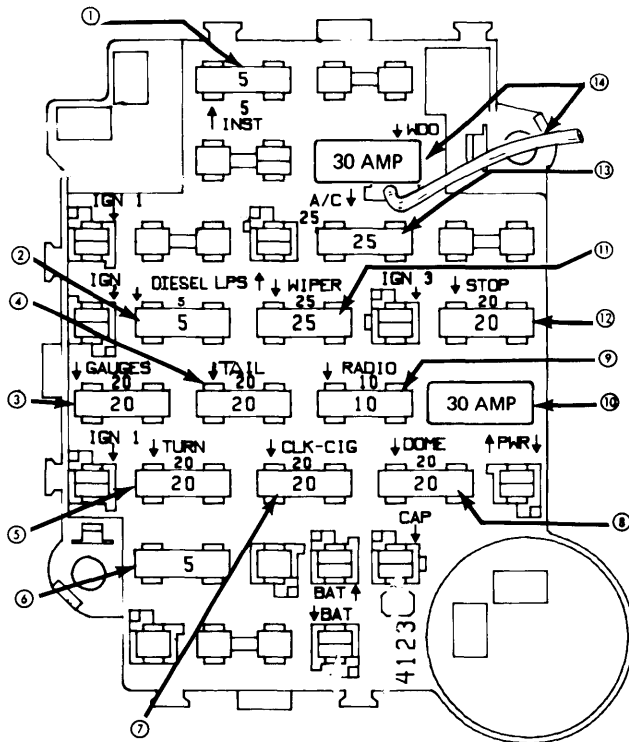


Fig. 5 Fuse Block for Toronado

## TORONADO FUSE BLOCK CIRCUITS

- ① — 5 amp. Instrument panel lights.
- ② — 5 amp. Diesel control.
- ③ — 20 amp. Generator and parking brake light, seat belt warning, pulse wiper and rear defogger timer.
- ④ — 20 amp. Cornering, tail, side marker, license and underhood lights.
- ⑤ — 20 amp. Turn signal and backup lights.
- ⑥ — 5 amp. Cruise control.
- ⑦ — 20 amp. Clock, power antenna, front cigar lighter and courtesy lights.
- ⑧ — 20 amp. Dome, trunk, 1/4 panel lights; rear cigar lighter and radio capacitor.
- ⑨ — 10 amp. Radio and tape player.
- ⑩ — 30 amp. Circuit breaker. Door and seat back locks, power seats and rear window defogger power.
- ⑪ — 25 amp. Windshield wipers.
- ⑫ — 20 amp. Stop and hazard warning lights.
- ⑬ — 25 amp. Electronic level control, heater and air conditioner.
- ⑭ — 30 amp. Circuit breaker. Electric windows.

## PONTIAC

## FUSE BLOCK

On all models the fuse block requires opening the access door in the hush panel under left side of instrument panel.

## FUSIBLE LINKS

Located in engine compartment protecting A/C blower motor, electric rear window defogger, power windows and power door locks.

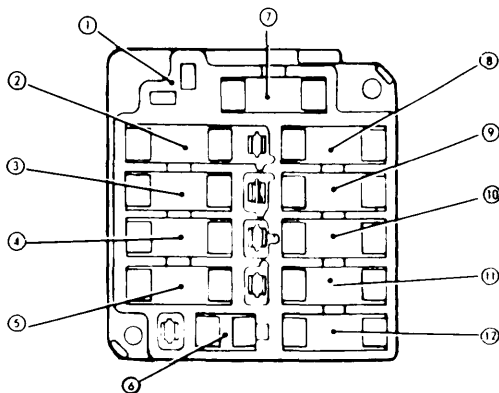


Fig. 1 Fuse Block for Firebird, Phoenix and Sunbird Models)

**NOTE** — Pontiac models codes are as follows: A (Lemans, Grand LeMans and Grand AM); B (Catalina, Bonneville and Bonneville Brougham); G (Grand Prix, SJ and LJ); F (Firebird, Firebird Esprit, Firebird Formula and Firebird Trans AM); H (Sunbird and Sunbird Sport); X (Phoenix and Phoenix LJ).

## "H" MODEL FUSE BLOCK CIRCUIT

- ① — Hazard flasher.
- ② — 10 amp. Electric fuel pump.
- ③ — 20 amp. Cigar lighter and clock feed. Glove box and dome light, air conditioning anti-dieseling relay, key warning buzzer.
- ④ — 20 amp. License, tail front park and side marker lights.
- ⑤ — 20 amp. Stop light and hazard flasher.
- ⑥ — 4 amp. Instrument panel illumination, shift indicator and radio lights.
- ⑦ — Blank.
- ⑧ — 25 amp. Heater and A/C blower motor.
- ⑨ — 20 amp. Directional signals and back-up lights.
- ⑩ — 20 amp. Low coolant fuel gauge, brake warning, seat belt warning, heated rear glass, seat belt timer and buzzer, tachometer voltmeter, generator and temperature pressure telltale lights, controlled cycle wipers and electronic fuel control system.
- ⑪ — 10 amp. Radio and tape player.
- ⑫ — 25 amp. Windshield wiper and washer.

## "X" MODEL FUSE BLOCK CIRCUITS

**NOTE** — See Fig. 1 for fuse block illustration.

- ① — Hazard flasher.
- ② — Vacant.
- ③ — 20 amp. Clock power, courtesy lights, glove box light, trunk and dome lights, cigar lighter and key reminder buzzer.

