

## OLDSMOBILE

### FUSE BLOCK


**Starfire** — Uses conventional fuses.

**All Other Models** — Use miniaturized fuses.

Fuse block is located under the instrument panel to left of steering column just behind parking brake on all models except Omega. Omega fuse block is located under right side of instrument panel.

#### "Mini" Fuse Color Table

Fuse (Amps)	Color Stripe
3	Violet
5	Tan
7.5	Brown
10	Red
20	Yellow
25	White

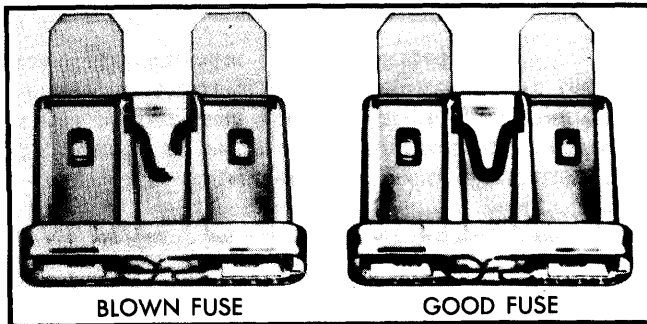

**Fig. 1 Miniaturized Fuse for All Models Except Starfire**

### FLASHER LOCATION

**Hazard** — Located on fuse block on all models.

**Turn Signal** — Located on fuse block on all models except Omega and Starfire. Omega flasher is located below steering column. Starfire flasher is located on a spring clip on parking brake bracket.

### CIRCUIT BREAKERS

**Headlights** — Circuit breaker is located in headlight switch.

**Power Windows** — Circuit breaker is located at front of fuse block.


**Power Seats** — Circuit breaker is located at front of fuse block.

**Windshield Wipers** — Circuit breaker is located in wiper motor.

### FUSIBLE LINKS

**Starfire** — The red 14 gauge fusible link connects between the battery terminal of the transistorized regulator and the positive battery terminal. The red 16 gauge fusible link connects between the dash connector and the accessory power feed.

**All Other Models** — Two fusible links are located at the starter solenoid terminal to protect the electrical system.

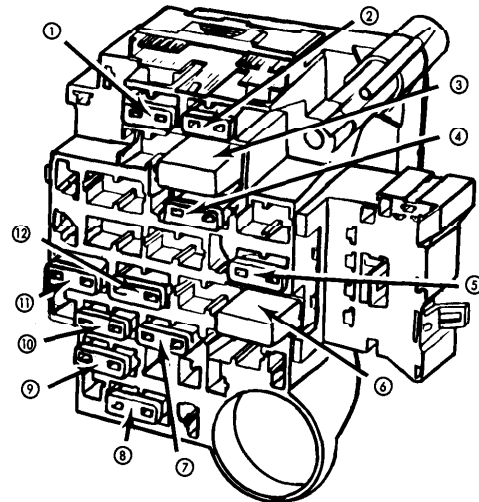

**Fig. 2 Fuse Block for Omega**

### OMEGA FUSE BLOCK CIRCUITS

- ① — **5 amp. (Tan)** Instrument illumination and cruise control lights.
- ② — **20 amp. (Yellow)** Choke heater and cooling fan.
- ③ — **30 amp.** Circuit breaker. Power windows.
- ④ — **25 amp. (White)** Air conditioning blower and compressor, heater, idle stop solenoid and trunk release.
- ⑤ — **20 amp. (Yellow)** Idle stop solenoid, hazard, front parking, front marker and stop lights.
- ⑥ — **30 amp.** Circuit breaker. Power door locks, power seats and rear window defogger.
- ⑦ — **20 amp. (Yellow)** Air conditioning anti-dieseling relay, cigar lighter, clock, C-4 system, courtesy lights, key warning, trunk light, vanity light, power antenna, power door locks and radio capacitor.
- ⑧ — **10 amp. (Red)** Cruise control, radio and power antenna.
- ⑨ — **25 amp. (White)** Windshield wipers and washers and wiper/washer delay.
- ⑩ — **20 amp. (Yellow)** Turn signal, front parking, front marker, hazard and back-up lights.
- ⑪ — **20 amp. (Yellow)** Air conditioning anti-dieseling relay, brake warning indicator, choke heater, C-4 system, rear window defogger, fuel gauge, idle stop solenoid, ignition, map light, seat belt warning and warning indicators.
- ⑫ — **20 amp. (Yellow)** Front parking, front marker, rear parking, rear marker and license lights.

### STARFIRE FUSE BLOCK CIRCUITS

- ① — **10 amp.** Electric fuel pump.
- ② — **20 amp.** Dome light, cigar light, clock.
- ③ — **20 amp.** Tail and side marker lights.
- ④ — **20 amp.** Stop and hazard warning lights.
- ⑤ — **4 amp.** Instrument panel lights.
- ⑥ — **25 amp.** Heater, air conditioner.
- ⑦ — **20 amp.** Turn signals, back-up lights.
- ⑧ — **10 amp.** Gauges, seat belt warning, low coolant warning, idle stop solenoid.
- ⑨ — **10 amp.** Radio, defogger.
- ⑩ — **25 amp.** Windshield wipers.