

CHEVROLET (Cont.)

CORVETTE FUSE BLOCK CIRCUITS

- ① - 7.5 amp. (Brown) Instrument panel lights.
- ② - Not Used.
- ③ - 30 amp. Circuit breaker. Power windows.
- ④ - 10 amp. (Red) Electronic Control Module.
- ⑤ - 25 amp. (White) Air conditioning and heater.
- ⑥ - 20 amp. (Yellow) Stop and hazard lights and key warning buzzer.
- ⑦ - 25 amp. (White) Windshield wipers and washers.
- ⑧ - 10 amp. (Red) Radio.
- ⑨ - 30 amp. Circuit breaker. Power accessories.
- ⑩ - 20 amp. (Yellow) Clock, cigar lighter, courtesy lights, theft alarm, glove box light, dome light, power antenna, horn relay and power door locks.
- ⑪ - 30 amp. Auxiliary cooling fan.
- ⑫ - 20 amp. (Yellow) Back-up and turn signal lights.
- ⑬ - 20 amp. (Yellow) Parking, side marker, engine compartment and tail lights.
- ⑭ - 20 amp. (Yellow) Gauges, warning lights, seat belt buzzer light, power window relay and cruise control.
- ⑮ - Not Used.

CHRYSLER CORP.

FUSE BLOCK

Fuse block is located under left side of instrument panel on all models except Newport, New Yorker, Gran Fury and St. Regis. Fuse block on these models is located above and to the rear of the accelerator pedal. Blade type fuses are used, with the amperage rating stamped on the top of each fuse. In addition, the fuses are color coded to amperage rating. Colors are shown on the fuse charts.

FLASHER LOCATION

Hazard - Flasher is located on fuse block on all models except Gran Fury, St. Regis, Newport, New Yorker and Imperial. Flasher on these models is located on the wiring harness near the fuse block.

Turn Signal - All models have the flasher located on the fuse block.

CIRCUIT BREAKER

Headlights - All models have a circuit breaker integral with the headlight switch to protect the headlight circuit.

Windshield Wipers - All models have a circuit breaker integral with the wiper switch to protect the circuit.

Concealed Headlight Doors - Gran Fury, St. Regis, Newport and New Yorker models have a 5 amp. breaker in the relay to protect the system.

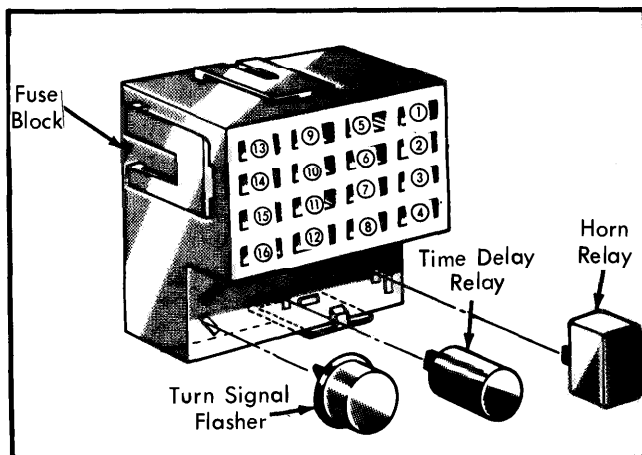


Fig. 1 Fuse Block for Newport, New Yorker, Gran Fury, St. Regis & Imperial

Vanity Mirror - All models except Horizon, Omni, Aries and Reliant have a 1.5 amp. breaker located on the visor to protect the mirror circuit.

Power Sun Roof - Gran Fury, St. Regis, Newport, New Yorker, Diplomat and Le Baron models have a 15 amp. breaker located in the left side cowl to protect the roof system.

Power Moon Roof - Cordoba, Mirada and Imperial models have a 15 amp. breaker located on the side of the fuse block to protect the moon roof system.

Fusible Links - Several fusible links may be used depending on the equipment options on vehicle. Correct problem before replacing any fusible link and always use fusible type wire with hypalon insulation and correct gauge wire for replacement.

FUSE BLOCK CIRCUITS FOR NEWPORT, NEW YORKER, GRAN FURY, ST. REGIS & IMPERIAL

- ① - 20 amp. (Yellow) Hazard lights.
- ② - 30 amp. Circuit breaker on all except Imperial. Passenger side power seat motors.
- ③ - 20 amp. (Yellow) Imperial only. EFI in-tank fuel pump.
- ④ - 30 amp. Circuit breaker. Power window motors on all models. Power sun roof motor and illuminated entry sense on all except Imperial.
- ⑤ - 30 amp. (Lt. Green) Air conditioning and heater blower motor, heated rear window relay and deck lid release solenoid on all models. Illuminated entry sense on Imperial only.
- ⑥ - 20 amp. (Yellow) Parking, side marker, tail, license opera, clock and radio display lights on all models. Electronic cluster display illumination on Imperial only.
- ⑦ - 25 amp. (Clear) Imperial only. Stop, door, map, reading, key cylinder, trunk, ignition switch, underhood, vanity and under panel lights. Electric mirror motors, ignition switch time delay relay, chimes, radio memory, illuminated entry, electronic cluster memory, security alarm and electronic cluster seat switch.
- ⑧ - 20 amp. (Yellow) All except Imperial. Stop, dome, vanity, map and trunk lights. Ignition switch time delay relay, chimes, digital and CB radio memory and electronic digital clock memory.
- ⑨ - 25 amp. (Clear) Horn, horn relay, power antenna, cigar lighter, glove box light.
- ⑩ - 30 amp. Circuit breaker. Power seats and door locks.
- ⑪ - 20 amp. (Yellow) All except Imperial. Spot light for fleet vehicles.

CHRYSLER CORP. (Cont.)

- ⑩ - **20 amp. (Yellow)** All except Imperial. Spot light for fleet vehicles.
- ⑪ - **5 amp. (Tan)** Brake warning, oil pressure, seat belt and door ajar lights, chimes and speed control on all models. Temperature indicator, cluster electronics, fuel level sensor, charge light, low voltage light and speed sensor on Imperial only. Low fuel light, voltage limiter, fuel and temperature gauges, radio capacitor and fleet oil gauge on all models except Imperial.
- ⑫ - **20 amp. (Yellow)** Heated side view mirror on Imperial only. Under panel light, door courtesy lights, reading light, cigar lighter, door lock relay and illuminated entry on all models except Imperial.
- ⑬ - **4 amp. (Pink)** Cluster, title, radio illumination and radio display dimming on Imperial only. Cluster, radio, Air conditioning and heater lights, cigar lighter, ash tray light, hood and parking brake lights, heated rear window lights and digital clock display control on all models except Imperial.
- ⑭ - **20 amp. (Yellow)** Power amplifier.
- ⑮ - **5 amp. (Tan)** Radio and power antenna control on all models. Electronic clock display on all models except Imperial.
- ⑯ - **20 amp. (Yellow)** Turn signal, back-up and cornering lights, air conditioning clutch and slow idle solenoid.

- ⑰ - **20 amp. (Yellow)** Cluster, parking, tail, license, side marker and opera lights. Search tune radio and cassette lights. Map, dome and trunk lights on Le Baron and Diplomat. Turn signal lights on Cordoba and Mirada.
- ⑱ - **20 amp. (Yellow)** All except Cordoba and Mirada. Map, glove box, door ajar, courtesy, vanity, reading and stop lights. Seat belt, key and headlight warning buzzer. Ignition delay relay, power door lock relay, chimes and illuminated entry.
- ⑲ - **20 amp. (Yellow)** Cordoba and Mirada only. Stop, ignition, trunk, vanity mirror, map, reading, under-panel, courtesy, pillar, door lock and front header lights. Key buzzer, ignition switch to relay, clock memory, radio memory, illuminated entry and electronic chimes.
- ⑳ - **20 amp. (Yellow)** Horn, horn relay, glove box light, power antenna and cigar lighter. Stop lights, clock feed and search tune radio memory on Le Baron and Diplomat only.
- ㉑ - **30 amp.** Circuit breaker. Power door locks and power seats.
- ㉒ - Not used.
- ㉓ - Not used.
- ㉔ - **5 amp. (Tan)** Brake warning, oil pressure, door ajar, seat belt lights, seat belt buzzer, gauges and voltage limiter. Tailgate and low washer fluid light on Le Baron and Diplomat. Low fuel warning, radio capacitor and speed control on Cordoba and Mirada.
- ㉕ - Not used.
- ㉖ - **4 amp. (Pink)** Cordoba and Mirada only. Air conditioning and heater control, cluster, hood and parking brake lights, heated rear window, cigar lighter, ash tray, digital clock, radio and shift indicator lights.
- ㉗ - **3 amp. (Violet)** Le Baron and Diplomat only. Cluster, parking brake, radio, digital clock, heated rear window, air conditioning or ATC heater control, cigar lighter and ash tray lights. Search tune and CB radio display dimming.
- ㉘ - **20 amp. (Yellow)** Cordoba and Mirada only. Premium speaker relay and rear amplifier.
- ㉙ - **6 amp.** Circuit breaker. Le Baron and Diplomat only. Rear wiper/washer, liftgate relay and deck lid release solenoid.
- ㉚ - **5 amp. (Tan)** Power antenna controller, radio and digital clock display.
- ㉛ - **20 amp. (Yellow)** Back-up and turn signal lights, idle stop solenoid and air conditioning clutch. Cornering lights on Cordoba and Mirada only.

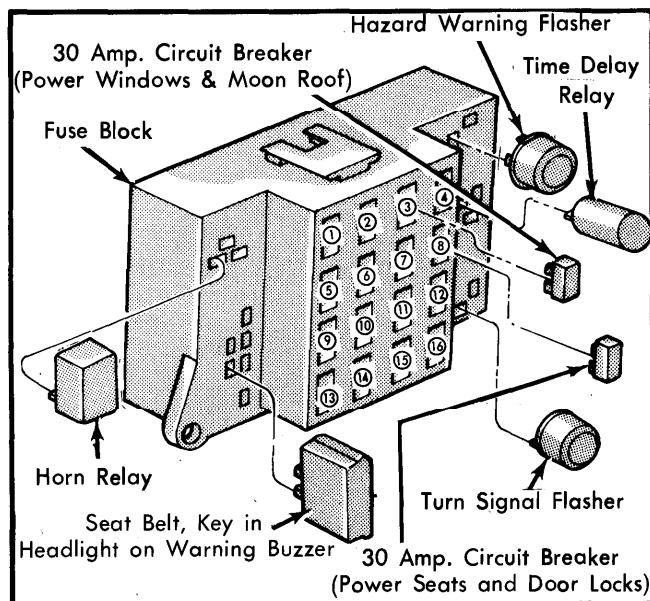


Fig. 2 Fuse Block for Cordoba, Mirada, Diplomat, Le Baron, Aries & Reliant

CORDOBA, MIRADA, DIPLOMAT & LE BARON FUSE BLOCK CIRCUITS

- ① - **20 amp. (Yellow)** Hazard warning lights.
- ② - **20 amp. (Yellow)** Le Baron and Diplomat only. Speed control, heated rear window and cornering lights.
- ③ - **30 amp.** Circuit breaker. Power windows and moon roof.
- ④ - **20 amp. (Yellow)** Heater and air conditioning blower motor. Heated rear window relay, deck lid release, illuminated entry sense and cornering lights on Cordoba and Mirada only.
- ⑤ - **30 amp. (Lt. Green)** Le Baron and Diplomat only. Automatic temperature control and heater blower motor.

ARIES & RELIANT FUSE BLOCK CIRCUITS

- ① - **20 amp. (Yellow)** Hazard warning flashers.
- ② - **5 amp. (Tan)** Speed control and heated rear window relay.
- ③ - **20 amp. (Yellow)** Air conditioning radiator fan motor.
- ④ - **20 amp. (Yellow)** Heater blower motor. **30 amp. (Lt. Green)** Air conditioning blower motor.
- ⑤ - **20 amp. (Yellow)** Parking, tail, side marker, license, cluster and clock intensity lights.
- ⑥ - **20 amp. (Yellow)** Stop, dome, trunk, cargo and ignition switch lights. Headlight/key warning buzzer and time delay relay.
- ⑦ - **20 amp. (Yellow)** Glove box light, horn, horn relay, cigar lighter and clock memory.