

CHRYSLER CORP.

FUSE BLOCK

Fuse block is located under left side of instrument panel on all models. Blade type fuses are used, with the amperage rating stamped on top of each fuse.

FLASHER LOCATION

Hazard — Flasher is located on fuse block on all models except Aries, Reliant, LeBaron, 400 and Imperial. Flasher on these models is located in wire harness near fuse block.

Turn Signal — All models have the flasher located on the fuse block.

CIRCUIT BREAKER

Headlights — All models have a circuit breaker integral with the headlight switch to protect the headlight circuit.

Windshield Wipers — All models have a circuit breaker integral with the wiper switch to protect the circuit.

Concealed Headlamp Doors — A circuit breaker is located in the relay to protect the concealed headlamp door system.

Vanity Mirror — A 1.5 amp. circuit breaker is located on the visor to protect the mirror circuit.

Power Sun Roof — A 15 amp. circuit breaker is located in the left side cowl to protect the sun roof system.

Fusible Links — Several fusible links may be used depending on the equipment options on vehicle. Correct problem before replacing any fusible link and always use fusible type wire with hypalon insulation and correct gauge wire for replacement.

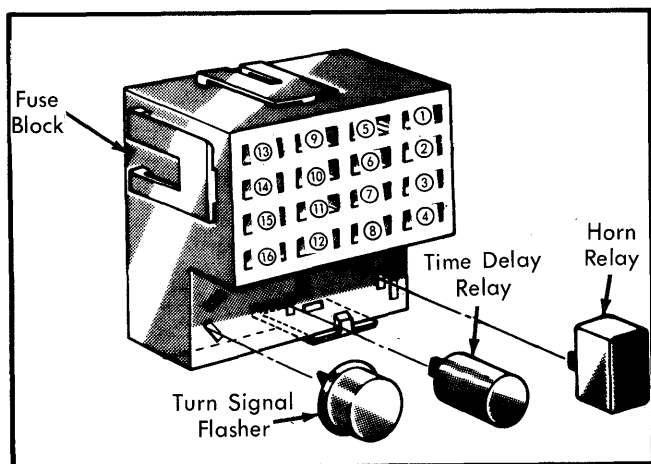


Fig. 1 Fuse Block for Aries, Reliant, LeBaron, 400 & Imperial

ARIES, IMPERIAL, LeBARON, RELIANT & 400 FUSE BLOCK CIRCUITS

- ① — 20 Amp. (Yellow) Hazard flasher.
- ② — 20 Amp. (Yellow) Imperial Only. In-tank fuel pump. 5 Amp. (Tan) All Other Models. Speed control, defogger relay, door ajar indicator, low washer fluid indicator, low fuel indicator, cornering, trunk and tailgate ajar lights.

- ③ — 30 Amp. Circuit Breaker. Power windows.
- ④ — 30 Amp. (Lt. Gray) Imperial Only. Automatic temperature control blower motor, defogger relay, deck lid release, illuminated entry sense. 25 Amp. (Natural) All Other Models. Heater blower motor, OR 30 Amp. (Lt. Green) Air conditioning blower motor.
- ⑤ — 20 Amp. (Yellow) Parking, tail, license, side marker, clock, instrument cluster and radio lights.
- ⑥ — 20 Amp. (Yellow) All Except Imperial. Stop, dome, map, trunk, cargo, vanity and ignition switch lights. Time delay relay and door courtesy lights.
- ⑥ — 25 Amp. (Natural) Imperial Only. Stop, door, map, reading, key cylinder, trunk, ignition switch, underhood, vanity and underpanel lights. Electric mirror motors, ignition switch time delay relay, chimes, radio memory, illuminated entry, electronic cluster memory, security alarm and seat switch.
- ⑦ — 20 Amp. (Yellow) All Except Imperial. Glove box light, horns, horn relay, cigar lighter, clock, radio memory, liftgate ajar warning, key in/headlamp on warning.
- ⑦ — 25 Amp. (Natural) Imperial Only. Horn, horn relay, cigar lighter, power antenna and glove box light.
- ⑧ — 30 Amp. Circuit Breaker. Power door locks and seats.
- ⑨ — 20 Amp. (Yellow) Right spotlight (fleet vehicles only). Not used on Imperial.
- ⑩ — 20 Amp. (Yellow) Left spotlight (fleet vehicles only). Not used on Imperial.
- ⑩ — 5 Amp. (Tan) Brake warning, seat belt warning and low fuel sensor on all models. Engine warning and electronic voltage lights, fuel gauge, voltage limiter, voltmeter, temperature and oil gauge on all except Imperial. Oil pressure, door ajar and temperature indicators, speed control, cluster electronics, charge light, low voltage light and chimes on Imperial only.
- ⑫ — 20 Amp. (Yellow) Heated side mirror on Imperial. Air conditioning radiator fan motor on all other models.
- ⑬ — 4 Amp. (Pink) Imperial Only. Cluster, title and radio illumination and radio display dimming.
- ⑬ — 3 Amp. (Violet) All Except Imperial. Cluster, air conditioning and heater lights, console gear light, defogger, rear wiper/washer, radio lights and clock display dimming.
- ⑭ — 20 Amp. (Yellow) Imperial Only. Radio power booster. 6 Amp. Circuit Breaker. All Other Models. Deck lid release, liftgate release, rear wiper/washer and speaker relay.
- ⑮ — 5 Amp. (Tan) Radio on all models. Clock display and speaker relay sense on all except Imperial. Power antenna controller on Imperial.
- ⑮ — 20 Amp. (Yellow) Back-up and turn signal lights, air conditioning clutch and idle stop solenoid on all models. Air conditioning fan relay coil on all except Imperial. Cornering lights on Imperial only.

CORDOBA, DIPLOMAT, GRAN FURY, MIRADA & NEW YORKER FUSE BLOCK CIRCUITS

- ① — 20 Amp. (Yellow) Hazard warning flashers.
- ② — 20 Amp. (Yellow) All Except Cordoba and Mirada. Speed control, heated rear window and cornering lights.
- ③ — 30 Amp. Circuit Breaker. Power windows and moon roof.

CHRYSLER CORP. (Cont.)

- ④ - **30 Amp. (Lt. Green)** Air conditioning and heater blower motor on all. Heated rear window relay, deck lid solenoid, illuminated entry sense and cornering lights on Cordoba and Mirada only.
- ⑤ - **20 Amp. (Yellow)** Cluster, tail, side marker, license, opera and dome lights on all. Dome, trunk, map and CB radio lights on all except Cordoba and Mirada. Turn signal, radio display and cassette lights on Cordoba and Mirada.
- ⑥ - **20 Amp. (Yellow)** Stop, mirror, map, reading and courtesy lights, key in buzzer, ignition relay, illuminated entry and chimes on all models. Glove box and open door light, seat belt and headlight warning and power door lock relay on all except Cordoba and Mirada. Ignition switch, trunk, "B" pillar, door lock and front header lights, clock memory and radio memory on Cordoba and Mirada only.
- ⑦ - **20 Amp. (Yellow)** Horn, horn relay, cigar lighter, power antenna and glove box light on all models. Stop lights, clock feed and radio memory on all except Cordoba and Mirada.
- ⑧ - **30 Amp. Circuit Breaker.** Power seats and door lock solenoids.
- ⑨ - Not Used.
- ⑩ - Not Used.
- ⑪ - **5 Amp. (Tan)** Brake warning, oil pressure, door ajar, and seat belt lights, voltage limiter, temperature and fuel gauges on all models. Low fuel warning indicator, radio capacitor, seat belt buzzer and speed control on Cordoba and Mirada. Tailgate light, low washer fluid light, fuel, oil and temperature gauges and seat belt buzzer on all except Cordoba and Mirada.
- ⑫ - Not Used.
- ⑬ - **3 Amp. (Violet)** All Except Cordoba and Mirada. Cluster, parking brake, radio, clock, defogger, air conditioning, heater, ash tray, cigar lighter and radio display dimming lights.
- ⑭ - **4 Amp. (Pink)** Cordoba and Mirada Only. Air conditioning, heater, cluster, hood, parking brake, defogger, cigar lighter, ash tray, clock, radio and gear selector lights.

- ⑮ - **6 Amp. Circuit Breaker. All Except Cordoba and Mirada.** Rear wiper/washer, liftgate and decklid solenoid.
- ⑯ - **20 Amp. (Yellow)** Cordoba and Mirada Only. Premium speaker relay and rear amplifier.
- ⑰ - **5 Amp. (Tan)** Power antenna, digital clock display and radio.
- ⑱ - **20 Amp. (Yellow)** Back-up and turn signal lights, air conditioning clutch and slow idle solenoid on all. Cornering lights on Cordoba and Mirada only.

HORIZON, OMNI & RAMPAGE FUSE BLOCK CIRCUITS

- ① - **20 Amp. (Yellow)** Hazard flashers.
- ② - **3 Amp. (Violet)** Speed control on all. Heated rear window relay on all except Rampage.
- ③ - **20 Amp. (Yellow)** Air conditioning radiator fan motor.
- ④ - **20 Amp. (Yellow)** Heater blower motor. **30 amp. (Lt. Grn.)** Air conditioning blower motor.
- ⑤ - Not used.
- ⑥ - **20 Amp. (Yellow)** Dome, map, glove box, cargo and stop lights. Ignition switch time delay relay, key in buzzer, clock, cigar lighter and anti-dieseling relay.
- ⑦ - **20 Amp. (Yellow)** Horn, horn relay, parking lights, side markers, license and tail lights.
- ⑧ - Not used.
- ⑨ - Not used.
- ⑩ - Not used.
- ⑪ - **5 Amp. (Tan)** Seat belt and brake warning, temperature, oil and fuel lights, voltage limiter and anti-dieseling relay coil.
- ⑫ - Not used.
- ⑬ - **3 Amp. (Violet)** Instrument lights, air conditioning/heater control light, heated rear window control light, rear wiper/washer or hatch release control light, ash tray light, radio light and console gear selector light.
- ⑭ - **6 Amp. Circuit breaker.** Rear wiper/washer (4-dr), hatch release solenoid (2-dr).
- ⑮ - **5 Amp. (Tan)** Radio.
- ⑯ - **20 Amp. (Yellow)** Back-up and turn signal lights, air conditioning clutch, tachometer and heated rear window relay, idle stop solenoid and radiator fan relay coil.

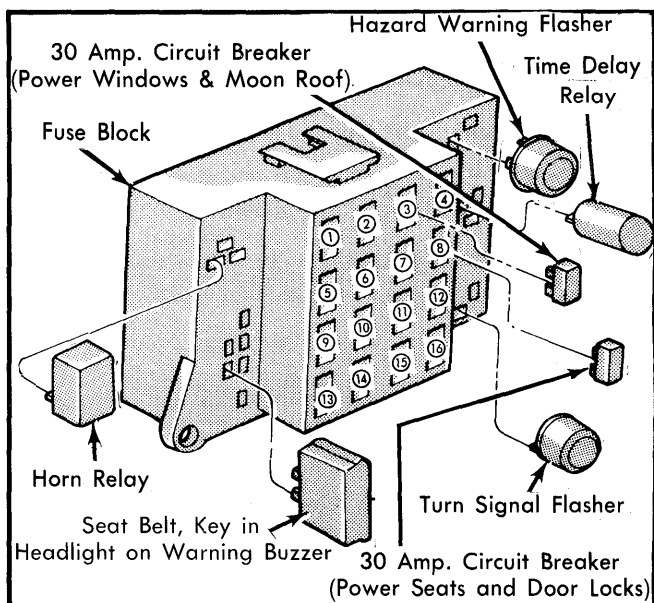


Fig. 2 Fuse Block for Cordoba, Diplomat, Gran Fury, Mirada & New Yorker

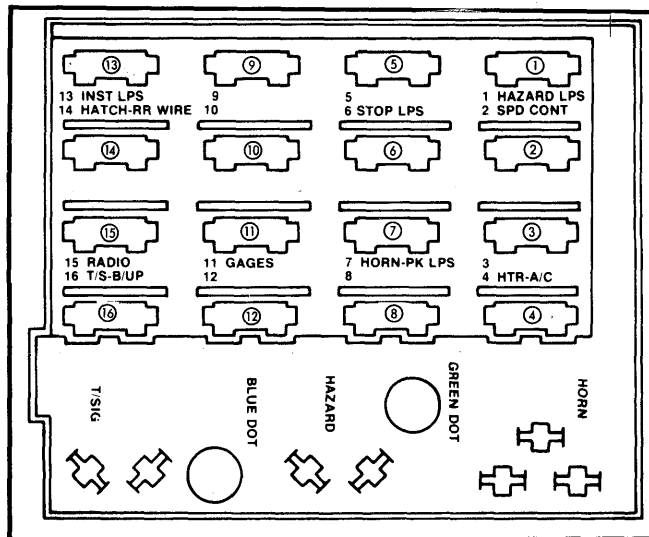


Fig. 3 Fuse Block for Horizon, Omni & Rampage