

PONTIAC

FUSE BLOCK

Fuse block is located under left side of instrument panel on all models except Phoenix and 6000. Fuse block on these models is located under right side of instrument panel.

FLASHER LOCATION

Hazard — Flasher located on fuse block on Bonneville, Grand Prix and T1000. Flasher located on convenience center at right side of instrument panel near steering column on Firebird, Phoenix and 6000. Flasher on convenience center at left side dash panel on J2000.

Turn Signal — Flasher located on fuse block on Bonneville and Grand Prix. Flasher located above brake pedal bracket on T1000. Flasher located near steering column support on J2000, 6000 and Phoenix. Flasher located on convenience center at right side of instrument panel near steering column on Firebird.

CIRCUIT BREAKERS

Headlights — Circuit breaker is located in headlight switch on all models to protect headlight wiring.

Windshield Wipers — Circuit breaker is integral with wiper motor on all models except T1000.

Headlight Doors — Circuit breaker located in each headlight door actuator on Firebird.

FUSIBLE LINKS

Two fusible links are located at starter solenoid to protect the lighting and charging systems on all models. Two links are located at alternator battery terminal to protect charging and lighting systems on Firebird 4-cylinder models. One link is located at each headlight door to protect the system on Firebird. Links are located at each glow plug wire on diesel models. One link is located near battery positive terminal for ECM system on Firebird. One link is located at dash panel bulkhead connector for cooling fans on J2000 models. One link at front fender for vacuum pump on J2000. One link in engine compartment for engine compartment light on J2000. One link at EST distributor for EFE heater relay on 6000 and Phoenix. One link at starter for cooling fan on 6000 and Phoenix.

FIREBIRD, PHOENIX, J2000 & 6000**FUSE BLOCK CIRCUITS**

- ① — **10 Amp. (Red)** Computer command control on all models. Electronic fuel injection on 4-cyl. 6000, glow plugs and fuel control on diesel 6000.
- ② — **10 Amp. (Red) All Except Firebird.** Electronic fuel injection on Phoenix and 6000. Computer command control on J2000. **20 Amp. (Lt. Blue) Firebird Only.** Fuel pump relay and oil pressure switch feed.
- ③ — **20 Amp. (Yellow)** Stop and hazard lights on all models. Audio alarm system on 6000 only.
- ④ — **20 Amp. (Yellow)** Choke heater on all models. Cooling fan on all except Firebird. Brake warning system on Phoenix only. Charging system and warning indicators on 6000 only.
- ⑤ — **15 Amp. (Lt. Blue) 6000 and Phoenix Only.** Back-up and turn signal lights. Air conditioning on V6 Phoenix. **20 Amp. (Yellow) Firebird and J2000 Only.** Turn signal and back-up lights.
- ⑥ — **10 Amp. (Red) Phoenix and 6000 Only.** Electronic fuel injection. **5 Amp. (Tan) J2000 Only.** Vacuum pump. Not used on Firebird.
- ⑦ — **20 Amp. (Yellow)** Tail lights on all models. Rear marker and license lights, front parking and marker lights on all except Firebird. Turn signal, hazard and

stop lights on Phoenix. Digital clock on J2000 and 6000 only. Twilight sentinel on J2000 only.

- ⑧ — **25 Amp. (White) All Except J2000.** Heater and air conditioner. **30 Amp. (Lt. Grn.)** Heater and air conditioner.
- ⑨ — **10 Amp. (Red)** Rear window defogger and air conditioning on all models. Buzzer, cruise control, voltmeter and torque converter clutch brake switch on Firebird only. Instrument panel gauges and warning indicators, computer command control and seat belt warning on all except Firebird. Heater and rear wiper/washer on J2000 only. Brake warning system, electronic fuel injection, heater and choke on Phoenix only. Brake warning system, charging system, cruise control, electronic level control and torque converter clutch on 6000 only.
- ⑩ — **25 Amp. (White)** Windshield wiper/washer. Not used on Firebird.
- ⑪ — **20 Amp. (Yellow)** Power door locks, trunk/tailgate release, cigar lighter, horns, clock and interior lights on all models. Power antenna, computer command control and glove box light on Firebird only. Power mirrors, electronic level control and radio on 6000 only. Audio alarm system and power antenna on Phoenix only. Seat belt warning, clock radio, heater and air conditioning on J2000 only.
- ⑫ — **30 Amp.** Circuit Breaker. Power windows on all models. Rear wiper/washer on Firebird only.
- ⑬ — **5 Amp. (Tan)** Instrument panel lights on all models. Rear window defogger and audio alarm system on Phoenix and 6000 only. Lights on reminder on J2000 only. Radio on 6000 only.
- ⑭ — **10 Amp. (Red)** Radio on all models. Cruise control on all except Firebird.
- ⑮ — **30 Amp.** Circuit Breaker. Rear window defogger and power door locks on all models. Power seats on all except Firebird.
- ⑯ — **10 Amp. (Red) Phoenix and 6000 Only.** Computer command control. **3 Amp. (Violet) Firebird Only.** Crank signal to ECM. Not used on J2000.

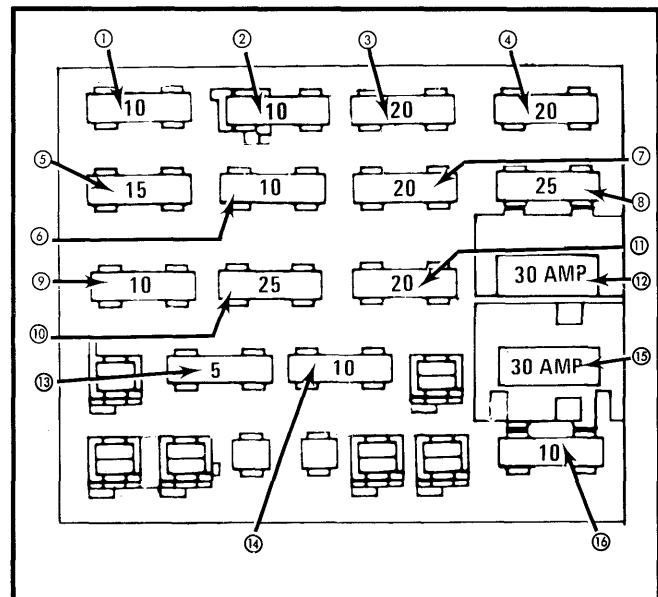


Fig. 1 Fuse Block for Firebird, Phoenix, J2000 & 6000

