

Buick

Engine Identification

6 CYL. ENGINES

198", 225" V6 ENGINES

Distributor is mounted at front of engine on left side. *To determine displacement and horsepower, See General Specifications Table in appropriate engine article.*

250" L-6 ENGINE

Distributor is mounted at front of engine on right side. Exhaust pipe takes off from flange just aft of No. 6 cylinder. Oil filler cap is on top of rocker arm cover. *To determine displacement and horsepower, See General Specifications Table in appropriate engine article.*

V8 ENGINES

215", 300", 340", 430", & 1967 400" ENGINES

Distributor is mounted at front of engine on left side. *To determine displacement and horsepower, See General Specifications Table in appropriate engine article.*

364", 401", 425", & 1965-66 400" ENGINES

Distributor is mounted at rear of engine in center. *To determine displacement and horsepower, See General Specifications Table in appropriate engine article.*

350", 400", 430", 455" ENGINES

Distributor is mounted at front of engine on left side. *To determine displacement and horsepower, See General Specifications Table in appropriate engine article.*