


## CAPRI (Cont.)

**1972 2000 & 2600** — Fuse block is located under instrument panel. Fuse block is covered with a plastic shield for protection.

- 1 — 8 Amp. Interior Lights, Cigar Lighter and Hazard Flasher.
- 2 — 8 Amp. Left Side Marker Lights, Left Tail Light, and Instrument Panel Illumination Bulbs.

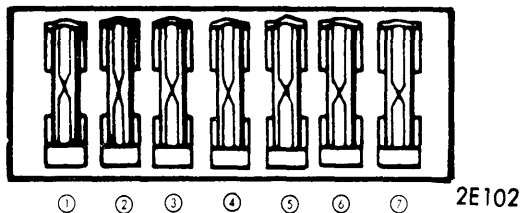

**1972 2000 & 2600 FUSE BLOCK**

- 3 — 8 Amp. Right Side Marker Lights, Right Tail Light, and License Plate Light.
- 4 — 8 Amp. Headlights High Beam.
- 5 — 8 Amp. Headlights Low Beam.
- 6 — 8 Amp. Stop Lights, Heater, Turn Signal, Gauges, and Back-Up Lights.
- 7 — 8 Amp. Windshield Wipers.

**1973 2000 & 2600** — Fuse block is located on left side of engine compartment and contains seven fuses. Circuits protected by fuses are, from left to right:

- 1 — 16 Amp. Cigarette Lighter, Clock and Interior Light.
- 2 — 8 Amp. License Plate and Instrument Lights.
- 3 — 8 Amp. Right Hand Tail and Parking Lights.
- 4 — 8 Amp. Left Hand Tail and Parking Lights.
- 5 — 16 Amp. Horn and Heater Blower.
- 6 — 16 Amp. Windshield Wiper Motor, Back-Up Lights and Gauges.
- 7 — 16 Amp. Turn Signals and Stop Lights.

## CITROEN

## FUSE BLOCK

**1963-64 ID 19** — Two fuse blocks are located on the upper firewall in engine compartment. Left side block contains five active fuses and one spare; right side block contains two additional active fuses.

## 1963-64 MODELS

## Left Side Fuse Block

- 1 — 30 Amp. (Blue) Heater Blower and Interior Lights.
- 2 — 30 Amp. (White) Windshield Wipers.
- 3 — 30 Amp. (Yellow) Left Side High Beam.
- 4 — 30 Amp. (Green) Left Side Low Beam.
- 5 — 30 Amp. (Red) Turn Signals and Parking Lights.

## Right Side Fuse Block

- 1 — 30 Amp. (Yellow) Right Side High Beam.
- 2 — 30 Amp. (Green) Right Side Low Beam.

**1965-67 ID 19** — A single fuse block is located on the upper left corner of firewall in engine compartment. Block contains three fuses and one spare. Fuses protect circuits indicated.

## 1965-67 MODELS

- 1 — 30 Amp. (Yellow) Windshield Wipers and Accessories Terminal.
- 2 — 30 Amp. (Red) Low Beams, Clock, License Plate, Trunk, Tail, and Instrument Panel Lights.
- 3 — 30 Amp. (Blue) All Other Circuits Except Horn and High Beams.

**1968 ID 19** — Two fuse blocks are used. Blocks are located on the left and right sides of firewall in engine compartment. Fuses protect circuits indicated.

## 1968 MODELS

## Left Side Fuse Block

- 1 — 30 Amp. (Yellow) Low Beams and Clock, Tail, Instrument, Trunk, and License Plate Lights.

## Right Side Fuse Block

- 1 — 30 Amp. (Yellow) Windshield Wiper and Washer, Cigar Lighter, and Accessory Terminal.
- 2 — 30 Amp. (White) All Other Circuits Except Horns, High Beams, and Ignition Coil.

**1969 ID 19** — Fuse Block containing four fuses is located on the left side of the firewall in engine compartment. Fuses protect circuits as indicated.

## 1969 MODELS

- 1 — 16 Amp. (Yellow) License Plate, Tail, Trunk, Parking, and Instrument Panel Lights.
- 2 — 16 Amp. (Blue) Turn Signals and Hazard Warning Signals.
- 3 — 16 Amp. (Red) Windshield Wipers and Washer, Clock, Accessories Terminal, Interior, and Stop Lights.
- 4 — 16 Amp. (Green) Ignition Circuit.

**1970 ID 19** — Fuse block containing four fuses is located on left side of firewall in engine compartment. Fuses protect circuits indicated:

## 1970 MODELS

- 1 — 16 Amp. (Green) Interior Light, Turn Signal Indicators, Battery Indicator, Cigar Lighter, Heated Rear Window, and Auxiliary Heater Blower (Right Side).
- 2 — 10 Amp. (Blue) Parking Lights and Hazard Warning Lights.
- 3 — 16 Amp. (Red) Tachometer, Rheostat and Fuel Gauge, Central Indicator Dial, Windshield Wipers and Washer, Accessory Terminal, Stop Lights, and Heavy Duty Heater.
- 4 — 16 Amp. (Yellow) License Plate, Trunk, Tail, Instrument Panel, and Town Lights.

## CITROEN (Cont.)

**1963-68 DS 19** — Fuse block containing three active fuses and one spare fuse is located on upper corner of firewall in engine compartment. Fuses protect circuits indicated.

### 1963-68 MODELS

- 1 — 30 Amp. (Yellow) Windshield Wiper Motor and Accessory Terminal.
- 2 — 30 Amp. (Red) Low Beams and Clock, Tail, Instrument, Trunk, and License Plate Lights.
- 3 — 30 Amp. (Blue) All Other Circuits Except Horns and High Beams.

**1968-69 DS 21** — Two fuse blocks are located on the firewall in engine compartment and are mounted separately. Fuses protect circuits as indicated.

### 1968-69 MODELS

#### Left Side Fuse Block

- 1 — 30 Amp. (Yellow) Low Beams and Clock, Tail, Instrument, Trunk and License Plate Lights.

#### Right Side Fuse Block

- 1 — 30 Amp. (Yellow) Windshield Wiper and Washer, Cigar Lighter and Accessory Terminal.
- 2 — 30 Amp. (White) All Circuits Except Horns, High Beams and Ignition Coil.

**1969 ½ Minerale** — One fuse block containing four fuses is mounted on left side of firewall in engine compartment. Fuses protect circuits indicated.

### 1969 ½ MODELS

- 1 — 16 Amp. (Yellow) License Plate, Tail, Trunk, Parking, and Instrument Panel Lights.
- 2 — 16 Amp. (Blue) Turn Signals and Hazard Warning Lights.
- 3 — 16 Amp. (Red) Windshield Wipers and Washer, Clock, Accessory Terminal, Interior Light, and Stop Lights.
- 4 — 16 Amp. (Green) Ignition Circuit.

**1970 Minerale** — Fuse block is mounted on left side of firewall in engine compartment. Fuses protect circuits as indicated.

### 1970 MODELS

- 1 — 16 Amp. (Green) Interior Light, Indicator and Turn Lights, Battery Indicator, Cigar Lighter, Heated Rear Window, and Auxiliary Heater.
- 2 — 10 Amp. (Blue) Parking and Hazard Warning Lights.
- 3 — 16 Amp. (Red) Tachometer, Rheostat and Fuel Gauge, Central Indicator Dial, Windshield Wipers and Washer, Accessory Terminal, Stop Lights, and Heavy Duty Heater.
- 4 — 10 Amp. (Yellow) Clock and License Plate, Trunk, Tail, Instrument Panel, and Town Lights.


## COLT

### FUSE BLOCK

**1971-72 Models** — Fuse block is located on lower left kick panel and contains 14 circuit fuses and four spare fuses.

### 1971-72 MODELS

- 1 — Left Low Beam.
- 2 — Right Low Beam.
- 3 — Heater.
- 4 — Turn Signals and Back-Up Lights.
- 5 — Windshield Wiper.
- 6 — Left High Beam.
- 7 — Right High Beam.
- 8 — Tail Lights.
- 9 — Side Markers.

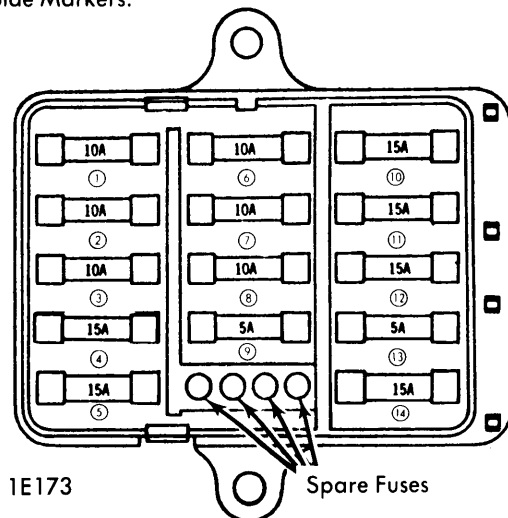


1971-72 COLT FUSE BLOCK

- 10 — Hazard Warning.
- 11 — Cigar Lighter.
- 12 — Stop Light and Horn.
- 13 — Dome and Buzzer.
- 14 — Ignition.

**NOTE** — On 1971 model number 13 fuse is dome only and number 14 is buzzer. Ignition is not protected by fuse in fuse block.

**1973 Models** — Fuse block is located on lower left kick panel and contains 14 active fuses and four spare fuses. Circuits protected are indicated.

- 1 — 15 Amp. Rear Window Defogger Relay.
- 2 — 5 Amp. Interior Light and Key Warning Buzzer.

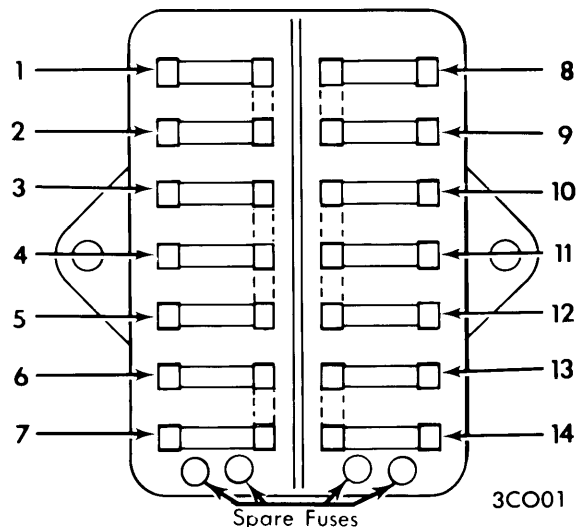

1973 COLT FUSE BLOCK