


CRICKET

FUSE BLOCK

1971-73 Models — Fuse block is located on firewall. Each fuse is identified by a number embossed on base of holder.

1971-73 MODELS

- 1 — 35 Amp. Stop and Back-Up Lights, and Heater.
- 2 — 35 Amp. Interior Lights and Switch.
- 3 — 35 Amp. Parking, Tail, and Instrument Lights.

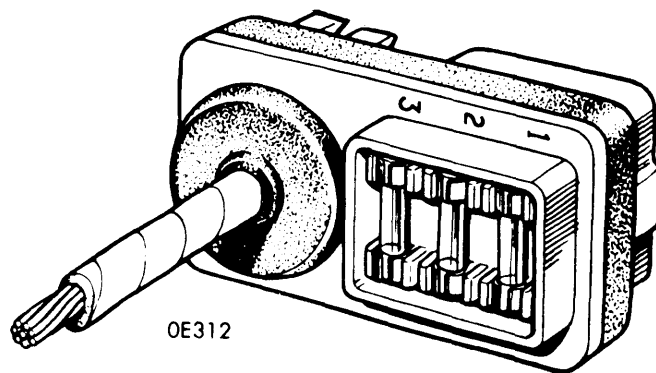

1971-72 CRICKET FUSE BLOCK

DATSUN

FUSE BLOCK

1963-65 310 & 1966-67 311 — Fuse block is located in glove compartment. Fuse specifications and applications are listed on back of fuse block cover.

1964-65 410 & 1966-67 411 — Fuse block contains six fuses which are identified as indicated.

1964-65 MODELS

- 1 — 8 Amp. (W) Windshield Wipers.
- 2 — 8 Amp. (F) Flashers.
- 3 — 20 Amp. (R) Heater.
- 4 — 20 Amp. (C) Clock and Radio.
- 5 — 20 Amp. (H) Horn.
- 6 — 20 Amp. (L) Lights.

1964-65 320 & 1966-67 520 — Fuse block is located at rear of engine compartment. Fuse specifications and applications are listed on the back of fuse block cover.

1968-73 510 & 1969-72 520 — Fuse block is located on right side of firewall in engine compartment. Circuits protected are listed on fuse block cover.

1971-73 1200 & 172-73 620 — Fuse block is located under instrument panel adjacent to steering column. Circuits protected are listed on fuse block cover.

1970-73 240Z — Fuse block is located under ash tray. Circuits protected are listed on fuse block cover.

1970-72 MODELS

- 1 — 20 Amp. Air Conditioning.
- 2 — 20 Amp. Windshield Wipers.
- 3 — 20 Amp. Turn Signals.
- 4 — 10 Amp. Horn.
- 5 — 20 Amp. Stop Lights.
- 6 — 10 Amp. Left Headlight.
- 7 — 10 Amp. Right Headlight.
- 8 — 20 Amp. Tail and Parking Lights.
- 9 — 10 Amp. Instrument Panel and Dome Lights.
- 10 — 20 Amp. Common.

FUSIBLE LINK

1973 Models — Fusible link is located in wire between battery and alternator near battery. Link protects alternator and related circuits.

FIAT

FUSE BLOCK

1967-73 850 — Fuse block is located on left side of instrument panel. Block contains eight fuses. Circuits protected by fuses are, from left to right:

1967-73 MODELS

- 1 — Turn Signal, Stop & Instrument Lights, Gauges, Windshield Wiper Motor and Indicator Lights.
- 2 — Map Light and Horn.
- 3 — Left Hand Low Beam.
- 4 — Right Hand Low Beam.
- 5 — Left Hand High Beam and Indicator.
- 6 — Right Hand High Beam.
- 7 — Left Front Parking Light, Left License Plate Light, Right Tail Light, Parking Light Indicator and Engine Compartment Light.
- 8 — Right Front Parking Light, Right License Plate Light and Left Tail Light.


1967-72 124 — Electrical system is protected by eight fuses located on left side of dash under instrument panel. Charging, starting, and ignition circuits are not protected by fuses.

1967-72 MODELS

- 1 — 8 Amp. Low Oil Indicator Light, Coolant Warning Light, Fuel Gauge, Wiper Motor, Instrument Panel Lights, Glove Compartment Light Fan Motor, Directional Signals, and Stop Lights.
- 2 — 16 Amp. Inside Lights and Horn.
- 3 — 8 Amp. Left Low Beam.
- 4 — 8 Amp. Right Low Beam.
- 5 — 8 Amp. Left High Beam and Indicator Light.
- 6 — 8 Amp. Right High Beam.
- 7 — 8 Amp. Left Front Parking Light, Parking Light Indicator, Left License Light, and Luggage Compartment Light.

FIAT (Cont.)

- 8 — 8 Amp. Right Front Parking Light, Left Rear Parking Light, Right License Light, and Engine Compartment Light.

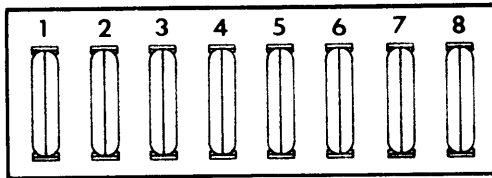

2FI02

1967-72 124 SEDAN, COUPE & SPIDER FUSE BLOCK

1973 124 — Fuse block is located under instrument panel to left of steering column. Block contains 10 fuses. Circuits protected are, from left to right (Spider & Coupe) or right to left (Sedan & Wagon).


1973 MODELS

- 1 — 8 Amp. Voltage Regulator & Alternator Field.
- 2 — 8 Amp. Turn Signals & Indicator, Stop Lights, Gauges, Indicator Lights, Back-Up Lights, Emission Control System and Seat Belt Warning System.
- 3 — 8 Amp. Front Right Parking & Side Marker Lights, Rear Left Tail & Side Marker Lights and Right License Plate Light.
- 4 — 8 Amp. Front Left Parking & Side Marker Lights, Rear Right Tail & Side Marker Lights, Left License Plate Light, Instrument Lights, Trunk Light (if equipped) and Hazard Warning System Switch.
- 5 — 8 Amp. Right Hand Low Beam.
- 6 — 8 Amp. Left Hand Low Beam.
- 7 — 8 Amp. Right Hand High Beam.
- 8 — 8 Amp. Left Hand High Beam and Indicator.
- 9 — 8 Amp. Windshield Wiper & Washer Motors and Heater Motor.
- 10 — 16 Amp. Interior Lights, Horns, Inspection Lamp Socket, Cooling Fan Motor, Hazard Warning System, Clock (if equipped) and Cigarette Lighter (Sedan & Wagon Only).

1971-72 128 — Electrical system is protected by 10 fuses through vehicle number 557999. On later models there are eight fuses. Ignition, starting, and charging circuits are not protected by fuses.

EARLY MODEL 128

- 1 — 16 Amp. Horns, Engine Cooling Fan Motor, and Interior Lights.
- 2 — 8 Amp. Wiper Motor and Fan Motor.
- 3 — 8 Amp. Left High Beam and Indicator Light.
- 4 — 8 Amp. Right High Beam.
- 5 — 8 Amp. Left Low Beam.
- 6 — 8 Amp. Right Low Beam.
- 7 — 8 Amp. Left Front Parking Light, Parking Light Indicator, Right Rear Parking Light, Left License Light, Trunk Light, and Instrument Cluster Lights.
- 8 — 8 Amp. Right Front Parking Light, Left Rear Parking Light, Right License Light, and Engine Compartment Light.
- 9 — 8 Amp. Fuel Gauge, Low Oil Warning, Engine Coolant Fan Relay, Coolant Temperature Warning, Stop Lights, and Directional Lights.
- 10 — 8 Amp. Spare.

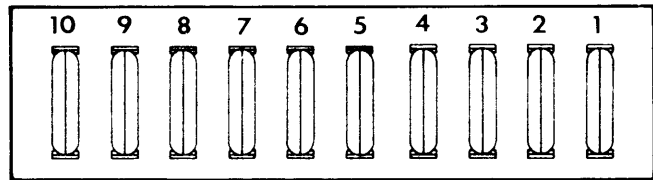


2FI03

EARLY MODEL 128 SEDAN & RALLY

LATE MODEL 128

- 1 — 8 Amp. Directional Signals, Stop Lights, Fuel Gauge, Fan Motor, Low Oil Indicator, Wiper Motor.
- 2 — 16 Amp. Horns, Engine Coolant Fan Motor, Relay switch, and Interior Lights.
- 3 — 8 Amp. Left High Beam and Indicator Light.
- 4 — 8 Amp. Right High Beam.
- 5 — 8 Amp. Left Low Beam.
- 6 — 8 Amp. Right Low Beam.
- 7 — 8 Amp. Left Front Parking Light, Parking Light Indicator, Right Rear Parking Light, and Instrument Lights.
- 8 — 8 Amp. Right Front Parking Light, Left Rear Parking Light, Right License Light, and Engine Compartment Light.
- 9 — 8 Amp. Spare.

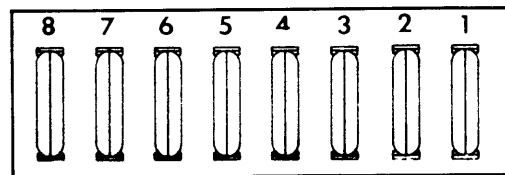

2FI04

LATE MODEL 128 SEDAN & RALLY

1973 128 (Except SL Coupe) — Fuse block is located under instrument panel to left of steering column. Block contains eight fuses. Circuits protected are, from left to right:

1973 MODELS

- 1 — 8 Amp. Front Right Parking & Side Marker Lights, Rear Left Tail & Side Marker Lights, Right License Plate Light, Instrument Lights and Hazard Warning System Switch.
- 2 — 8 Amp. Front Left Parking & Side Marker Lights, Parking & Tail Light Indicator, Rear Right Tail & Side Marker Lights and Left License Plate Light.
- 3 — 8 Amp. Right Hand Low Beam.
- 4 — 8 Amp. Left Hand Low Beam.
- 5 — 8 Amp. Right Hand High Beam.
- 6 — 8 Amp. Left Hand High Beam and Indicator.
- 7 — 16 Amp. Interior Lights, Horns, Cooling Fan Motor, Hazard Warning System.
- 8 — 8 Amp. Indicator Lights, Gauges, Turn Signals, Stop Lights, Back-Up Lights, Heater Motor, Windshield Wiper & Washer Motors, Emission Control System, Seat Belt Warning System.