

FIAT (Cont.)

1973 128 SL Coupe — Fuse block is located under instrument panel to left of steering column. Block contains 10 fuses. Circuits protected are, from left to right:

1973 MODELS

- 1 — 8 Amp. Stop & Back-Up Lights, Windshield Wiper & Washer Motors and Emission Control System.
- 2 — 8 Amp. Indicator Lights, Gauges, Heater Motor and Seat Belt Warning System.
- 3 — 8 Amp. Left Hand High Beam and Indicator.
- 4 — 8 Amp. Right Hand High Beam.
- 5 — 8 Amp. Left Hand Low Beam.
- 6 — 8 Amp. Right Hand Low Beam.
- 7 — 8 Amp. Front Left Parking & Side Marker Lights, Parking & Tail Light Indicators, Rear Right Tail & Side Marker Lights, Left License Plate Light and Heater Control Lights.

1973 124 Sedan & Wagon — A 3 amp. in-line fuse is used for the key warning buzzer and seat belt buzzer. A 16 amp. in-line fuse is used for rear window defogger.

1973 124 Coupe — A 3 amp. in-line fuse is used for key warning buzzer and seat belt buzzer. An 8 amp. in-line fuse is used for fuel pump. Cigar lighter and rear window defogger each have their own 16 amp. in-line fuse.

1973 Spider — A 3 amp. in-line fuse is used for key warning buzzer and seat belt buzzer. A 16 amp. in-line fuse is used for cigar lighter.

HONDA

FUSE BLOCK


1971 Models — Fuse box is located below instrument panel between hazard warning switch and steering column. There are two spare fuses in fuse box cover.

1971 MODELS

- 1 — 15 Amp. Blower Motor.
- 2 — 15 Amp. Back-up, Turn Signal Lights, Wiper Motor and Fuel Gauge.
- 3 — 20 Amp. Marker, Tail, License, Stop and Head Lights.
- 4 — 20 Amp. Horn, Cigar Lighter, Radio, and Interior and Hazard Warning Lights.


1972 MODELS

- 1 — Headlights.
- 2 — Tail Lights and License Plate Lights.
- 3 — Interior Light and Lighter (Optional).
- 4 — Hazard Warning Flasher, Horn and Stop Lights.
- 5 — Heater, Radio (Optional).
- 6 — Turn Signal Lights, Back-Up Lights and Fuel Gauge.
- 7 — Windshield Wiper/Washer.
- 8 — Fuel Pump, Carburetor Solenoid.

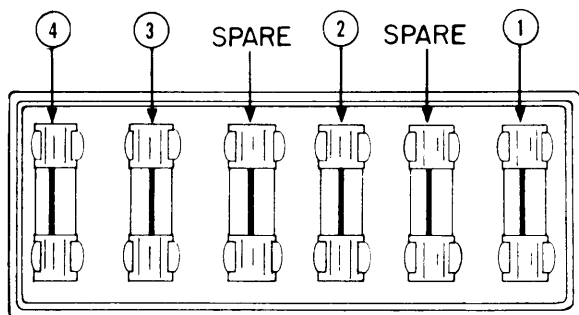

1E168

1971 HONDA FUSE BLOCK

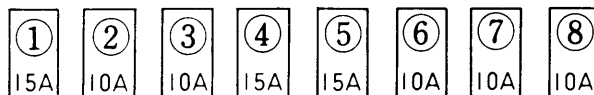

2E111

1972 HONDA FUSE BLOCK

1973 Models — Fuse block is located on right kick panel. Block contains eight fuses. Circuits protected are, from top to bottom:

1973 MODELS

- 1 — 10 Amp. Voltage Regulator and Emission Control System.
- 2 — 10 Amp. Windshield and Rear Window Wiper and Washer Motors.
- 3 — 10 Amp. Back-Up Lights, Turn Signals, Gauges and Charge Indicator Light.
- 4 — 15 Amp. Seat Belt Warning System and Indicator Lights.
- 5 — 15 Amp. Heater Motor, Rear Window Defogger, Radio, Horn, Stop Lights and Hazard Warning System.
- 6 — 10 Amp. Interior Light, Cigarette Lighter, Tail Gate Light.
- 7 — 15 Amp. Tail Lights, License Plate Light and Instrument Lights.
- 8 — 15 Amp. Side Marker Lights, Headlights, High Beam Indicator, and Switch Illumination Lights.

IN-LINE FUSES

1972-73 Models — One large 45 amp. in-line fuse is installed in main battery cable to prevent damage to main wiring harness. Fuse is located in engine compartment near battery.