


# Fuses & Circuit Breakers


## JAGUAR

### FUSE BLOCK

**1963-73 6 Cyl. Models** — Fuse block is located behind center instrument cluster. Access to fuses is obtained by removing two instrument panel retaining screws (top left and bottom right corners). Instrument panel will then hinge downward exposing fuses and fuse indicator panel. Fuse indicator panel lists circuits protected by each fuse and the ampere rating.

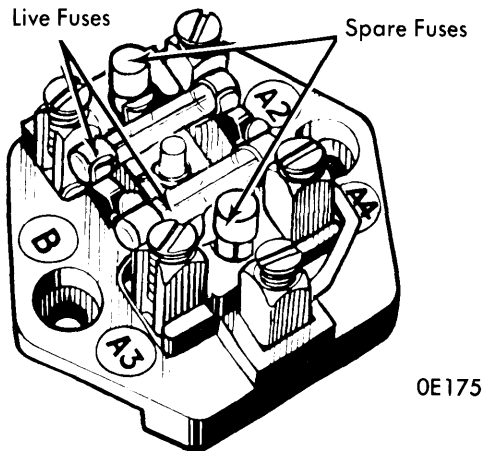


- 6 — 35 Amp. Main Head Lights.
- 7 — 35 Amp. Inner Head Lights.
- 8 — 35 Amp. Left Side Low Beam.
- 9 — 35 Amp. Right Side Low Beam.
- 10 — 10 Amp. Side and Tail Lights (Right Side).

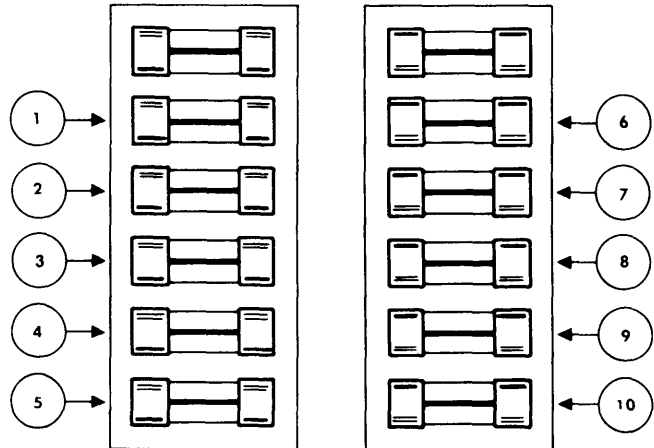

1972-73 JAGUAR 6 CYLINDER FUSE BLOCK

### 1963-66 3.8 LITER SEDAN MARK II FUSE BLOCK

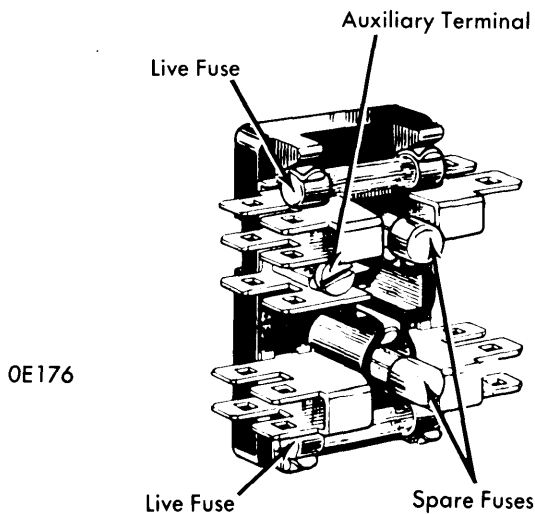

FUSE BLOCK (ALL OTHERS EXCEPT 1972-73)

### 1972-73 MODELS

- 1 — 35 Amp. Windshield Washer, Instruments, Horn Relay, Tachometer.
- 2 — 35 Amp. Map and Interior Lights, Cigar Lighter, Air Condition Relay.
- 3 — 35 Amp. Windshield Wiper, Flashers, Heater Motor, Stop Lights.
- 4 — 35 Amp. Horns.
- 5 — 10 Amp. Side and Tail Lights (Left Side).

### IN-LINE FUSES

**1963-72 6 Cyl. Models** — In-line fuses protect optional equipment on some models. All in-line fuses are located behind center instrument panel near fuse block.

**1973 6 Cyl. Models** — All in-line fuses are located behind center instrument cluster near main fuse block. In-line fuses protect circuits as indicated:

- 3 Amp. — Instrument Lights.
- 35 Amp. — Hazard Warning System.
- 25 Amp. — Rear Window Defogger.
- 8 Amp. — Back-up Lights.
- 8 Amp. — Key Warning Buzzer.
- 5 Amp. — Seat Belt Warning System.
- 15 Amp. — Radiator Cooling Fan.


**NOTE** — For information concerning Jaguar 12 cylinder sedan models, see 1973 6 cylinder models.

**1971-73 Jaguar 12 Cyl. "E" Type** — A 15 amp. in-line fuse is used for the rear window defogger. This fuse is located behind center instrument cluster near main fuse block.

### FUSE BLOCK

**1971-73 12 Cyl. "E" Type** — Fuses are located behind the center instrument panel and access is obtained by removing two instrument panel retaining screws (top left and bottom right corners). The instrument panel will then hinge downward, exposing fuses and fuse indicator panel. Eight fuses are used in four fuse blocks, each block contains two fuses plus two spares. Circuits protected by each fuse are indicated:

## JAGUAR (Cont.)

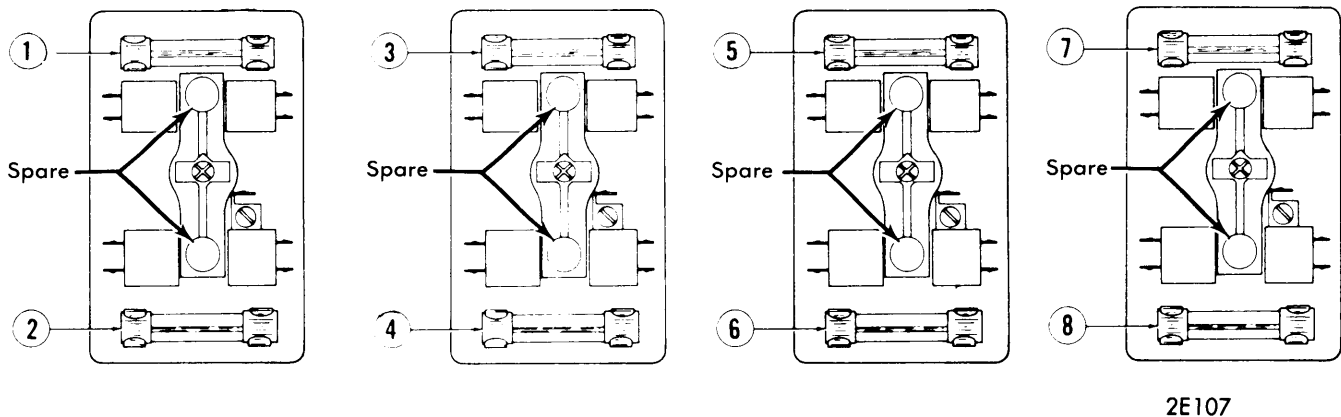

### 1971-73 JAGUAR "E" TYPE FUSE BLOCK

#### 1971-73 MODELS

- 1 - 35 Amp. Headlight High Beam.
- 2 - 35 Amp. Headlight Low Beam.
- 3 - 35 Amp. Key Warning Buzzer, Interior Lights, Clock, Cigarette Lighter and Headlight Flasher.
- 4 - 35 Amp. Hazard Warning Flasher.

- 5 - 35 Amp. Parking, Panel, License Plate and Auto. Trans. Quadrant Lights.
- 6 - 35 Amp. Stop Lights, Windshield Wipers and Turn Signals.
- 7 - 35 Amp. Horn, Radiator Fan Relay, Windshield Washer, Heater, Back-Up Lights and Gauges.
- 8 - Spare.

## JENSEN-HEALEY

### FUSE BLOCK

A fuse block containing three 35 Amp. fuses is used. One fuse protects circuits running off of battery. Another protects cir-

cuits which are energized when ignition is ON. The third fuse protects the accessories circuits.

## LOTUS

### FUSE BLOCK

**1973 Models** - Fuse block contains four 35 amp. fuses. Circuits protected by each fuse are indicated:

- 1 - Instrument, Parking, Tail, Side Marker and License Plate Lights.

- 2 - Brake Warning Light and Interior Light.
- 3 - Horn, Engine Cooling Fan, Heater and Windshield Wiper.
- 4 - Gauges, Seat Belt Buzzer, Stop Lights, Back-Up Lights, Tachometer, Ignition Light, Hazard Warning Flasher and Turn Signals.

## LUV

### FUSE BLOCK

**1972-73 Models** - Fuse block is installed in engine compartment on left inner fender panel near firewall. Fuse block contains 10 fuses with fuse applications listed on cover.

#### 1972 MODELS

- 1 - Lighting Switch.
- 2 - Lighting Switch.
- 3 - Flasher Unit, Terminal B.
- 4 - Cigar Lighter.
- 5 - Heater Switch and Wiper Motor.
- 6 - Voltage Regulator and Meter, and Back-Up Light Switch.
- 7 - Right High Beam.
- 8 - Left High Beam.

- 9 - Right Low Beam.
- 10 - Left Low Beam.

#### 1973 MODELS

- 1 - 15 Amp. Lighting Switch.
- 2 - 15 Amp. Tail and Stop Lights.
- 3 - 15 Amp. Turn Signals.
- 4 - 15 Amp. Interior Lights.
- 5 - 15 Amp. Windshield Wiper and Heater.
- 6 - 15 Amp. Instrument Cluster, Cigarette Lighter, Back-Up Lights, Stop and Tail Light Switches.
- 7 - 10 Amp. Right Hand High Beam.
- 8 - 10 Amp. Left Hand High Beam.
- 9 - 10 Amp. Right Hand Low Beam.
- 10 - 10 Amp. Left Hand Low Beam.