


SUBARU (Cont.)

1972-73 Models — Fuse block is located on right fender in engine compartment. Spare fuses are located in fuse block cover.

1972-73 MODELS

- 1 — 25 Amp. Light Switch.
- 2 — 20 Amp. Key Warning Buzzer, Interior Light, Clock, Stop Lights, Hazard Flasher, Turn Signals, and Cigar Lighter.
- 3 — 30 Amp. Ignition Switch.
- 4 — 10 Amp. Horn, Radio, Heater, Windshield Wiper and Washer.
- 5 — 10 Amp. Instrument, Parking, Side Marker, Tail, and License Lights.

- 6 — 10 Amp. Back-Up Lights, Turn Flasher, and Turn Signals.
- 7 — 10 Amp. Headlight Low Beam.
- 8 — 10 Amp. Headlight High Beam.

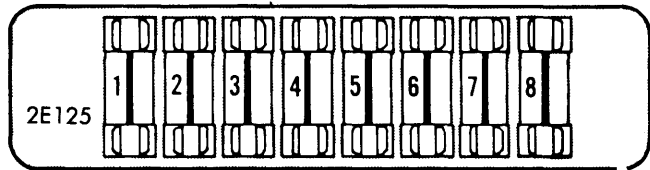

1972-73 SUBARU FUSE BLOCK

SUNBEAM

FUSE BLOCK

All Models — Fuse block is located in engine compartment on firewall. Circuits protected are indicated.

ALL MODELS

- 1 — Protects Circuits Not On Ignition Circuit.
- 2 — Protects Circuits Controlled By Ignition Circuit.
- 3 — Protects Side and Tail Light Circuits.

TOYOTA

FUSE BLOCK

1965-72 Models (Exc. Hi-Lux) — Fuse block is located under instrument panel near hood release.


1965-72 MODELS

- 1 — Headlight High Beam "R" (All), High-Beam Indicator Light (Celica, Corona & MK II).
- 2 — Headlight High-Beam "L" (All), High-Beam Indicator Light (Corolla).
- 3 — Headlight Low-Beam "R".
- 4 — Headlight Low-Beam "L".
- 5 — Parking, Tail, License Plate Lights (All), Instrument Light (Celica, Corona, Corolla), Heater Control Light (Celica & Corolla), Marker Lights (Corolla).
- 6 — Horn, Stop Light (All), Hazard Flasher (Celica), Key Warning Buzzer (Corolla).
- 7 — Cigar Lighter, Clock, Interior Light (All), Instrument Light (MK II).
- 8 — Heater, Gauges, Back-Up Light (All), Brake Warning Light (Celica & Corolla).
- 9 — Wiper & Washer Motor.
- 10 — Turn Signal Lights.

1969-72 Hi-Lux Models — Fuse block is located on firewall in engine compartment.

1969-72 MODELS

- 1 — Head, Parking and Interior Lights.
- 2 — Horn, Cigar Lighter and Stop Light.
- 3 — Hazard Warning Lights.
- 4 — Gauges, Back-Up Lights.
- 5 — Wiper and Heater Motor.
- 6 — Turn Signals.

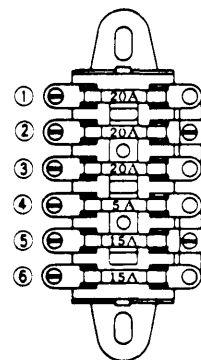

1969-72 HI-LUX FUSE BLOCK

2E117

CELICA, COROLLA, CORONA, MK II
FUSE BLOCK

1973 Corolla, Celica & Carina Models — Fuse block is located under instrument panel near or on left kick panel. Block contains eight fuses. Circuits protected are, from top to bottom:

1973 MODELS

- 1 — 15 Amp. Parking, Tail, License Plate, Side Marker and Instrument Lights.
- 2 — 20 Amp. Horn, Stop Lights, Hazard Warning Flasher and Seat Belt Warning System.

TOYOTA (Cont.)

- 3 - 20 Amp. Cigarette Lighter, Interior Lights and Clock.
- 4 - 15 Amp. Radio.
- 5 - 20 Amp. Heater, Gauges, Back-Up Lights and Rear Window Defogger (if equipped).
- 6 - 15 Amp. Turn Signals, Voltage Regulator and Emission Control System.
- 7 - 15 Amp. Ignition Coil.
- 8 - 15 Amp. Windshield Wiper and Washer Motors.

1973 Corona, Corona Mk II & Hi-Lux Models - Fuse block is located under instrument panel on left side of vehicle. Block contains eight fuses. Circuits protected are, from end of block labeled "TOP":

1973 MODELS

- 1 - 15 Amp. Instrument, Parking, Side Marker, Tail & License Plate Lights plus Glove Box & Engine Compartment Light (if equipped).
- 2 - 20 Amp. Hazard Warning System (Exc. Hi-Lux), Key Warning Buzzer, Horns and Stop Lights.
- 3 - 20 Amp. Hazard Warning System & Coolant Temperature Light (Hi-Lux only), Cigarette Lighter and Interior Lights.
- 4 - 20 Amp. Radio, Windshield Wiper and Washer Motors.
- 5 - 20 Amp. Heater, Gauges, Back-Up Lights and Rear Window Defogger (if equipped).
- 6 - 15 Amp. Turn Signals and Voltage Regulator.
- 7 - 15 Amp. Ignition Coil and Emission Control System.
- 8 - 20 Amp. Spare.

1965-71 Crown Models - Fuse block is located under instrument panel, above brake pedal and is covered with a plastic shield.

1965-71 MODELS

- 1 - Left Low Beam.
- 2 - Right Low Beam.
- 3 - Tail, License Plate, and Glove Box Lights.

- 4 - Front Parking Lights.
- 5 - Left High Beam.
- 6 - Right High Beam and High Beam Indicator Light.
- 7 - Power Windows.
- 8 - Meter Pilot Light.
- 9 - Radio.
- 10 - Cigar Lighter, Clock, Inspection Light Socket, Horn, Stop, Interior, and Courtesy Lights.
- 11 - Heater.
- 12 - Gauges and Back-Up Lights.
- 13 - Turn Signals and Voltage Regulator.
- 14 - Wiper and Washer Motors.

1972 Crown Models - Fuse block is located on cowl side trim board and contains 14 fuses.

1972 MODELS

- 1 - 20 Amp. Turn Signals.
- 2 - 15 Amp. Windshield Wipers and Washer.
- 3 - 20 Amp. Gauges, Back-Up Lights, and Heated Rear Window.
- 4 - 20 Amp. Heater.
- 5 - 20 Amp. Horn, Stop Lights, and Hazard Warning Flasher.
- 6 - 20 Amp. Cigar Lighter, Clock, and Interior Light.
- 7 - 30 Amp. Power Windows and Back Door Indicator Light.
- 8 - 10 Amp. Right High Beam and High Beam Indicator.
- 9 - 10 Amp. Left High Beam.
- 10 - 10 Amp. Tail, Parking, License, and Instrument Lights.
- 11 - 15 Amp. Radio and Power Antenna.
- 12 - 10 Amp. Right Low Beam.
- 13 - 10 Amp. Left Low Beam.
- 14 - Spare.

1965-72 Land Cruiser Models - Fuses protect circuits as indicated.


1965-72 MODELS

- 1 - 15 Amp. Turn Signals.
- 2 - 15 Amp. Heater Motor and Windshield Wipers.
- 3 - 5 Amp. Back-Up Lights and Interior Lights.
- 4 - 20 Amp. Spare.
- 5 - 20 Amp. Stop Lights, Inspection Light Socket, Cigar Lighter, and Horn.
- 6 - 20 Amp. Head and Tail Lights, and Interior Lights.

1973 Land Cruiser Models - Fuse block is mounted under instrument panel to left of steering column (Station Wagon) or on left kick panel (all others). Fuse block contains eight fuses. Circuits protected are, from end of block labeled "TOP":

1973 MODELS

- 1 - 15 Amp. Instrument, Parking, Side Marker, Tail and License Plate Lights.
- 2 - 20 Amp. Stop Lights, Horn and Hazard Warning System.
- 3 - 20 Amp. Cigarette Lighter, Interior Lights and Inspection Light Socket.
- 4 - 20 Amp. Radio, Windshield Wiper and Washer Motors.
- 5 - 20 Amp. Back-Up Lights, Heater and Gauges.
- 6 - 15 Amp. Voltage Regulator, Turn Signals and Emission Control System.
- 7 - 15 Amp. Ignition Coil.
- 8 - 20 Amp. Headlights.

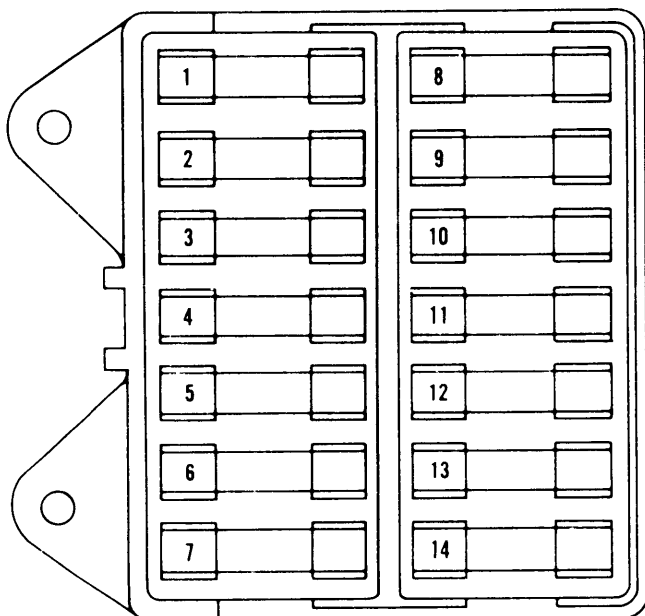

2E139

1972 CROWN FUSE BLOCK

TOYOTA (Cont.)

IN-LINE FUSES

1965-72 Crown Models — A 5 amp. in-line fuse, located above either right or left headlight, protects ammeter.

1965-72 Land Cruiser Models — A 20 amp. in-line fuse is used to protect hazard warning flasher.

FUSIBLE LINKS

1973 Models — A fusible link is located in main battery feed wire near the battery. Link protects all circuits except starter motor.

TRIUMPH

FUSE BLOCK

1963-65 TR 4 & 1966-68 TR 4A Models — Fuse block is mounted on right side of engine compartment. Two fuses protect the following circuits:

1963-68 MODELS

- 1 — 25 Amp. Parking, Instrument, Tail, and License Plate Lights.
- 2 — 25 Amp. Turn Signals, Windshield Wipers, Temperature and Fuel Gauges, Stop Lights, Heater, and Headlight Flasher.

1963-66 Spitfire MK I & II — Two 35 amp. fuses are mounted under instrument panel on left side of vehicle. Number one is fed by a red-green wire and number two is fed by a white wire.

1963-66 MODELS

- 1 — 35 Amp. Parking, Tail, and License Lights.
- 2 — 35 Amp. Turn Signals, Temperature and Fuel Gauges, Stop Lights, Windshield Wipers, and Heater.

1967-73 Spitfire Mk III & IV — Fuse block is located on left side of firewall in engine compartment, adjacent to clutch master cylinder. Block contains three 35 amp. fuses. Circuits protected are indicated:

1967-73 MODELS

- 1 — Fuse fed by white wire protects Windshield Wiper, Gauges, Stop, Back-Up & Turn Signal Lights and Seat Belt Warning Light.
- 2 — Fuse fed by red-green wire protects Side Marker, Parking, License Plate and Instrument Lights.
- 3 — Fuse fed by brown wire protects Headlight Flasher, Key Warning Buzzer, Interior Lights, Horn and Hazard Flasher System.

1965-67 2000 Models — Fuse block is mounted in the right side of engine compartment near front. Fuse block contains four fuses with space provided for two spares. Circuits protected are indicated:

1965-67 MODELS

- 1 — Parking, Tail, License, and Instrument Lights.
- 2 — Headlight Flasher, Horn, Courtesy Lights, and Cigar Lighter.
- 3 — Turn Signals, Windshield Wipers, Temperature and Fuel Gauges.
- 4 — Heater, Back-Up Lights, and Stop Lights.

1967-72 GT6 Models — Fuse block is located in engine compartment on left side of firewall. Fuse block contains three fuses plus space for two spare fuses. Circuits protected are indicated:

1967-72 MODELS

- 1 — Back-Up Lights, Flasher, Gauges, Stop Lights, Windshield Wipers, Heated Rear Window, and Turn Signals.
- 2 — Horn, Headlight Flasher, Courtesy Lights, and Hazard Lights.
- 3 — Parking, Tail, and License Plate Lights.

1968-72 TR Models — Fuse block is located on left side of engine compartment. Block has four active fuses and space for two spares. Circuits protected are as indicated:

1968-72 MODELS

- 1 — Top fuse is not operational but can be used for accessory circuit.
- 2 — Flasher, Stop and Back-Up Lights, Heater, Windshield Wipers and Washer, Fuel and Temperature Gauges.
- 3 — Headlight Flasher, Hazard Warning Lights, and Horn.
- 4 — Front and Rear Parking, Side Marker, Tail, License Plate, and Instrument Panel Lights.

1973 GT6 & TR6 Models — Fuse block is located on left side of firewall in engine compartment on GT6 models and on left fender panel in engine compartment on TR6 models. Block contains four 35 amp. fuses, with the top one being a spare. Circuits protected are indicated:

1973 MODELS

- 1 — Fuse fed by white wire protects Stop Lights, Back-Up Lights, Windshield Wiper & Washer, Gauges, Heater and Turn Signals.
- 2 — Fuse fed by brown wire protects Horn, Headlight Flasher, Glove Box Light, Key Warning Buzzer, Interior Lights, Hazard Warning System and Trunk Light.
- 3 — Fuse fed by red-green wire protects Parking, Side Marker, Tail, License Plate and Instrument Lights.

1971-73 Stag Models — Fuse block is located in engine compartment on right side of firewall. Block contains 12 fuses arranged horizontally. Circuits protected are, from left to right:

1971-73 MODELS

- 1 — 10 Amp. Overdrive.
- 2 — 25 Amp. Heater.
- 3 — 15 Amp. Windshield Wiper Motor.
- 4 — 10 Amp. Left Hand Low Beam.
- 5 — 10 Amp. Right Hand Low Beam.
- 6 — 25 Amp. Headlight High Beam "2".
- 7 — 25 Amp. Headlight High Beam "1".
- 8 — Spare.
- 9 — 10 Amp. Left Hand Tail & Parking Lights, License Plate, Instrument and Shift Quadrant (if equipped) Lights.
- 10 — 5 Amp. Right Hand Tail and Parking Lights.