

## ROVER

### INSTRUMENT CLUSTER

1966-67

**2000 Models** — Disconnect battery. Lift both clips located above the plastic warning light cover and remove the cover. If equipped, remove clock and tachometer. Remove right and left "A" post trim plates. Detach upper instrument panel trim plate (secured by two screws). Disconnect speedometer cable. Remove two screws securing housing to instrument panel. Disconnect wiring from rear.

1971-73

**Land Rover Models** — Disconnect battery and speedometer cable. Remove two screws retaining instrument cluster housing. Pull housing clear of dash. Disconnect wiring harness.

### SPEEDOMETER & GAUGES

1971-73

**Land Rover Models** — Disconnect battery cable and remove instrument cluster housing. Depress spring clip and withdraw speedometer cable. Remove knurled nuts, ground lead eyelets, and shakeproof washers. Remove speedometer and gauges.

### CLOCK

1966-67

**2000 Models** — Remove two nuts and washers securing clock housing to instrument panel upper rail. Remove bulb and disconnect wire from rear of housing. Loosen brass set screw and remove clock from housing.

### TACHOMETER & CLOCK

1966-67

**2000 Models** — Disconnect battery. Remove bolt and washers securing housing to instrument panel upper rail. Withdraw housing and disconnect wiring from rear. To remove clock, loosen brass set screw. To remove tachometer, detach retaining strap.

### TURN SIGNAL & EMERGENCY WARNING FLASHER

1971-73

**Land Rover Models** — Flasher located behind dash panel. Remove instrument cluster housing for access.

### IGNITION SWITCH

1971-73

**Land Rover Models** — Disconnect battery cable. Remove upper half of switch shroud from steering column. Disconnect leads from switch. On models fitted with a steering column lock, remove screw in switch housing and withdraw switch. On models not fitted with steering column lock, unscrew lock ring and withdraw switch.

### STOP LIGHT SWITCH

1971-73

**Land Rover Models** — On models with nonservo type switch, disconnect battery, remove switch protection plate from brake pedal bracket, disconnect electrical leads, depress brake, remove end stop from switch, and withdraw switch from mounting bracket. On models with servo type switch, disconnect battery, detach electrical leads, loosen lock nut, and unscrew switch from brake pedal bracket.

### SWITCHES

1966-67

**2000 Models** — Disconnect battery. If removing interior light or wiper switch, remove switch knob by depressing plunger at side of knob. Using a suitable tool, remove chrome lock ring. Withdraw appropriate switch and disconnect wiring.

### HEADLIGHT & PANEL LIGHT SWITCHES

1971-72

**Land Rover Models** — Disconnect battery cable. Unscrew lock ring from switches and remove spring washer. Withdraw instrument cluster housing. Pull switches to rear of instrument panel for removal.

### TURN SIGNAL, EMERGENCY WARNING, HORN & DIMMER SWITCH

1971-72

**Land Rover Models** — Disconnect battery. Remove upper half of switch shroud from steering column. Release combined switch from steering column. Withdraw switch far enough to disconnect main wiring harness connector. Remove cluster housing and disconnect wires from flasher unit, lighting switch, fuse box, and ignition switch. Withdraw combined switch assembly.

### WINDSHIELD WIPER/WASHER SWITCH

1971-72

**Land Rover Models** — Disconnect battery. Depress plunger and remove switch knob. Unscrew lock ring. Remove cluster housing. Disconnect lead from switch and remove from rear of instrument panel.

### INDICATOR LIGHT BULBS

1966-67

**2000 Models** — Lift both clips located above the plastic warning light cover. Remove the cover and replace bulbs as necessary. Replace light cover, making sure it is retained by both clips.