

## FIAT

**124 Sport Spider & Sport Coupe** — Fuse block is located under instrument panel to left of steering post. Block contains 10 fuses. Four additional fuses, in separate holders, protect: Seat Belt Starter Buzzer, Fuel Pump Relay, Cigar Lighter, Clock, Interior Lights, Hazard Warning Circuit, Rear Window Defogger, and Indicator. Fuses in block protect the following circuits:

- 1 — 25 Amp. Electropneumatic Horns, Engine Fan Motor.
- 2 — 8 Amp. Windshield Wiper/Washer, Heater Fan Motor.
- 3 — 8 Amp. Left Headlight High Beam, High Beam Indicator.
- 4 — 8 Amp. Right Headlight High Beam.
- 5 — 8 Amp. Left Headlight Low Beam.
- 6 — 8 Amp. Right Headlight Low Beam.
- 7 — 8 Amp. Left Front Parking Light, Parking Light and Tail Light Indicator, Right Rear Tail Light, Left Front and Right Rear Side Marker Lights, Left License Plate Light, Cigar Lighter Housing Indicator, Instrument Cluster Lights, Hazard Warning Signal Switch Light, Control Knob Illumination.
- 8 — 8 Amp. Right Front Parking Light, Left Rear Tail Light, Right Front and Right Rear Side Marker Lights, Right License Plate Light.
- 9 — 8 Amp. Back-Up Lights, Gauges, Tachometer, Brake Warning Indicator, Rear Window Defogger Switch, Turn Signal Light Indicator, Stop Lights, E.E.C. System Electrovalve, Belt, Starter Interlock System Control Unit.
- 10 — 8 Amp. Voltage Regulator, Alternator Field Winding.

**124 Special & Station Wagon** — Fuse block is located under instrument panel to left of steering post. Block contains 10 fuses. Three additional fuses, in separate holders, protect: Cigar Lighter, Interior Lights, Hazard Warning System, Rear Window Defogger, Starter/Seat Belt Control Unit. Fuses in block protect the following circuits:

- 1 — 16 Amp. Engine Fan Motor, Horn and Relay.
- 2 — 8 Amp. Windshield Wiper/Washer, Heater Fan Motor.
- 3 — 8 Amp. Left Headlight High Beam and High Beam Indicator.
- 4 — 8 Amp. Right Headlight High Beam.
- 5 — 8 Amp. Left Headlight Low Beam.
- 6 — 8 Amp. Right Headlight Low Beam.
- 7 — 8 Amp. Left Front Parking Light, Left Front and Right Rear Side Marker Lights, Parking and Tail Light Indicator, Left License Plate Light, Right Tail Light, Trunk Light, Cigar Lighter, Control Knob Illumination, Hazard Warning System Switch.
- 8 — 8 Amp. Right Front Parking Light, Right Front and Left Rear Side Marker Lights, Left Rear Tail Light, Right License Plate Light, Instrument Cluster Lights.
- 9 — 8 Amp. Back-Up Lights, Gauges, Starter/Seat Belt Control Unit, Ignition Mode Selection Relay, Key and Seat Belt Buzzer, Fasten Belt Indicator, Glove Box Light, Turn Signals and Indicator, Stop Lights, Rear Window Defroster, E.E.C. Electrovalve.
- 10 — 8 Amp. Voltage Regulator, Alternator Field Winding.

### FUSE BLOCK

**128 (Except SL Coupe)** — Fuse block is located under instrument panel to left of steering column. Two additional fuses, in separate holders, protect Seat Belt Buzzer and Fuel Pump Relay. The eight fuses in fuse block protect circuits as indicated beginning from left:

- 1 — 8 Amp. Gauges, Turn Signals and Indicator, Stop, Brake Warning, and Back-Up Lights, Heater Motor, and Windshield Wipers/Washer.

- 2 — 16 Amp. Interior Lights, Horns, Engine Fan Motor, and Hazard Warning Flashers.
- 3 — 8 Amp. Left Headlight High Beam and High Beam Indicator.
- 4 — 8 Amp. Right Headlight High Beam.
- 5 — 8 Amp. Left Headlight Low Beam.
- 6 — 8 Amp. Right Headlight Low Beam.
- 7 — 8 Amp. Left Front Parking and Side Marker Lights, Parking and Tail Lights, Right Tail and Side Marker Lights, and Left License Plate Light.
- 8 — 8 Amp. Right Parking and Side Marker Lights, Left Rear Tail and Side Marker Lights, Right Side License Plate Light, Instrument Cluster Lights, Hazard Warning Flashers, Instrument Control Knob Illumination.

**128 SL Coupe** — Fuse block is located under instrument panel to left of steering column. Two additional fuses, in separate holders, protect Seat Belt Buzzer and Fuel Pump Relay. Ten fuses in block protect circuits as indicated:

- 1 — 8 Amp. Stop and Back-Up Lights, Windshield Wiper Washer.
- 2 — 8 Amp. Gauges, Turn Signal and Indicator, Heater Fan Motor, Fasten Belt Indicator, Tachometer, Choke Indicator.
- 3 — 8 Amp. Left Headlight High Beam and High Beam Indicator.
- 4 — 8 Amp. Right Headlight High Beam.
- 5 — 8 Amp. Left Headlight Low Beam.
- 6 — 8 Amp. Right Headlight Low Beam.
- 7 — 8 Amp. Left Front Parking and Side Marker Lights, Parking and Tail Lights Indicator, Right Rear Tail and Side Marker Lights, Left License Plate Light.
- 8 — 8 Amp. Right Front Parking and Side Marker Lights, Left Rear Tail and Side Marker Lights, Right License Plate Light, Hazard Warning Flashers, Heater Controls Tag Light.
- 9 — 16 Amp. Horn Relay and Engine Fan Motor.
- 10 — 16 Amp. Hazard Warning System (Less Switch).

**X1/9** — Fuse block is located under instrument panel to left of steering post. Fuse block contains 12 fuses. One additional eight amp. fuse protects Carburetor Fan and Relay and Interior Lights. Fuses in block protect following circuits from left to right:

- 1 — 8 Amp. Gauges, Turn Signals and Indicator, Stop and Back-Up Lights, Heater Fan Motor, Windshield Wiper/Washer Motor, Belt/Starting Control Unit, Fasten Belts Indicator Relay, Tachometer.
- 2 — 8 Amp. Headlight Motors, Belt/Starting Control Unit, Key/Seat Belt Buzzer.
- 3 — 8 Amp. Left Headlight High Beam and High Beam Indicator.
- 4 — 8 Amp. Right Headlight High Beam.
- 5 — 8 Amp. Left Headlight Low Beam.
- 6 — 8 Amp. Right Headlight Low Beam.
- 7 — 8 Amp. Left Front Parking and Side Marker Lights, Parking and Tail Lights Indicator, Right Rear Tail and Side Marker Lights, Right License Plate Light, Control Knob Illumination.
- 8 — 8 Amp. Right Front Parking and Side Marker Lights, Left Rear Tail and Side Marker Lights, Right License Plate Light, Instrument Cluster Lights.
- 9 — 16 Amp. Hazard Warning Flashers and Indicator, Cigar Lighter.
- 10 — 16 Amp. Engine Fan, Horn and Relay.
- 11 — 3 Amp. Headlight Concealing Relay.
- 12 — 3 Amp. Headlight Raising Relay.