

JENSEN-HEALEY

FUSE BLOCK

A fuse block containing three 35 Amp. fuses is used. One fuse protects circuits running off of battery. Another protects cir-

cuits which are energized when ignition is ON. The third fuse protects the accessories circuits.

LUV

FUSE BLOCK

Fuse block is installed in engine compartment on left hand inner fender panel near the firewall. Fuse block contains 10 fuses with fuse applications listed on cover. Fuse applications are as follows:

- 1 - 15 Amp. Lighting Switch.
- 2 - 15 Amp. Tail and Stop Lights.

- 3 - 15 Amp. Turn Signals.
- 4 - 15 Amp. Interior Lights.
- 5 - 15 Amp. Windshield Wiper and Heater.
- 6 - 15 Amp. Instrument Cluster, Cigarette Lighter, Back-Up Lights, Stop and Tail Light Switches.
- 7 - 10 Amp. Right Hand High Beam.
- 8 - 10 Amp. Left Hand High Beam.
- 9 - 10 Amp. Right Hand Low Beam.
- 10 - 10 Amp. Left Hand Low Beam.

MAZDA

FUSE BLOCK

RX-2, RX-3, RX-4 & 808 - Fuse block is located under dash on right side of vehicle. Circuits protected and fuse capacities are listed on inside of cover.

B1600 Pickup - Fuse block is located in left rear corner of engine compartment. Circuits protected and fuse capacities are listed on inside of cover.

Rotary Pickup - Main fuse block is located behind right side front seat. An additional fuse block is positioned on firewall at left rear corner of engine compartment. Circuits protected are listed on inside of cover.

IN-LINE FUSES

A large, in-line fuse is installed on battery feed wire on all models. Fuse location is in engine compartment near battery.

MERCEDES-BENZ

FUSE BLOCK

All (Exc. 450 SL & SLC) - Main fuse block is located under hood on left inner fender panel. Fuse capacities and circuits protected are marked on fuse block cover.

450 SL & SLC - Main fuse block is located on right side kick panel. Fuse capacities and circuits protected are marked on fuse block cover.

IN-LINE FUSES

Additional fuses for optional equipment and/or standard extras such as sliding sun roof, heated rear window, radio, automatic antenna, electric windows and air conditioning are located in engine compartment.

MG

FUSE BLOCK

Fuse block is located on right hand side of engine compartment. Fuse block contains four 35 Amp. fuses and two spares. Circuits protected are, from top to bottom:

- 1 & 2 - Parking and Tail Lights.
- 3 - Ignition ON Circuits.
- 4 - Circuits Independent of Ignition Switch.

IN-LINE FUSES

Auxiliary Equipment - A 35 Amp. in-line fuse located above fuse block (MG Midget) or below fuse block (MGB) protects Windshield Wipers/Washer, Heater Blower Motor, and Radio.

Emission Control System - A 35 Amp. in-line fuse protects Anti-Dieseling Control Valve Circuit.

Seat Belt Starter Interlock - A 35 Amp. in-line fuse protects circuit within control unit. *NOTE - It is imperative fuse be replaced with one of equal capacity.*

Hazard Warning - A 35 Amp. in-line fuse located behind Hazard Warning Switch protects Warning Lights. Center console must be removed to replace fuse.

Radio - A separate in-line fuse protects Radio.