

## OPEL

### FUSE BLOCK

Fuse block is located below instrument panel to left of steering column.

- 1 - 5 Amp. Left Parking, Left Tail, and Left Side Marker Lights.
- 2 - 5 Amp. Right Parking, Right Tail, Right Side Marker, and Instrument Panel Lights.
- 3 - 8 Amp. Warning Buzzer, Trunk, Hazard Warning, and Courtesy Lights.
- 4 - 15 Amp. Back-Up Lights, Blower Motor, Cigar Lighter, Radio.

- 5 - 15 Amp. Wiper Motor, Horn.
- 6 - 10 Amp. Signal System, Stop Lights, Tachometer, Gauges, Indicator Lights.

### FUSIBLE LINKS

Fusible link number one is attached to starter solenoid at battery cable terminal and to red-white main feed wire. Number two fusible link is connected between red wire and B+ terminal of voltage regulator. Last fusible link is connected between light blue-white wire and D+61 terminal of voltage regulator.

## PANTERA

### FUSE BLOCK

Fuse block is located on right hand kick panel under a hinged cover. Block contains 12 fuses in a vertical row, plus two fuses side by side at bottom of main fuse block. Circuits protected are, from top to bottom:

- 1 - 8 Amp. Left Hand High Beam and Indicator.
- 2 - 8 Amp. Right Hand High Beam.
- 3 - 8 Amp. Right Parking & Front Side Marker Lights, Left Tail & Rear Marker Lights, Right License Light and Instrument & Control Lights.
- 4 - 8 Amp. Left Parking & Front Side Marker Lights, Right Tail & Rear Marker Lights, Left License Plate Light and Tail & Parking Indicator Light.

- 5 - 8 Amp. Left Hand Low Beam.
- 6 - 8 Amp. Right Hand Low Beam.
- 7 - 30 Amp. Horn, Key Warning Buzzer, Air Conditioner Blower and Clutch.
- 8 - 15 Amp. Hazard Warning System, Windshield Wiper & Washer, Interior Lights and Radio.
- 9 - 15 Amp. Cigarette Lighter.
- 10 - 30 Amp. Retractable Headlights, Heater and Air Conditioner Relays.
- 11 - 25 Amp. Engine Cooling Fan, Seat Belt Warning System and Brake Warning Light.
- 12 - 30 Amp. Engine Cooling Fan, Stop & Back-Up Lights, Turn Signals and Gauges.

**Two Bottom Fuses** - Left Fuse protects Left Power Window and Right Fuse protects Right Power Window. Both fuses are 30 Amp.

## PEUGEOT

### FUSE BLOCK

Fuse block is located on the left side of vehicle under instrument panel. Circuits protected are, from left to right:

- 1 - 5 Amp. Side Marker, License Plate, Instrument Panel, Heater Control, and Side Master Lights.

- 2 - 10 Amp. Interior, Trunk, and Glove Compartment Lights, Horns, Cigar Lighter, Clock.
- 3 - 10 Amp. Stop and Back-Up Lights, Cooling Fan Clutch, Starter Switch, Safety Belt Relays.
- 4 - 15 Amp. Heater Blower, Windshield Wiper and Washer, Windshield Wiper Relay, Rear Window Defroster.
- 5 - 10 Amp. Accessories, Turn Signal and Hazard Warning Lights, Thermal Voltmeter, Gauges.

## PORSCHE

### FUSE BLOCK

**914 Models** - Fuse block is located under instrument panel to left of steering column. Circuits protected are, from left to right:

- 1 - 8 Amp. Left Headlight High Beam.
- 2 - 8 Amp. Right Headlight High Beam.
- 3 - 8 Amp. Left Headlight Low Beam.
- 4 - 8 Amp. Right Headlight Low Beam.
- 5 - 8 Amp. Left Parking Lights.
- 6 - 8 Amp. Right Parking Lights.
- 7 - 8 Amp. License Plate Lights.
- 8 - 25 Amp. Windshield Wipers, Cigar Lighter, Turn Signals, Stop and Back-Up Lights.

- 9 - 8 Amp. Horn, Fan.
- 10 - 8 Amp. Fog Lights (Optional).
- 11 - Emergency Flashers, Interior Light.
- 12 - 25 Amp. Retractable Headlights.

**911 Models** - Main fuse block is located inside luggage compartment on left side. Fuse block contains 18 fuses. An additional fuse block is located in engine compartment on left side under regulator cover. Secondary fuse block protects Sportmatic and Rear Window Defroster. Main fuse block protects the following circuits, from front to rear:

- 1 - 16 Amp. Fog Lights.
- 2 - 5 Amp. License Plate Light.

## PORSCHE (Cont.)

### FUSE BLOCK (Cont.)

- |                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> <li>3 — 5 Amp. Right Front and Rear Parking Lights.</li> <li>4 — 5 Amp. Left Front and Rear Parking Lights.</li> <li>5 — 8 Amp. Right Headlight Low Beam.</li> <li>6 — 8 Amp. Left Headlight Low Beam.</li> <li>7 — 8 Amp. Right Headlight High Beam.</li> <li>8 — 8 Amp. Left Headlight High Beam, High Beam Indicator.</li> <li>9 — 5 Amp. Right Front Flasher Light.</li> <li>10 — 5 Amp. Left Front Flasher Light.</li> </ul> | <ul style="list-style-type: none"> <li>11 — 16 Amp. Flasher Relay, Brake and Back-Up Lights.</li> <li>12 — 25 Amp. Rear Window Defroster Relay, Fresh Air Blower, Rear Window Defroster Control Light.</li> <li>13 — 25 Amp. Windshield Wipers and Washer Pump.</li> <li>14 — 16 Amp. Electric Sunroof, Rear Window Wiper.</li> <li>15 — 16 Amp. Auxiliary Heater, Cigar Lighter, Blower Switch Control Light.</li> <li>16 — 25 Amp. Power Windows.</li> <li>17 — 16 Amp. Emergency Flasher.</li> <li>18 — 5 Amp. Interior, Glove Compartment, and Luggage Compartment Lighting, Clock.</li> </ul> |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

## RENAULT

### FUSE BLOCK

**R-12** — Fuse block is located inside glove compartment and contains six fuses. Circuits protected are, from top to bottom:

- 1 — 5 Amp. Flasher Unit.
- 2 — 8 Amp. Heated Rear Window (Defroster).
- 3 & 4 — 8 Amp. Circuits Independent Of Ignition Switch.
- 5 — 8 Amp. Circuits Dependent On Ignition Switch.
- 6 — 5 Amp. Automatic Transmission.

**R-15 & R-17** — Fuse block is located under instrument panel, below speedometer. Circuits protected are, from left to right:

- 1 — 15 Amp. (Yellow) Instrument Panel, Stop and Back-Up Lights, Rear Window Defroster.
- 2 — 5 Amp. (Green) Automatic Transmission.
- 3 — 5 Amp. (Green) Flasher Unit.
- 4 — 8 Amp. (Blue) Heating/Ventilation Fan Motor.
- 5 — 15 Amp. (Yellow) Left Electric Window.
- 6 — 15 Amp. (Yellow) Right Electric Window.
- 7 — 8 Amp. (Blue) Windshield Wipers.
- 8 — Spare.
- 9 — 8 Amp. (Blue) Electronic Injection.
- 10 — 8 Amp. (Blue) Interior and Trunk Light, Cigar Lighter, Clock.

## SAAB

### FUSE BLOCK

**Sonett** — Electrical system is protected by 16 fuses. Fuses are located in two separate fuse blocks. One block is in engine compartment on left inner fender panel the other is located under instrument panel near left side door. Circuits protected and fuse capacities are printed on fuse block cover.

**99 Models** — Electrical system is protected by 12 fuses including one spare. Fuse block is mounted on left inner fender

panel. Circuits protected and fuse capacities are printed on fuse block cover.

### IN-LINE FUSES

**99 Models** — One 3 Amp. fuse, located near fuse block, protects headlight wiper system.

## SUBARU

### FUSE BLOCK

Fuse block is located on the right side of inner fender panel under hood. Fuse protects circuits as indicated, from right to left:

- |                                                                                                                                                                                                           |                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> <li>1 — 25 Amp. Lighting Switch.</li> <li>2 — 20 Amp. Key Warning Switch, Key Warning Buzzer, Clock, Stop Light Switch, Hazard Flasher Unit, Cigar Lighter.</li> </ul> | <ul style="list-style-type: none"> <li>3 — 30 Amp. Alternator Stator.</li> <li>4 — 20 Amp. Radio, Heater Fan, Windshield Wiper Switch.</li> <li>5 — 10 Amp. Instrument Panel Illumination, Front Combination Switch, Tail, Side Marker, and License Plate Lights.</li> <li>6 — 15 Amp. Back-Up Light, Turn Signal Flasher, Turn Signal Lights, Cooling Fan Motor.</li> <li>7 — 15 Amp. Headlight Low Beam.</li> <li>8 — 15 Amp. Headlight High Beam.</li> </ul> |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|