

PORSCHE (Cont.)

FUSE BLOCK (Cont.)

- 3 — 5 Amp. Right Front and Rear Parking Lights.
- 4 — 5 Amp. Left Front and Rear Parking Lights.
- 5 — 8 Amp. Right Headlight Low Beam.
- 6 — 8 Amp. Left Headlight Low Beam.
- 7 — 8 Amp. Right Headlight High Beam.
- 8 — 8 Amp. Left Headlight High Beam, High Beam Indicator.
- 9 — 5 Amp. Right Front Flasher Light.
- 10 — 5 Amp. Left Front Flasher Light.
- 11 — 16 Amp. Flasher Relay, Brake and Back-Up Lights.
- 12 — 25 Amp. Rear Window Defroster Relay, Fresh Air Blower, Rear Window Defroster Control Light.
- 13 — 25 Amp. Windshield Wipers and Washer Pump.
- 14 — 16 Amp. Electric Sunroof, Rear Window Wiper.
- 15 — 16 Amp. Auxiliary Heater, Cigar Lighter, Blower Switch Control Light.
- 16 — 25 Amp. Power Windows.
- 17 — 16 Amp. Emergency Flasher.
- 18 — 5 Amp. Interior, Glove Compartment, and Luggage Compartment Lighting, Clock.

RENAULT

FUSE BLOCK

R-12 — Fuse block is located inside glove compartment and contains six fuses. Circuits protected are, from top to bottom:

- 1 — 5 Amp. Flasher Unit.
- 2 — 8 Amp. Heated Rear Window (Defroster).
- 3 & 4 — 8 Amp. Circuits Independent Of Ignition Switch.
- 5 — 8 Amp. Circuits Dependent On Ignition Switch.
- 6 — 5 Amp. Automatic Transmission.

R-15 & R-17 — Fuse block is located under instrument panel, below speedometer. Circuits protected are, from left to right:

- 1 — 15 Amp. (Yellow) Instrument Panel, Stop and Back-Up Lights, Rear Window Defroster.
- 2 — 5 Amp. (Green) Automatic Transmission.
- 3 — 5 Amp. (Green) Flasher Unit.
- 4 — 8 Amp. (Blue) Heating/Ventilation Fan Motor.
- 5 — 15 Amp. (Yellow) Left Electric Window.
- 6 — 15 Amp. (Yellow) Right Electric Window.
- 7 — 8 Amp. (Blue) Windshield Wipers.
- 8 — Spare.
- 9 — 8 Amp. (Blue) Electronic Injection.
- 10 — 8 Amp. (Blue) Interior and Trunk Light, Cigar Lighter, Clock.

SAAB

FUSE BLOCK

Sonett — Electrical system is protected by 16 fuses. Fuses are located in two separate fuse blocks. One block is in engine compartment on left inner fender panel the other is located under instrument panel near left side door. Circuits protected and fuse capacities are printed on fuse block cover.

99 Models — Electrical system is protected by 12 fuses including one spare. Fuse block is mounted on left inner fender

panel. Circuits protected and fuse capacities are printed on fuse block cover.

IN-LINE FUSES

99 Models — One 3 Amp. fuse, located near fuse block, protects headlight wiper system.

SUBARU

FUSE BLOCK

Fuse block is located on the right side of inner fender panel under hood. Fuse protects circuits as indicated, from right to left:

- 1 — 25 Amp. Lighting Switch.
- 2 — 20 Amp. Key Warning Switch, Key Warning Buzzer, Clock, Stop Light Switch, Hazard Flasher Unit, Cigar Lighter.
- 3 — 30 Amp. Alternator Stator.
- 4 — 20 Amp. Radio, Heater Fan, Windshield Wiper Switch.
- 5 — 10 Amp. Instrument Panel Illumination, Front Combination Switch, Tail, Side Marker, and License Plate Lights.
- 6 — 15 Amp. Back-Up Light, Turn Signal Flasher, Turn Signal Lights, Cooling Fan Motor.
- 7 — 15 Amp. Headlight Low Beam.
- 8 — 15 Amp. Headlight High Beam.