

TOYOTA

FUSE BLOCK

Corona — Fuse block is located on left side of drivers compartment under instrument panel.

- 1 — 5 Amp. Radio, Tape Player.
- 2 — 10 Amp. Cigar Lighter, Door Warning Light.
- 3 — 15 Amp. Light Control Relay, Parking, Side Marker, Instrument Panel, Tail, and License Plate Lights.
- 4 — 15 Amp. Horn, Hazard Warning Lights, Stop Lights, Seat Belt Warning Light and Buzzer.
- 5 — 10 Amp. Interior Lights.
- 6 — 15 Amp. Spare Terminal.
- 7 — 20 Amp. Windshield Wiper and Washer.
- 8 — 5 Amp. Ignition Coil.
- 9 — 15 Amp. Turn Signal Lights, Regulator and Main Relay.
- 10 — 20 Amp. Heater Blower, Gauges, Back-Up Lights, Brake Warning Lights.
- 11 — 15 Amp. Rear Window Defroster.

Corona Mk II — Fuse block is located on left side of drivers compartment under instrument panel.

- 1 — 15 Amp. Instrument Panel, Knob Illumination, Glove Compartment, Parking, Side Marker, Tail, and License Plate Lights.
- 2 — 20 Amp. Key Warning Buzzer, Stop Lights, Horns, Hazard Warning Lights.
- 3 — 15 Amp. Cigar Lighter, Interior Lights.
- 4 — 15 Amp. Radio, Stereo Tape Player.
- 5 — 20 Amp. Heater/Air Conditioner Blower, Rear Window Defogger, Gauges.
- 6 — 15 Amp. Windshield Wipers/Washer, Turn Signal, and Back-Up Lights.
- 7 — 15 Amp. Ignition Coil Positive Terminal, Alternator Regulator.
- 8 — 20 Amp. Spare.

Celica — Fuse block is located on left side of drivers compartment under instrument panel.

- 1 — 15 Amp. Instrument Panel, Knob Illumination, Glove Compartment, Parking, Side Marker, Tail, and License Plate Lights.
- 2 — 20 Amp. Key Warning Buzzer, Stop Lights, Horns, Hazard Warning Lights.
- 3 — 20 Amp. Cigar Lighter, Clock, Air Conditioner, Interior Lights.
- 4 — 15 Amp. Radio, Stereo Tape Player.
- 5 — 20 Amp. Back-Up Lights, Brake Warning Light, Heater/Air Conditioner Blower, Rear Window Defogger, Gauges.
- 6 — 15 Amp. Alternator Regulator, Turn Signal Lights.
- 7 — 15 Amp. Ignition Coil Positive Terminal.
- 8 — 15 Amp. Windshield Wiper and Washer.

Corolla — Fuse block is located on left side of drivers compartment under instrument panel.

- 1 — 15 Amp. Parking, Side Marker, Instrument Panel, Switch Knobs, Heater Control, Tail, and License Plate Lights.
- 2 — 20 Amp. Horn, Hazard Warning Lights, Stop Lights, Key Warning Buzzer, Seat Belt Warning Light.
- 3 — 20 Amp. Cigar Lighter, Interior Light, Clock.
- 4 — 15 Amp. Radio.
- 5 — 20 Amp. Heater, Rear Window Defroster, Back-Up Lights, Gauges.
- 6 — 15 Amp. Turn Signal Lights, Regulator.
- 7 — 15 Amp. Ignition Coil Positive Terminal.
- 8 — 15 Amp. Windshield Wipers and Washer.

Hi-Lux Pickup — Fuse block is located on left side of drivers compartment under instrument panel.

- 1 — 15 Amp. Instrument Panel, Parking, Side Marker, Tail, and License Plate Lights.
- 2 — 20 Amp. Horns, Stop Lights.
- 3 — 20 Amp. Cigar Lighter, Interior Lights, Coolant Temperature Warning Light, Hazard Warning Lights.
- 4 — 20 Amp. Radio, Windshield Wipers and Washer.
- 5 — 20 Amp. Heater Blower, Gauges, Back-Up Lights.
- 6 — 15 Amp. Alternator Regulator, Turn Signal Lights.
- 5 — 20 Amp. Back-Up Lights, Heater, Gauges, Vacuum Switching Valve.
- 6 — 15 Amp. Voltage Regulator, Turn Signals, Spark Control.

Land Cruiser — Fuse block is mounted under dash to left of steering column (Station Wagon Models) or on left hand kick panel (All exc. Station Wagon Models). Fuse block contains 8 fuses. Circuits protected are, from end of block labeled "TOP":

- 1 — 15 Amp. Instrument, Parking, Side Marker, Tail and License Plate Lights.
- 2 — 20 Amp. Stop Lights, Horn and Hazard Warning System.
- 3 — 20 Amp. Cigarette Lighter, Interior Lights and Inspection Light Socket.
- 4 — 20 Amp. Radio, Windshield Wiper and Washer Motors.
- 5 — 20 Amp. Back-Up Lights, Heater and Gauges.
- 6 — 15 Amp. Voltage Regulator, Turn Signals and Emission Control System.
- 7 — 15 Amp. Ignition Coil.
- 8 — 20 Amp. Headlights.

FUSIBLE LINKS

All Models — A fusible link is located in main battery feed wire near the battery. Protects all circuits except for starter motor.

TRIUMPH

FUSE BLOCK

Spitfire — Fuse block is mounted on left hand side of firewall in engine compartment, adjacent to clutch master cylinder. Block contains three 35 Amp. fuses. Circuits protected are as follows:

- 1 — Fuse fed by white wire protects Windshield Wipers, Fuel and Temperature Indicator, Stop, Reverse, and Turn Signal Lights.
- 2 — Fuse fed by red-green wire protects Parking, Side Marker, Tail, Instrument Panel, and License Plate Lights.

TRIUMPH (Cont.)

FUSE BLOCK (Cont.)

3 - Fuse fed by brown wire protects Dimmer Switch, Key Warning Buzzer, Courtesy Light, Horn, Hazard Warning System.

TR6 - Fuse block is located on left side of engine compartment. Block contains four 35 Amp. fuses, the top one being a spare. Circuits protected are as follows:

- 1 - Fuse fed by white wire protects Stop and Back-Up Lights, Windshield Wipers and Washer, Gauges, Heater, Turn Signal Flasher.
- 2 - Fuse fed by brown wire protects Horn, Dimmer Switch, Glove Compartment, Key Warning Buzzer, Interior Light, Hazard Warning System, Transmission Tunnel Light, Luggage Compartment Light.
- 3 - Fuse fed by red-green wire protects Parking, Side Marker, Tail, License Plate, and Instrument Panel Lights.

VOLKSWAGEN

FUSE BLOCK

Type 1 (Beetle) - Fuse block is located under instrument panel in approximately the center of vehicle. Fuse block contains 12 fuses. Circuits protected are, from left to right:

- 1 - 8 Amp. License Plate and Right Tail Light.
- 2 - 8 Amp. Parking, Side Marker, and Left Tail Lights.
- 3 - 8 Amp. Left Headlight Low Beam.
- 4 - 8 Amp. Right Headlight Low Beam.
- 5 - 8 Amp. Left Headlight High Beam.
- 6 - 8 Amp. Right Headlight High Beam, High Beam Indicator.
- 7 - 8 Amp. Accessories.
- 8 - 8 Amp. Emergency Flasher System.
- 9 - 16 Amp. Seat Belt Interlock System, Interior Light.
- 10 - 16 Amp. Windshield Wipers, Rear Window Defogger.
- 11 - 8 Amp. Safety Belt Interlock System, Horn, Stop Lights, Control Valve (Automatic Stick Shift).
- 12 - 8 Amp. Indicator Lights, Gauges.

Type 1 (Super Beetle) - Fuse block is located under instrument panel in approximately center of vehicle. Fuse block contains 12 fuses. Circuits protected are, from left to right:

- 1 - 8 Amp. Parking, Side Marker, and Tail Lights.
- 2 - 8 Amp. License Plate, Right Tail Light.
- 3 - 8 Amp. Left Headlight Low Beam.
- 4 - 8 Amp. Right Headlight Low Beam.
- 5 - 8 Amp. Left Headlight High Beam.
- 6 - 8 Amp. Right Headlight High Beam, High Beam Indicator.
- 7 - 8 Amp. Accessories.
- 8 - 8 Amp. Emergency Flasher System, Safety Belt Interlock System.
- 9 - 8 Amp. Interior Light.
- 10 - 16 Amp. Windshield Wipers, Rear Window Defogger, Fresh Air Fan.
- 11 - 8 Amp. Safety Belt Interlock System, Horn, Stop Lights, Control Valve (Automatic Stick Shift).
- 12 - 8 Amp. Indicator Lights, Gauges.

Type 1 (Karmann Ghia) - Fuse block is located under instrument panel on right side of steering column. Fuse block contains 12 fuses. Three additional fuses are used: Two independent 8 Amp. fuses for Back-Up Lights and Rear Window Defogger are located on a support near coil in engine compartment. A 16 Amp. fuse protects Auxiliary Heater (Optional)

and is situated in front of luggage compartment near heater. Fuses in block protect the following circuits, from right to left:

- 1 - 8 Amp. Parking and Side Marker Lights, Left Tail Light.
- 2 - 8 Amp. Right Tail Light, License Plate Light.
- 3 - 8 Amp. Left Headlight Low Beam.
- 4 - 8 Amp. Right Headlight Low Beam.
- 5 - 8 Amp. Left Headlight High Beam, High Beam Indicator.
- 6 - 8 Amp. Right Headlight High Beam.
- 7 - 8 Amp. Accessories.
- 8 - 8 Amp. Emergency Flasher System.
- 9 - 16 Amp. Safety Belt Interlock System, Interior Light.
- 10 - 16 Amp. Windshield Wipers, Rear Window Defogger.
- 11 - 8 Amp. Safety Belt Interlock System, Horn, Control Valve (Automatic Stick Shift).
- 12 - 8 Amp. Indicator Lights, Gauges.

Type 2 (Transporter) - Fuse block is located under instrument panel on right side of steering column. Fuse block contains 12 fuses. Four additional fuses are used as follows: A 16 Amp. fuse positioned in engine compartment near heater blower guards Warm Air Blower. Two more fuses protect Auxiliary Heater and are located under instrument panel; one fuse is 8 Amp. the other is 16 Amp. An 8 Amp. fuse located near ignition coil protects Back-Up Lights. Fuses in block protect the following circuits, from left to right:

- 1 - 8 Amp. Left Tail Light, Left Rear Side Marker Light.
- 2 - 8 Amp. Parking Lights, Right Rear Side Marker Lights, License Plate Lights, Right Front Side Marker Lights.
- 3 - 8 Amp. Left Headlight Low Beam.
- 4 - 8 Amp. Right Headlight Low Beam.
- 5 - 8 Amp. Left Headlight High Beam, High Beam Indicator.
- 6 - 8 Amp. Right Headlight High Beam.
- 7 - 8 Amp. Accessories.
- 8 - 8 Amp. Emergency Flasher Lights, Front Interior Light.
- 9 - 16 Amp. Rear Interior Light, Warning Buzzer, Auxiliary Heater (Optional).
- 10 - 16 Amp. Windshield Wipers, Rear Window Defogger, Auxiliary Heater (Optional).
- 11 - 8 Amp. Turn Signals, Warning Lights, Back-Up Lights, and Kick Down Switch (Automatic Transmission).
- 12 - 8 Amp. Horn, Stop Lights, Brake Warning Light.

Type 4 (412) - Fuse block is located under instrument panel on left side. Fuse block contains 12 fuses. Four fuses, additional to fuse block, protect the following electrical circuits: A 16 Amp. fuse protects Heater Booster Main Circuit. An 8 Amp. fuse covers the Overheating Switch and another 8 Amp.