

## ALFA ROMEO

### FUSE BLOCK

**Alfetta GT 2000** — Fuse block is located under lower edge of instrument panel on left side of car and contains 14 fuses mounted horizontally. Circuits protected by the fuses are, from left to right:

- 1 — 16 Amp. Heated Rear Window.
- 2 — 16 Amp. Heater Blower Motor.
- 3 — 16 Amp. Flasher Unit.
- 4 — 8 Amp. Stop Lights.
- 5 — 8 Amp. Courtesy Lights, Door Buzzer.

- 6 — 8 Amp. Windshield Wiper, Cigarette Lighter, Back-Up Lights, Seat Belt Buzzer.
- 7 — 8 Amp. Gauges, Relays.
- 8 — 8 Amp. Fuel Pump, Fuel Cut-off Solenoid.
- 9 — 8 Amp. Front Left and Right Rear Parking Lights, Instrument Illumination and Control Illumination Lights.
- 10 — 8 Amp. Right Front and Left Rear Parking Lights.
- 11 — 8 Amp. Left Low Beam.
- 12 — 8 Amp. Right Low Beam.
- 13 — 8 Amp. Left High Beam.
- 14 — 8 Amp. Right High Beam.

## AUDI

### FUSE BLOCK

**Fox** — Fuse block is located in engine compartment on left wheel housing just behind radiator. It contains 17 fuses arranged horizontally. Circuits protected by the fuses are, from left to right:

- 1 — 8 Amp. Left Hand Low Beam.
- 2 — 8 Amp. Right Hand Low Beam.
- 3 — 8 Amp. Left Hand High Beam.
- 4 — 8 Amp. Right Hand High Beam.
- 5 — 8 Amp. Fan, Heater and Back-Up Lights.
- 6 — 8 Amp. Horn.
- 7 — 8 Amp. Turn Signals and Emergency Flasher.
- 8 — 16 Amp. Rear Window Defogger.
- 9 — 16 Amp. Windshield Wiper Motor and Cigarette Lighter.
- 10 — 8 Amp. Stop Lights, Interior Lights and Clock.
- 11 & 12 — 16 Amp. Windshield Wiper Switch.
- 13 — 8 Amp. Right Hand Tail & Parking Lights and License Plate Lights.
- 14 — 8 Amp. Left Hand Tail & Parking Lights.
- 15 — 8 Amp. Instrument Lights.

- 16 — 25 Amp. Air Conditioner (Optional).
- 17 — Spare.

**100 Models** — Fuse Block is mounted in front of passenger compartment next to clutch pedal. Block contains 10 fuses, mounted horizontally. Circuits protected by the fuses are, from left to right:

- 1 — 8 Amp. Turn Signals and Emergency Flasher.
- 2 — 16 Amp. Windshield Washer, Fan Motor, Horn, Gauges, Oil Pressure Warning Light and Back-Up Lights.
- 3 — 16 Amp. Windshield Wiper Motor, Cigarette Lighter, Clock and Stop, Instrument, License Plate, Glove Compartment and Interior Lights.
- 4 — 8 Amp. Right Hand Tail Light.
- 5 — 8 Amp. Left Hand High Beam.
- 6 — 8 Amp. Right Hand High Beam and High Beam Indicator.
- 7 — 8 Amp. Left Hand Low Beam.
- 8 — 8 Amp. Right Hand Low Beam.
- 9 — 8 Amp. Left Hand Tail Light.
- 10 — 8 Amp. Rear Window Defogger, Radiator Fan Motor, Clock.

## AUSTIN MARINA

### FUSE BLOCK

Fuse Block is located inside vehicle just above parcel shelf rail on right side of car. Four 35 Amp. fuses are mounted vertically in fuse block. Circuits protected by the fuses are, from top to bottom:

- 1 — Interior Light, Horn, Headlight Flasher, Brake Failure Warning Light, Key Warning Buzzer, Cigarette Lighter and Luggage Compartment Light.
- 2 — Right Hand Parking Light, Tail Light, License Plate Light and Side Marker Lights. In addition, one Instrument Light.

- 3 — Left Hand Parking Light, Tail Light, License Plate Light and Side Marker Lights. In addition, one Instrument Light and Shift Quadrant Light, if equipped.
- 4 — Turn Signals, Windshield Wiper, Stop Lights, Back-Up Lights, Seat Belt Warning Circuit, Carburetor Heater and Rear Window Defogger, if equipped.

### IN-LINE FUSES

In-line fuses protect Heater Motor, Hazard Warning Flasher and Radio, if equipped. These fuse holders are located behind center of instrument panel. Another in-line fuse protects the Anti Run-On Valve and Oil Pressure Indicator. This fuse holder is located next to fuse block.