

BMW

FUSE BLOCK

4 Cylinder Models — Fuse block is located in engine compartment on left fender panel near firewall. Block contains 12 fuses which protect circuits as indicated:

- 1 — 5 Amp. Left Tail and Parking Lights.
- 2 — 5 Amp. License Plate, Instrument Panel Illumination, Side Marker, Fog, Right Side Tail and Parking Lights, and Headlight Relay.
- 3 — 8 Amp. Left Low Beam.

- 4 — 8 Amp. Right Low Beam.
- 5 — 5 Amp. Left Turn Signal.
- 6 — 5 Amp. Right Turn Signal.
- 7 — 16 Amp. Cigar Lighter.
- 8 — 8 Amp. Clock, Key Warning Buzzer, Hazard Warning Flasher, Trailer Flasher System, and Interior Light.
- 9 — 16 Amp. Heater Blower.
- 10 — 16 Amp. Heated Rear Window.
- 11 — 8 Amp. Automatic Choke, Electric Fuel Pump, and Instrument Panel Indicators.
- 12 — 16 Amp. Horn, Windshield Wipers and Washer, Stop, Turn Signal Flasher, and Back-Up Lights.

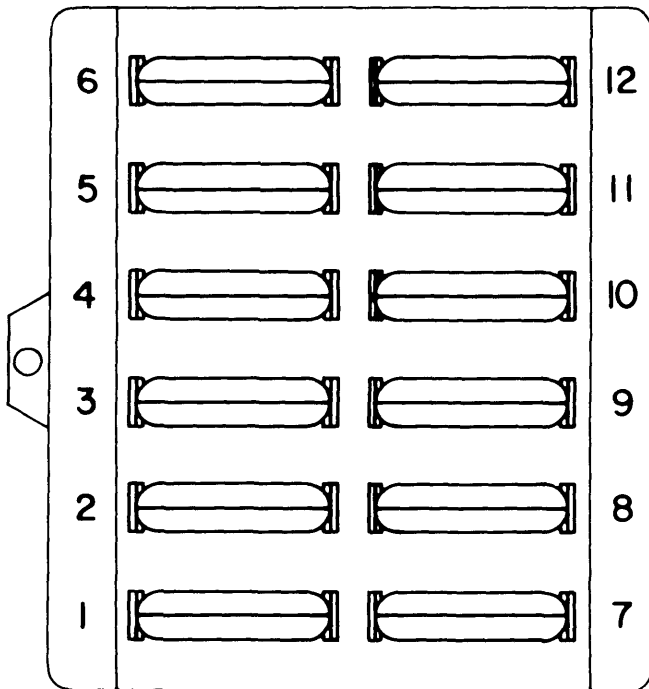


Fig. 1 BMW 4 Cylinder Fuse Block

6 Cyl. Models (Exc. 530i) — Fuse block is located behind instrument panel on drivers side and is accessible by opening compartment door. Block contains 12 fuses arranged horizontally. Circuits protected by the fuses are, from left to right:

- 1 — 5 Amp. Left Hand Tail, Parking & Side Marker Lights and Engine Compartment Light.
- 2 — 8 Amp. Right Hand Tail, Parking & Side Marker Lights, License Plate & Instrument Panel Lights, Rear Fog Lights and Fog Light Relay.
- 3 — 8 Amp. Left Hand Low Beam.
- 4 — 8 Amp. Right Hand Low Beam.
- 5 — 5 Amp. Left Hand Turn Signal.
- 6 — 5 Amp. Right Hand Turn Signal.
- 7 — 16 Amp. Cigarette Lighter and Automatic Radio Antenna.
- 8 — 8 Amp. Clock, Interior Light, Hazard Warning Flasher, Trailer Turn Indicator, Glove and Luggage Compartment Lights.
- 9 — 16 Amp. Heater Blower, 25 Amp. with Electric Sun Roof.
- 10 — 16 Amp. Rear Window Defogger.
- 11 — 8 Amp. Choke, Gauges and Fuel Pump.
- 12 — 16 Amp. Stop, Back-Up & Turn Indicator Lights, Horn, Windshield Wiper and Washer Motors.

530i Models — Fuse block is located in engine compartment near battery. Circuits protected are listed on fuse block cover.

CAPRI II

FUSE BLOCK

Fuse block is located on left hand side of engine compartment and contains 7 fuses. Circuits protected by the fuses are, from left to right:

- 1 — 8 Amp. Cigarette Lighter, Clock, Interior Light, Hazard Flasher.

- 2 — 8 Amp. License Plate Light, Instrument Lights, Map Light.
- 3 — 8 Amp. Right Tail, Parking and Side Marker Lights.
- 4 — 8 Amp. Left Tail, Parking and Side Marker Lights.
- 5 — 8 Amp. Horn, Heater Blower.
- 6 — 16 Amp. Front and Rear Wiper Motors, Back-Up Light, Instrument Lights.
- 7 — 8 Amp. Turn Signals, Stop Lights.