

## FIAT (Cont.)

## FUSE BLOCK (Cont.)

**131** — Fuse block is located under glove compartment and contains one row of 12 fuses and another row of two fuses. In addition, one fuse in a separate holder is located on left side of engine compartment and protects the EGR Warning System (3 Amp.). The left fuse, of the pair in fuse block protects the In-board Headlights High Beam (16 Amp.) while the right fuse protects the Outboard Headlights High Beam and Indicator (16 Amp.) The other fuses in the block protect, from left to right:

- 1 — 8 Amp. Right Outboard Headlight Low Beam.
- 2 — 8 Amp. Left Outboard Headlight Low Beam.
- 3 — 16 Amp. Horns and Relay, Engine Fan Motor.

- 4 — 16 Amp. Clock, Interior Lights, Cigarette Lighter.
- 5 — 16 Amp. Rear Window Defogger.
- 6 — 16 Amp. A/C System.
- 7 — 16 Amp. Key Buzzer, Seat Belt Buzzer System.
- 8 — 8 Amp. Stop Lights, Back-Up Lights, Turn Signals, Gauges, Indicator Lights, Heater Blower, A/C Temperature Control Unit, Emission Control System.
- 9 — 10 Amp. Windshield Wiper/Washer.
- 10 — 8 Amp. Fuel Pump.
- 11 — 10 Amp. Left Rear Tail and Side Marker Lights, Right Front Parking and Side Marker Lights.
- 12 — 8 Amp. Left Front Parking and Side Marker Lights, Right Rear Tail and Side Marker Lights, License Lights, Instrument and Control Illumination Lights.

## HONDA

## FUSE BLOCK

Fuse Block is located on right side kick panel. Block contains 10 fuses. Circuits protected are, from top to bottom:

- 1 — 10 Amp. Starter Interlock.
- 2 — 10 Amp. Voltage Regulator.
- 3 — 10 Amp. Windshield Wiper/Washer.
- 4 — 10 Amp. Turn Signals, Back-up Lights, Fuel Gauge.
- 5 — 15 Amp. Heater, Radio, Rear Window Defogger.

- 6 — 15 Amp. Hazard Warning System, Horn, Stop Lights.
- 7 — 10 Amp. Interior Light, Cigarette Lighter, Clock.
- 8 — 15 Amp. Tail Lights, License Lights, Instrument Lights.
- 9 — 15 Amp. Headlights.
- 10 — 10 Amp. Seat Switch.

## IN-LINE FUSES

One large 45 Amp. in-line fuse is installed in main battery cable to prevent damage to main wiring harness. Fuse is located in engine compartment near battery.

## JAGUAR

## FUSE BLOCK

**Sedan Models** — Fuse block is located behind instrument panel. Access to fuses is obtained by turning access panel retaining pin counterclockwise until it unlocks. Panel will then drop slightly and bottom edge may be lifted clear of opening. Circuits protected are as follows:

- 1 — 20 Amp. Fog Lights.
- 2 — 15 Amp. Hazard Warning System.
- 3 — 35 Amp. Map and Interior Lights, Cigarette Lighter, Clock, Electric Aerial.
- 4 — 15 Amp. Back-Up Lights, Gauges.
- 5 — 15 Amp. Turn Signals.

- 6 — 35 Amp. Stop Lights, Battery Cooling, Horn Relay, Windshield Washer.
- 7 — 15 Amp. Instrument Lights.
- 8 — 15 Amp. Left Side Marker and Tail Lights.
- 9 — 15 Amp. Right Side Marker and Tail Lights.
- 10 — 50 Amp. A/C and Heater Relay.
- 11 — 50 Amp. A/C Control System and Compressor Clutch, Windshield Wipers.
- 12 — 35 Amp. Rear Window Defogger.

## IN-LINE FUSES

**Head Lights** — High beam is protected by a 25 Amp. in-line fuse and low beam is governed by a 10 amp in-line fuse.

**Horn Relay** — Circuit is protected by a 17 Amp. in-line fuse.

## LUV

## FUSE BLOCK

Fuse block is installed in engine compartment on left inner fender panel near firewall and contains 11 fuses with fuse applications listed on cover. Fuse applications are as follows:

- 1 — 15 Amp. Lighting Switch.
- 2 — 15 Amp. Tail and Instrument Lights.
- 3 — 15 Amp. Turn Signals, Stop Lights, Horn.

- 4 — 15 Amp. Interior Light, A/C.
- 5 — 15 Amp. Heater, Back-Up Lights.
- 6 — 15 Amp. Fuel Pump, Emission Control.
- 7 — 15 Amp. Windshield Wiper/Washer, Cigarette Lighter, Radio.
- 8 — 10 Amp. Right High Beam Headlight.
- 9 — 10 Amp. Left High Beam Headlight.
- 10 — 10 Amp. Right Low Beam Headlight.
- 11 — 10 Amp. Left Low Beam Headlight.