

## PEUGEOT

## FUSE BLOCK

Fuse block is located on the left side of vehicle under instrument panel. Circuits protected are, from left to right:

1 - 5 Amp. Side Marker, License Plate, Instrument Panel, Heater Control, and Side Master Lights.

2 - 10 Amp. Interior, Trunk, and Glove Compartment Lights, Horns, Cigar Lighter, Clock.  
 3 - 10 Amp. Stop and Back-Up Lights, Cooling Fan Clutch, Starter Switch, Safety Belt Relays.  
 4 - 15 Amp. Heater Blower, Windshield Wiper and Washer, Windshield Wiper Relay, Rear Window Defroster.  
 5 - 10 Amp. Accessories, Turn Signal and Hazard Warning Lights, Thermal Voltmeter, Gauges.

## PORSCHE

## FUSE BLOCK

**914 Models** - Fuse block is located under instrument panel to left of steering column. Circuits protected are, from left to right:

1 - 8 Amp. Left Headlight High Beam.  
 2 - 8 Amp. Right Headlight High Beam.  
 3 - 8 Amp. Left Headlight Low Beam.  
 4 - 8 Amp. Right Headlight Low Beam.  
 5 - 8 Amp. Left Parking Lights.  
 6 - 8 Amp. Right Parking Lights.  
 7 - 8 Amp. License Plate Lights.  
 8 - 16 Amp. Windshield Wipers, Cigarette Lighter, Turn Signals, Stop and Back-Up Lights.  
 9 - 8 Amp. Horn, Fan.  
 10 - 16 Amp. Fog Lights (Optional).  
 11 - 8 Amp. Emergency Flashers, Interior Light.  
 12 - 16 Amp. Retractable Headlights.

**911 Models** - Main fuse block is located inside luggage compartment on left side. Fuse block contains 18 fuses. An additional fuse block is located in engine compartment on left side under regulator cover. Secondary fuse block protects

Sportomatic and Fan Relay (5 Amp.), Heater Fan (25 Amp.) and Rear Window Defogger (25 Amp.). Main fuse block protects the following circuits, from front to rear:

1 - 16 Amp. Fog Lights.  
 2 - 5 Amp. License Plate Light.  
 3 - 5 Amp. Right Front and Rear Parking Lights.  
 4 - 5 Amp. Left Front and Rear Parking Lights.  
 5 - 8 Amp. Right Headlight Low Beam.  
 6 - 8 Amp. Left Headlight Low Beam.  
 7 - 8 Amp. Right Headlight High Beam.  
 8 - 8 Amp. Left Headlight High Beam, High Beam Indicator.  
 9 - 5 Amp. Right Front Flasher Light.  
 10 - 5 Amp. Left Front Flasher Light.  
 11 - 16 Amp. Flasher Relay, Brake and Back-Up Lights.  
 12 - 25 Amp. Rear Window Defroster Relay, Fresh Air Blower, Rear Window Defroster Control Light.  
 13 - 25 Amp. Windshield Wipers and Washer Pump.  
 14 - 16 Amp. Electric Sunroof, Rear Window Wiper.  
 15 - 16 Amp. Auxiliary Heater, Cigar Lighter, Blower Switch Control Light.  
 16 - 25 Amp. Power Windows.  
 17 - 16 Amp. Emergency Flasher.  
 18 - 5 Amp. Interior, Glove Compartment, and Luggage Compartment Lighting, Clock.

## RENAULT

## FUSE BLOCK

**R-12** - Fuse block is located inside glove compartment and contains six fuses. Circuits protected are, from top to bottom:

1 - 5 Amp. Flasher Unit.  
 2 - 8 Amp. Heated Rear Window (Defroster).  
 3 & 4 - 8 Amp. Circuits Independent Of Ignition Switch.  
 5 - 8 Amp. Circuits Dependent On Ignition Switch.  
 6 - 5 Amp. Automatic Transmission.

**R-15 & R-17** - Fuse block is located under instrument panel, below speedometer. Circuits protected are, from left to right:

1 - 15 Amp. (Yellow) Instrument Panel, Stop and Back-Up Lights, Rear Window Defroster.  
 2 - 5 Amp. (Green) Automatic Transmission.  
 3 - 5 Amp. (Green) Flasher Unit.  
 4 - 8 Amp. (Blue) Heating/Ventilation Fan Motor.  
 5 - 15 Amp. (Yellow) Left Electric Window.  
 6 - 15 Amp. (Yellow) Right Electric Window.  
 7 - 8 Amp. (Blue) Windshield Wipers.  
 8 - Spare.  
 9 - 8 Amp. (Blue) Electronic Injection.  
 10 - 8 Amp. (Blue) Interior and Trunk Light, Cigar Lighter, Clock.

## SAAB

## FUSE BLOCK

**99 Models** - Electrical system is protected by 12 fuses including one spare. Fuse block is mounted on left inner fender

panel. Circuits protected and fuse capacities are printed on fuse block cover.