

DATSUN

FUSE BLOCK

B210 — Fuse block is located under instrument panel to left of steering column and contains 8 fuses. Circuits protected are as follows:

- 1 — 10 Amp. Kickdown Switch, Neutral Safety Switch, Turn Signals, Back-Up Lights, Gauges, Warning Lights, Tachometer.
- 2 — 15 Amp. Windshield Wiper/Washer, Heater.
- 3 — 15 Amp. Hazard Warning System, Stop Lights, Horn.
- 4 — 15 Amp. Interior Light, Theft Protection System, Cigarette Lighter.
- 5 — 10 Amp. EGR and Catalyist Warning System.
- 6 — 15 Amp. Headlights.
- 7 — 10 Amp. Parking, Tail, Side Marker and Instrument Lights.
- 8 — 20 Amp. Rear Window Defogger, Radio.

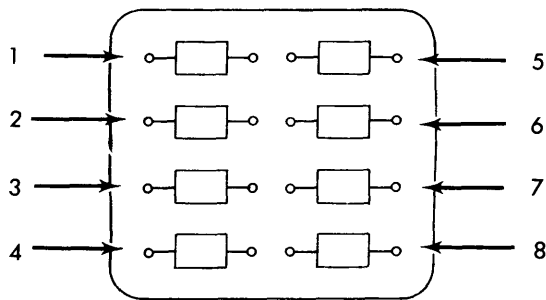


Fig. 3 Datsun B210 Fuse Block

610 & 710 — Fuse block is located on right side kick panel and contains 10 fuses. Circuits protected are as follows:

- 1 — 10 Amp. Turn Signals, Back-Up Lights.
- 2 — 5 Amp. Warning Lights, Gauges.
- 3 — 20 Amp. Heater, Radio.
- 4 — 10 Amp. Windshield Wiper/Washer.
- 5 — 10 Amp. Left Headlight.
- 6 — 20 Amp. Side Marker, Tail and License Lights, Instrument and Control Illumination Lights.
- 7 — 10 Amp. Hazard Warning System, Interior Lights, Theft Protection System.
- 8 — 10 Amp. Clock, Cigarette Lighter.
- 9 — 20 Amp. Stop Lights, Horn.
- 10 — 10 Amp. Right Headlight.

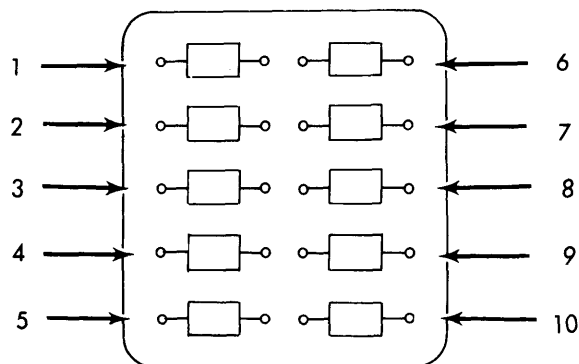


Fig. 4 Datsun 610 and 710 Fuse Block

280Z — Fuse block is located on right side kick panel and contains 14 fuses. Circuits protected are as follows:

- ① — 10 Amp. Right Headlight.
- ② — 10 Amp. Left Headlight.
- ③ — 10 Amp. Flashers.
- ④ — 10 Amp. Gauges.
- ⑤ — 20 Amp. Air Conditioner.
- ⑥ — 20 Amp. Windshield Wiper/Washer.
- ⑦ — 10 Amp. Radio.
- ⑧ — 20 Amp. Parking Lights, Taillights.
- ⑨ — 10 Amp. Interior Lights.
- ⑩ — 10 Amp. Cig. Lighter, Clock, Map Light.
- ⑪ — 10 Amp. Horn.
- ⑫ — 10 Amp. Stop Lights.
- ⑬ — 20 Amp. Rear Window Defogger.
- ⑭ — 1 Amp. Catalyist Warning Light.

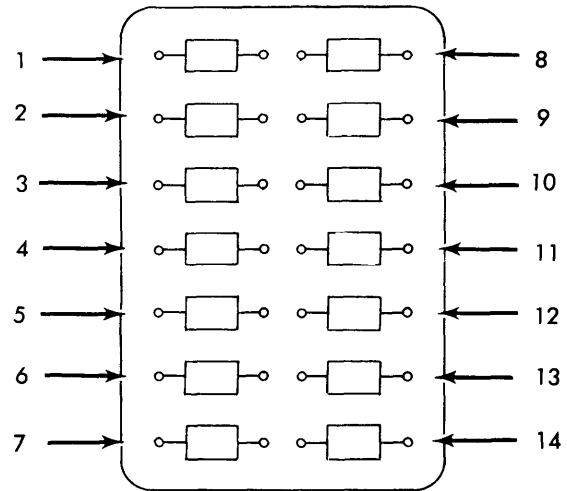


Fig. 5 Datsun 280Z Fuse Block

F10 — Fuse block is located under instrument panel to left of steering column and contains eight fuses. Circuits protected are as follows:

- ① — 15 Amp. Headlights.
- ② — 10 Amp. Taillights.
- ③ — 15 Amp. Horn, Stop Lights, Hazard Warning Lights.
- ④ — 15 Amp. Fan Motor.
- ⑤ — 20 Amp. Rear Window Defogger, Cig. Lighter, Clock.
- ⑥ — 15 Amp. Windshield Wiper/Washer, Heater, Radio.
- ⑦ — 10 Amp. Cooling Fan, Gauges, Turn Signals.
- ⑧ — 10 Amp. Auto. Choke, EGR Solenoid, Throttle Opener.

Pickup — Fuse block is located under instrument panel to the right of steering column and contains 6 fuses. Circuits protected are as follows:

- 1 — 10 Amp. Heater, Emission Control.
- 2 — 15 Amp. Windshield Wiper/Washer, Heater Blower.
- 3 — 10 Amp. Back-Up, Warning and Turn Signal Lights, Gauges, Kickdown Switch, Voltage Regulator.
- 4 — 10 Amp. Side Marker, Tail, License, Engine Compartment, Instrument and Control Illumination Lights.

DATSUN (Cont.)

FUSE BLOCK (Cont.)

- 5 — 15 Amp. Headlights.
- 6 — 15 Amp. Hazard Warning System, Horn, Stop Lights.

Pickup — In addition, pickup models have fusible links protecting the interior lights, cigarette lighter and clock.

FUSIBLE LINK

All Models — Fusible link is located in wire between battery and alternator near the battery. Its purpose is to protect the alternator and related circuits.

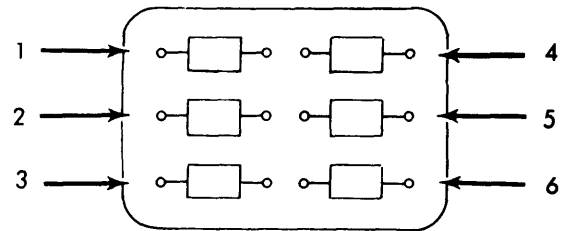


Fig. 6 Datsun Pickup Fuse Block

FIAT

FUSE BLOCK

124 Sport Spider & Sport Coupe — Fuse block is located under instrument panel to left of steering post. Block contains 10 fuses. Four additional fuses, in separate holders, protect: Seat Belt and Key Buzzer (3 Amp.); EGR Mileage Indicator (3 Amp.); Cigarette Lighter, Clock, Interior Lights, Hazard Warning System and Inspection Light Socket (16 Amp.); and Fuel Pump and Relay (8 Amp.). Fuses in fuse block protect the following circuits, from right to left:

- 1 — 25 Amp. Electropneumatic Horns, Engine Fan Motor.
- 2 — 8 Amp. Windshield Wiper/Washer, Heater Fan Motor.
- 3 — 8 Amp. Left Headlight High Beam, High Beam Indicator.
- 4 — 8 Amp. Right Headlight High Beam.
- 5 — 8 Amp. Right Headlight Low Beam.
- 6 — 8 Amp. Left Headlight Low Beam.
- 7 — 8 Amp. Left Front Parking Light, Parking Light and Tail Light Indicator, Right Rear Tail Light, Left Front and Right Rear Side Marker Lights, Left License Plate Light, Cigar Lighter Illumination, Instrument Cluster Lights, Hazard Warning Signal Switch Light, Control Knob Illumination.
- 8 — 8 Amp. Right Front Parking Light, Left Rear Tail Light, Right Front and Left Rear Side Marker Lights, Right License Light.
- 9 — 8 Amp. Turn Signal and Stop Lights, Gauges, Warning Lights, Seat Belt Buzzer Relay, Emission Control System.
- 10 — 8 Amp. Voltage Regulator, Alternator Field Winding.

128 (Except SL Coupe) — Fuse block is located under instrument panel to left of steering column and contains 8 fuses. Three additional fuses, in separate holders, protect Key and Seat Belt Warning Buzzer (3 Amp.); Fuel Pump and Relay (8 Amp.); and Rear Window Defogger (16 Amp.). Fuses in block protect the following circuits, from right to left:

- 1 — 8 Amp. Gauges, Warning Lights, Turn Signals, Stop Lights, Back-Up Lights, Heater, Windshield Wiper, Seat Belt Buzzer Relay, Emission Control System
- 2 — 16 Amp. Interior Lights, Horns, Engine Fan Motor, and Hazard Warning Flasher.
- 3 — 8 Amp. Left Headlight High Beam and High Beam Indicator.
- 4 — 8 Amp. Right Headlight High Beam.
- 5 — 8 Amp. Left Headlight Low Beam.
- 6 — 8 Amp. Right Headlight Low Beam.
- 7 — 8 Amp. Left Front Parking and Side Marker Lights, Parking and Tail Lights, Right Tail and Side Marker Lights, and Left License Plate Light.

- 8 — 8 Amp. Right Parking and Side Marker Lights, Left Rear Tail and Side Marker Lights, Right Side License Plate Light, Instrument Cluster Lights, Hazard Warning Flashers, Instrument Control Knob Illumination.

128 SL Coupe — Fuse block is located under instrument panel to left of steering column and contains 10 fuses. Three additional fuses, in separate holders, protect Key and Seat Belt Warning Buzzer (3 Amp.); Fuel Pump and Relay (8 Amp.); and Rear Window Defogger (16 Amp.). Fuses in block protect the following circuits, from left to right:

- 1 — 8 Amp. Stop and Back-Up Lights, Windshield Wiper/Washer, Diverter Valve Relay.
- 2 — 8 Amp. Gauges, Indicator Lights, Turn Signals, Heater Blower, Key and Seat Belt Buzzer Relay, Diverter Solenoid Valve.
- 3 — 8 Amp. Left Headlight High Beam and High Beam Indicator.
- 4 — 8 Amp. Right Headlight High Beam.
- 5 — 8 Amp. Left Headlight Low Beam.
- 6 — 8 Amp. Right Headlight Low Beam.
- 7 — 8 Amp. Left Front Parking and Side Marker Lights, Parking and Tail Lights Indicator, Right Rear Tail and Side Marker Lights, Left License Plate Light.
- 8 — 8 Amp. Right Front Parking and Side Marker Lights, Left Rear Tail and Side Marker Lights, Right License Plate Light, Instrument Lights, Heater Control Illumination Light, Hazard Warning Flashers.
- 9 — 16 Amp. Horn Relay and Engine Fan Motor.
- 10 — 16 Amp. Hazard Warning System, Interior Light.

X1/9 — Fuse block is located under instrument panel to left of steering column. Fuse block contains 12 fuses. Two additional fuses, in separate holders, protect Carburetor Fan and Relay, and Interior Light (8 Amp.); and Emission Control Maintenance Reminder (3 Amp.). Fuses in block protect the following circuits, from left to right:

- 1 — 8 Amp. Gauges, Indicator Lights, Turn Signals, Stop Lights, Back-Up Lights, Heater Blower, Windshield Wiper/Washer, Seat Belt and Key Buzzer System, Emission Control System.
- 2 — 8 Amp. Headlight Motors, Belt/Starting Control Unit, and Key/Seat Belt Buzzer.
- 3 — 8 Amp. Left Headlight High Beam and High Beam Indicator.
- 4 — 8 Amp. Right Headlight High Beam.
- 5 — 8 Amp. Left Headlight Low Beam.
- 6 — 8 Amp. Right Headlight Low Beam.