

DATSUN (Cont.)

FUSE BLOCK (Cont.)

- 5 — 15 Amp. Headlights.
- 6 — 15 Amp. Hazard Warning System, Horn, Stop Lights.

Pickup — In addition, pickup models have fusible links protecting the interior lights, cigarette lighter and clock.

FUSIBLE LINK

All Models — Fusible link is located in wire between battery and alternator near the battery. Its purpose is to protect the alternator and related circuits.

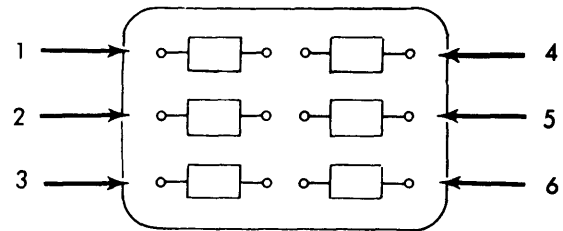


Fig. 6 Datsun Pickup Fuse Block

FIAT

FUSE BLOCK

124 Sport Spider & Sport Coupe — Fuse block is located under instrument panel to left of steering post. Block contains 10 fuses. Four additional fuses, in separate holders, protect: Seat Belt and Key Buzzer (3 Amp.); EGR Mileage Indicator (3 Amp.); Cigarette Lighter, Clock, Interior Lights, Hazard Warning System and Inspection Light Socket (16 Amp.); and Fuel Pump and Relay (8 Amp.). Fuses in fuse block protect the following circuits, from right to left:

- 1 — 25 Amp. Electropneumatic Horns, Engine Fan Motor.
- 2 — 8 Amp. Windshield Wiper/Washer, Heater Fan Motor.
- 3 — 8 Amp. Left Headlight High Beam, High Beam Indicator.
- 4 — 8 Amp. Right Headlight High Beam.
- 5 — 8 Amp. Right Headlight Low Beam.
- 6 — 8 Amp. Left Headlight Low Beam.
- 7 — 8 Amp. Left Front Parking Light, Parking Light and Tail Light Indicator, Right Rear Tail Light, Left Front and Right Rear Side Marker Lights, Left License Plate Light, Cigar Lighter Illumination, Instrument Cluster Lights, Hazard Warning Signal Switch Light, Control Knob Illumination.
- 8 — 8 Amp. Right Front Parking Light, Left Rear Tail Light, Right Front and Left Rear Side Marker Lights, Right License Light.
- 9 — 8 Amp. Turn Signal and Stop Lights, Gauges, Warning Lights, Seat Belt Buzzer Relay, Emission Control System.
- 10 — 8 Amp. Voltage Regulator, Alternator Field Winding.

128 (Except SL Coupe) — Fuse block is located under instrument panel to left of steering column and contains 8 fuses. Three additional fuses, in separate holders, protect Key and Seat Belt Warning Buzzer (3 Amp.); Fuel Pump and Relay (8 Amp.); and Rear Window Defogger (16 Amp.). Fuses in block protect the following circuits, from right to left:

- 1 — 8 Amp. Gauges, Warning Lights, Turn Signals, Stop Lights, Back-Up Lights, Heater, Windshield Wiper, Seat Belt Buzzer Relay, Emission Control System
- 2 — 16 Amp. Interior Lights, Horns, Engine Fan Motor, and Hazard Warning Flasher.
- 3 — 8 Amp. Left Headlight High Beam and High Beam Indicator.
- 4 — 8 Amp. Right Headlight High Beam.
- 5 — 8 Amp. Left Headlight Low Beam.
- 6 — 8 Amp. Right Headlight Low Beam.
- 7 — 8 Amp. Left Front Parking and Side Marker Lights, Parking and Tail Lights, Right Tail and Side Marker Lights, and Left License Plate Light.

- 8 — 8 Amp. Right Parking and Side Marker Lights, Left Rear Tail and Side Marker Lights, Right Side License Plate Light, Instrument Cluster Lights, Hazard Warning Flashers, Instrument Control Knob Illumination.

128 SL Coupe — Fuse block is located under instrument panel to left of steering column and contains 10 fuses. Three additional fuses, in separate holders, protect Key and Seat Belt Warning Buzzer (3 Amp.); Fuel Pump and Relay (8 Amp.); and Rear Window Defogger (16 Amp.). Fuses in block protect the following circuits, from left to right:

- 1 — 8 Amp. Stop and Back-Up Lights, Windshield Wiper/Washer, Diverter Valve Relay.
- 2 — 8 Amp. Gauges, Indicator Lights, Turn Signals, Heater Blower, Key and Seat Belt Buzzer Relay, Diverter Solenoid Valve.
- 3 — 8 Amp. Left Headlight High Beam and High Beam Indicator.
- 4 — 8 Amp. Right Headlight High Beam.
- 5 — 8 Amp. Left Headlight Low Beam.
- 6 — 8 Amp. Right Headlight Low Beam.
- 7 — 8 Amp. Left Front Parking and Side Marker Lights, Parking and Tail Lights Indicator, Right Rear Tail and Side Marker Lights, Left License Plate Light.
- 8 — 8 Amp. Right Front Parking and Side Marker Lights, Left Rear Tail and Side Marker Lights, Right License Plate Light, Instrument Lights, Heater Control Illumination Light, Hazard Warning Flashers.
- 9 — 16 Amp. Horn Relay and Engine Fan Motor.
- 10 — 16 Amp. Hazard Warning System, Interior Light.

X1/9 — Fuse block is located under instrument panel to left of steering column. Fuse block contains 12 fuses. Two additional fuses, in separate holders, protect Carburetor Fan and Relay, and Interior Light (8 Amp.); and Emission Control Maintenance Reminder (3 Amp.). Fuses in block protect the following circuits, from left to right:

- 1 — 8 Amp. Gauges, Indicator Lights, Turn Signals, Stop Lights, Back-Up Lights, Heater Blower, Windshield Wiper/Washer, Seat Belt and Key Buzzer System, Emission Control System.
- 2 — 8 Amp. Headlight Motors, Belt/Starting Control Unit, and Key/Seat Belt Buzzer.
- 3 — 8 Amp. Left Headlight High Beam and High Beam Indicator.
- 4 — 8 Amp. Right Headlight High Beam.
- 5 — 8 Amp. Left Headlight Low Beam.
- 6 — 8 Amp. Right Headlight Low Beam.

FIAT (Cont.)

FUSE BLOCK (Cont.)

- 7 — 8 Amp. Left Front Parking and Side Marker Lights, Parking and Tail Lights Indicator, Right Rear Tail and Side Marker Lights, Left License Light, Control and Instrument Illumination Lights.
- 8 — 8 Amp. Right Front Parking and Side Marker Lights, Left Rear Tail and Side Marker Lights, Right License Plate Light.
- 9 — 16 Amp. Hazard Warning Flashers and Indicator, Cigarette Lighter, Rear Window Defogger.
- 10 — 16 Amp. Engine Fan, Horn and Relay.
- 11 — 3 Amp. Headlight Concealing Relay.
- 12 — 3 Amp. Headlight Raising Relay.

131 — Fuse block is located under glove compartment and contains one row of 12 fuses and another row of two fuses. In addition, one fuse in a separate holder is located on left side of engine compartment and protects the EGR Warning System (3 Amp.). The left fuse, of the pair in fuse block protects the In-board Headlights High Beam (16 Amp.) while the right fuse protects the Outboard Headlights High Beam and Indicator

(16 Amp.) The other fuses in the block protect, from left to right:

- 1 — 8 Amp. Right Outboard Headlight Low Beam.
- 2 — 8 Amp. Left Outboard Headlight Low Beam.
- 3 — 16 Amp. Horns and Relay, Engine Fan Motor.
- 4 — 16 Amp. Clock, Interior Lights, Cigarette Lighter.
- 5 — 16 Amp. Rear Window Defogger.
- 6 — 16 Amp. A/C System.
- 7 — 16 Amp. Key Buzzer, Seat Belt Buzzer System.
- 8 — 8 Amp. Stop Lights, Back-Up Lights, Turn Signals, Gauges, Indicator Lights, Heater Blower, A/C Temperature Control Unit, Emission Control System.
- 9 — 10 Amp. Windshield Wiper/Washer.
- 10 — 8 Amp. Fuel Pump.
- 11 — 10 Amp. Left Rear Tail and Side Marker Lights, Right Front Parking and Side Marker Lights.
- 12 — 8 Amp. Left Front Parking and Side Marker Lights, Right Rear Tail and Side Marker Lights, License Lights, Instrument and Control Illumination Lights.

HONDA

FUSE BLOCK

Civic & Civic CVCC — Fuse block is located on right side kick panel. Block contains eight fuses. Circuits protected are, from top to bottom:

- ① — 10 Amp. Voltage Regulator.
- ② — 10 Amp. Windshield Wiper/Washer.
- ③ — 10 Amp. Turn Signals, Back-Up Lights, Fuel Gauge.
- ④ — 15 Amp. Heater, Radio, Rear Window Defogger.
- ⑤ — 15 Amp. Hazard Warning Light, Horn, Stop Lights.
- ⑥ — 10 Amp. Cig. Lighter, Clock, Interior Lights.
- ⑦ — 15 Amp. Taillights, License Light, Instrument Lights.
- ⑧ — 15 Amp. Headlights.

Accord — Fuse block is located under the dashboard on drivers side. Block contains 10 fuses. Circuits protected are, from top to bottom:

- ① — 10 Amp. Windshield Wiper/Washer.
- ② — 10 Amp. Voltage Regulator, Fuel Pump.
- ③ — 10 Amp. Turn Signals, Back-Up Lights, Fuel Gauge.
- ④ — 15 Amp. Headlight High Beam.
- ⑤ — 15 Amp. Headlight Low Beam.
- ⑥ — 15 Amp. Taillights, Instrument Lights
- ⑦ — 10 Amp. Cig. Lighter, Clock Interior Lights.
- ⑧ — 15 Amp. Hazard Warning Lights, Horn, Stop Lights.
- ⑨ — 15 Amp. Heater.
- ⑩ — 15 Amp. Radio, Rear Window Defroster.

IN-LINE FUSES

One large 45 Amp. in-line fuse is installed in main battery cable to prevent damage to main wiring harness. Fuse is located in engine compartment near battery.

JAGUAR

FUSE BLOCK

Sedan Models — Fuse block is located behind instrument panel. Access to fuses is obtained by turning access panel retaining pin counterclockwise until it unlocks. Panel will then drop slightly and bottom edge may be lifted clear of opening. Circuits protected are as follows:

- 1 — 20 Amp. Fog Lights.
- 2 — 15 Amp. Hazard Warning System.
- 3 — 35 Amp. Map and Interior Lights, Cigarette Lighter, Clock, Electric Aerial.
- 4 — 15 Amp. Back-Up Lights, Gauges.
- 5 — 15 Amp. Turn Signals.

- 6 — 35 Amp. Stop Lights, Battery Cooling, Horn Relay, Windshield Washer.
- 7 — 15 Amp. Instrument Lights.
- 8 — 15 Amp. Left Side Marker and Tail Lights.
- 9 — 15 Amp. Right Side Marker and Tail Lights.
- 10 — 50 Amp. A/C and Heater Relay.
- 11 — 50 Amp. A/C Control System and Compressor Clutch, Windshield Wipers.
- 12 — 35 Amp. Rear Window Defogger.

IN-LINE FUSES

Head Lights — High beam is protected by a 25 Amp. in-line fuse and low beam is governed by a 10 amp in-line fuse.

Horn Relay — Circuit is protected by a 17 Amp. in-line fuse.